

WICKER DRESSMAKER'S FORM


WARNING : ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

Customer Service- If you are missing parts or have any questions about this product, please contact us at : 1-800-762-1751

PART LIST


- A. WICKER DRESS FORM [1 pc.]
- B. WOODEN STAND [1 pc.]

HARDWARE LIST

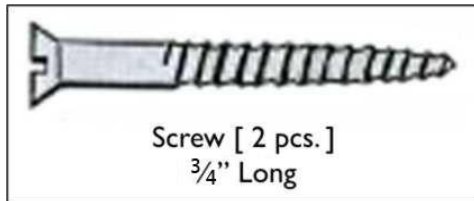

ASSEMBLY INSTRUCTION

1. Place stand upright (B) Wooden Stand in a leveled surface.
2. At the bottom of the (A) Wicker Dress Form insert the topmost portion of part (B) Wooden Stand.
3. Please put screw (3/4" Long) on two (2) sides and tighten it using a flat screw driver.

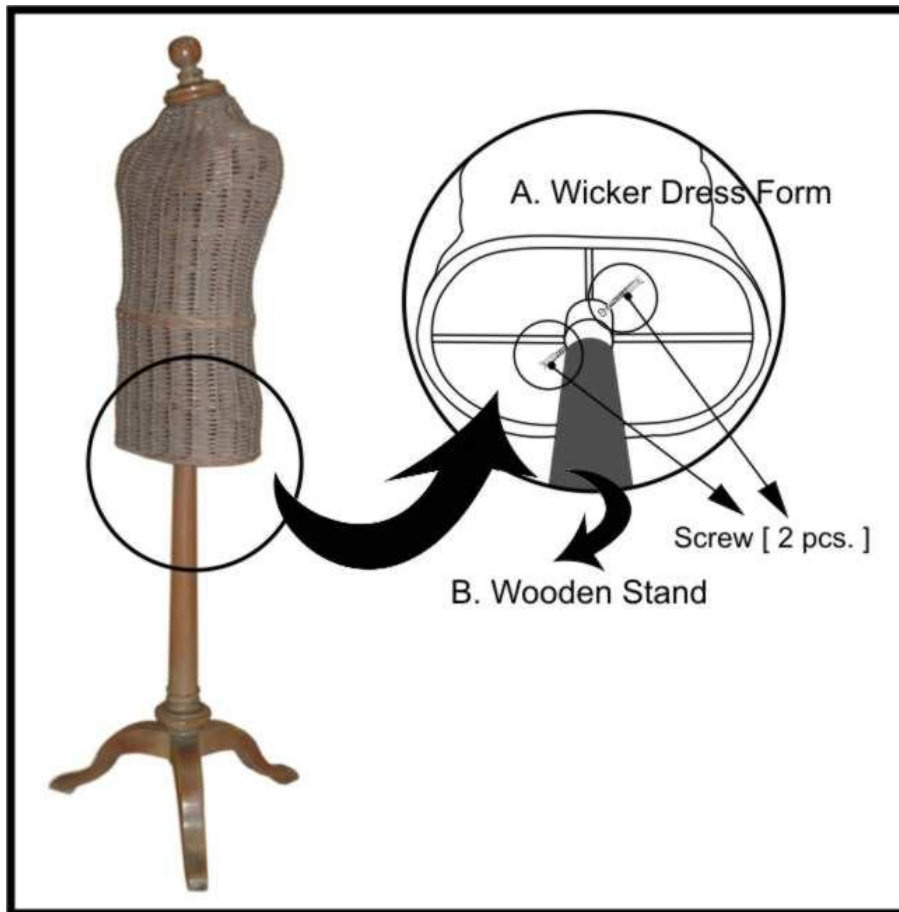

IMPORTANT SAFETY INSTRUCTIONS:

- Please read and follow all instructions carefully before using.
- Keep instructions for future use.
- A parent should ensure safe environment for the child by checking regularly

Thank you for your purchase
www.rhbabyandchild.com