


PRINTED CANVAS TENT

PARTS INCLUDED

(A) TENT COVER (B+C) ALUMINIUM POLE SETS 4 SETS - (37.5"+ 37.5")

ASSEMBLY INSTRUCTIONS

- 1. Insert part B into part C to make one complete set.
- 2. Repeat to make 4 complete sets.
- 3. Insert all 4 sets into 4 pole pockets on tent cover.
- 4. Close all Velcro tabs at the end of pole pockets to secure poles.

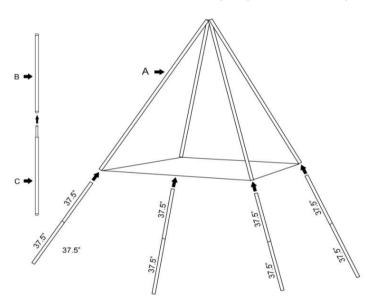

CARE INSTRUCTIONS

- 1. Machine wash cold
- 2. Do not use bleach
- 3. Do not dry clean
- 4. Medium iron
- 5. Tumble dry low

IMPORTANT SAFETY INSTRUCTIONS

- 1. Please note this tent is treated with flame retardant, but is not flame resistant.
- 2. Two adults recommended for assembly.
- 3. For children ages 3+