

Mini Vintage Chair


OPERATING INSTRUCTIONS

TO ADJUST THE HEIGHT OF THE CHAIR

1. Carefully unpack the contents of the carton & place the chair on the floor.
2. Rotate the lock screw in the counter-clockwise direction to unlock the rotary movement.
3. Rotate the seat in the counter-clockwise direction to increase the height of the seat.
4. Rotate the seat in the clockwise direction to lower the height of the seat.
5. To lock the rotary movement, align the flat part of the rotary shaft with the lock screw and tighten the lock screw in the clockwise direction.

TO ADJUST THE HEIGHT OF THE BACK

1. Loosen the butterfly nut which is located behind the wooden back.
2. Adjust the height of the wooden back.
3. Tighten the butterfly nut.

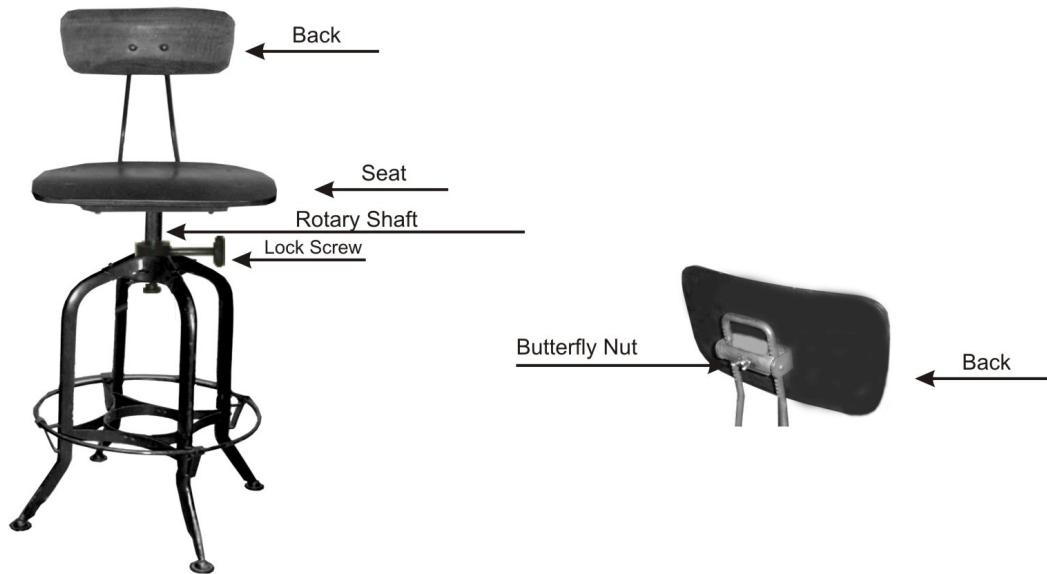

CARE INSTRUCTIONS

1. Clean periodically by wiping with a soft clean cloth slightly moistened with water. Wipe dry.
2. Do not use abrasive cleaners, chemical cleaners, or metal polisher. The metal frame has a protective lacquer finish that could be damaged by chemical or abrasive cleaning agents.