

baby&child RESTORATION HARDWARE

KIDS PAVILION

PARTS ENCLOSED:

- (A) Short Pole 22" 16pcs.
- (B) Long Pole 35 $\frac{1}{2}''$ with fabric sleeve 8pcs.
- (C) 3-way Connector 8pcs.
- (D) 4-way Connector 8pcs.
- (E) Octopus Connector
- (F) Floor Mat Fabric
- (G) Voile Curtains 8pcs.
- (H) Roof Fabric

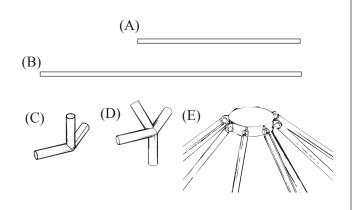

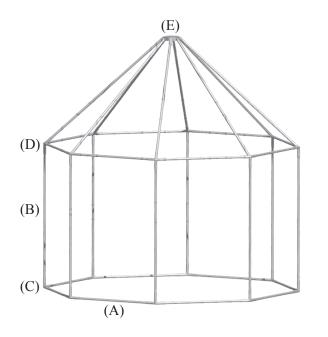

IMPORTANT SAFETY INSTRUCTIONS:

- WARNING! PLASTIC WRAPPING ENCLOSED. TO AVOID DANGER OF SUFFOCATION KEEP BAGS AWAY FROM BABIES AND CHILDREN
- WARNING! NOT SUITABLE FOR CHILDREN UNDER THE AGE OF 36
 MONTHS DUE TO SMALL PARTS, CHOKING HAZARD
- No naked flames should be used in or near the play houses keep away from fire.
- The play house is a toy. The frame is designed only to keep the cover in position and should not be subjected to additional stresses or strains.

TO ASSEMBLE:

- 1) Connect the eight 3-way connectors and eight of the short poles to form an octagon.
- 2) Lay the Floor Mat Fabric over the octagon with velcro facing down. Wrap the velcro flaps around the short poles.
- 3) Insert the eight long poles vertically into the 3-way connectors at each corner of the octagon. Poles should be in a fabric sleeve with the velcro at the top.
- 4) Attach the eight 4-way connectors to the top of the vertical poles and connect them with the eight remaining short poles to form a second octagon.
- 5) Hang the eight voile curtains from the short poles using the attached velcro straps. Wrap the longer straps at each corner around the 4-way connectors.
- 6) Connect the eight arms of the Octopus Connector to the eight 4-way connectors to form the roof.
- 7) Drape the Roof Fabric over the roof and velcro to the fabric sleeves on the eight vertical poles. Enter the tent and wrap the velcro straps around the horizontal poles.

CARE INSTRUCTIONS:

- To clean, wipe gently with a damp cloth.
- Avoid the use of harsh chemicals or abrasive cleaners as they may damage the finish.