

## Classic 4-Panel Poster Canopy Hardware


 







**WARNING: ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS.**

**Customer Service**-If you are missing parts or have any questions about this product, Please contact us at: 1-800-762-1751

- Please read all instructions before beginning assembly.
- Professional installation recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding parts or hardware.

### Parts & Hardware Enclosed

- (4) Short Fixed Rods 
- (2) Long Fixed Rods 
- (24) Plastic anchors 1.5" 
- (24) Phillip screws 1.5" 

- (4) Corner Pieces 
- (8) Ceiling Brackets 
- (1) Allen Wrench 

### You will need

Phillips Screwdriver  
Drill with a 0.25" bit

### Assembly

1. Fit Fixed Rods, Brackets and Corner Pieces together to create a square frame. Figure 1
2. Secure Corner Pieces to Fixed Rods with a screw using a wrench to tighten. Figure 2
3. With 2 or more people lift the frame to the ceiling and mark the appropriate location of each Ceiling Bracket with a pencil as shown in Figure 1 and 3. If possible, anchoring into wall studs is recommended.
4. Using a drill with a 0.25" bit, pre-drill screw holes into the ceiling where marked. Install each Ceiling Bracket into the marked location with Screws. If mounting into drywall, use the Anchors for added support.

Our Classic 4-Panel Poster Canopy is designed for use with button-top drapery panels. To hang panels, unfasten button on the tab, wrap tab top around rod and refasten the button.

Frame is designed to hold up to 30 lbs. of fabric per Fixed Rod.

