

Thank you for selecting Restoration Hardware Baby & Child lighting. Our assortment is crafted with the highest quality materials that coordinate perfectly with our Baby & Child bedding collections, making it easy to create an elegant nursery or child's bedroom. Each item's surface is sealed, which eliminates the need for polishing and ensures a lasting finish for years to come.

PARTS ENCLOSED:

- | | |
|---------------------------------|---------------------------|
| (A) Mounting Plate (1) | (H) Wire Connector (3) |
| (B) Mounting Plate Screw (2) | (I) Plug Screw (1) |
| (C) Plate screw (3) | (J) Top Cord Cover (1) |
| (D) Back Plate (1) | (K) Bottom Cord Cover (1) |
| (E) Bulb (1) | (L) 3 Prong Plug |
| (F) Socket (1) | |
| (G) Green Ground Wire Screw (1) | |

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this sconce is equipped with a 3-prong polarized plug. If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 40W-max bulb.
To avoid the risk of fire, do not exceed the recommended wattage.

NICHOLS SCONCE

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your sconce is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug sconce and allow it to cool prior to replacing light bulbs. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET. THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds.
Keep out of reach of children under 3.

CORD COVER ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic covering.
2. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
3. Cut the plug from the end of the electrical cord. From the back side of the fixture, pull the electrical cord through the exit hole at the bottom of the back plate. Then thread plug screw (I) into the hole vacated by the cord.
4. Cut the cord to the desired length (at least 6" from the back plate) for making "J BOX" connection.
5. Guide the wiring from the outlet box through center hole in the mounting plate (A).
6. Attach the mounting plate (A) to the outlet box using the mounting plate screws (B) to secure.
7. Attach the ground wire (usually green or bare wire) from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Or wrap the ground wire around the green ground wire screw (G).
8. Connect the hot wire to the hot junction box wire (usually black) with a wire connector (H) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (H) and wrap the connection with electrical tape.
9. Attach the back plate (D) to the mounting plate (A) and use the plate screw (C) to secure the back plate.
10. Insert (1) 40W-max bulb (E) into the threaded socket (F).
11. Restore power to the junction box and test fixture.
12. Installation is complete.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use polishes or cleaners on your lamp.

