


MARINER'S SCONCE – ASSEMBLY INSTRUCTIONS

PARTS ENCLOSED:

- | | |
|-------------------------|---------------------------|
| (A) Mounting Plate (1) | (c) Screw Caps (4) |
| (B) Back Plate (1) | (f) Top Cord Cover (1) |
| (C) Threaded Socket (1) | (g) Bottom Cord Cover (1) |
| (D) Wall Anchors (2) | (h) Plate Screws (4) |
| (E) Wall Screws (2) | |
| (F) A19 LED Bulb (1) | |

MARINER'S SCONCE

Plug-In Installation

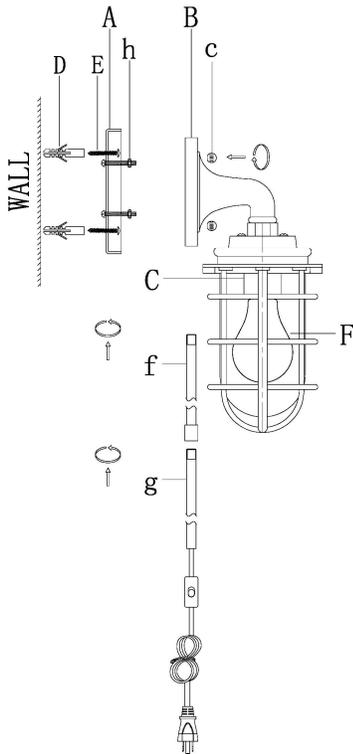

IMPORTANT SAFETY INSTRUCTIONS:

This fixture can be used as a plug-in or a fixed unit when used with the appropriate conversion kit. For your safety, this fixture is equipped with a 3-pronged polarized plug. If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 4w max Type A LED bulb (included) or (1) 40w max Type A incandescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until the fixture is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.

Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET. THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

PLUG-IN ASSEMBLY INSTRUCTIONS:

- Carefully remove all parts from the box and remove all plastic coverings.
- Drill 2 holes into the wall that align with the holes on the mounting plate of the fixture and insert wall anchors (D).
- Screw wall screws (E) into anchors and slide the mounting plate (A) onto the screws.
- Attach the back plate (B) to the mounting plate (A) and the screw caps (c) to the plate screws (h) and tighten to secure the back plate.
- Screw the top cord cover (f) into the hole located on the bottom of the back plate (B).
- Screw the bottom cord cover (g) into the top cord cover (f).
- Insert (1) LED bulb (F) into the threaded socket (C).
- Insert the 3-prong plug into the outlet. Turn on/off switch to test fixture.
- Installation is complete.

CARE INSTRUCTIONS:

To clean, use a soft, dry cloth.

Do not use polishes or cleaners on fixture.

MARINER'S SCONCE – ASSEMBLY INSTRUCTIONS

PARTS ENCLOSED:

- | | |
|-------------------------|---------------------------------|
| (A) Mounting Plate (1) | (a) Mounting Plate Screws (2) |
| (B) Back Plate (1) | (b) Green Ground Wire Screw (1) |
| (C) Threaded Socket (1) | (c) Screw Cap (1) |
| (D) A19 LED Bulb (1) | (d) Wire Connectors (2) |
| | (e) Plug Screw (1) |
| | (h) Plate Screws (4) |

MARINER'S SCONCE

Direct-Wire Installation

IMPORTANT SAFETY INSTRUCTIONS:

This fixture can be used as a plug-in or a fixed unit when used with the appropriate conversion kit. For your safety, this fixture is equipped with a 3-pronged polarized plug. If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 4w max Type A LED bulb (included) or (1) 40w max Type A incandescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until the fixture is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET. THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

DIRECT-WIRE ASSEMBLY INSTRUCTIONS:

- Carefully remove all parts from the box and remove all plastic coverings.
- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
- Cut the plug from the end of the electrical cord. From the back side of the fixture, pull the electrical cord through the exit hole at the bottom of the back plate. Then thread plug screw (e) into the hole vacated by the cord.
- Cut the cord to the desired length (at least 6" from the back plate) to make a junction box connection.
- Guide the wiring from the outlet box through the center hole in the mounting plate (A).
- Attach the mounting plate (A) to the outlet box using the mounting plate screws (a).
- Attach the ground wire (usually green or bare wire) from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Or wrap the ground wire around the green ground wire screw (b).
- Connect the hot wire to the hot junction box wire (usually black) with a wire connector (d) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (d) and wrap the connection with electrical tape.
- Attach the back plate (B) to the mounting plate (A) and the screw cap (c) to the plate screw (h) and tighten to secure the back plate.
- Insert (1) LED bulb (D) into the threaded socket (C).
- Restore power to the junction box and test fixture.
- Installation is complete.

CARE INSTRUCTIONS:

To clean, use a soft, dry cloth.

Do not use polishes or cleaners on fixture.

