

baby&child

RESTORATION HARDWARE

VINTAGE CAFETERIA PLAY TABLE

PARTS INCLUDED

- A. Bottom Flat {2}
- B. Side Panels(Legs) {2}
- C. Stretcher {1}
- D. Wooden Table Top {1}
- E. Chairs {4}

- F. CSK Allen Screws {4}



- G. Hex Nuts & Bolts {8}



- H. Studs {4}



- I. Allen Key {1}



- J. Wrench {2}



IMPORTANT SAFETY INSTRUCTIONS

1. Do not place the Side panels on an unstable or inclined surface.
2. Do not allow children to play around/with the dismantled parts.

WARNING

1. Recommended for children up to 10 years old.
2. Maximum Weight Capacity: 105lbs. per seat

VINTAGE CAFETERIA PLAY TABLE

Step 1




Step 2

TO ASSEMBLE

- Carefully unpack the contents from the carton
- Place the Side Panel (B) upside down on the floor as shown in Step 1.



Step 3

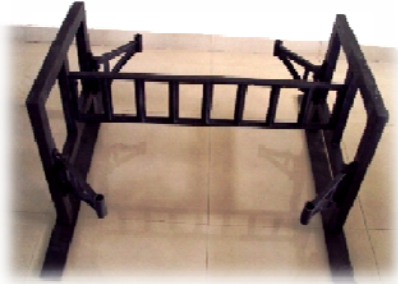

Step 4



Step 5



Place the Bottom Flat (A) on top of the upside down side panel(B). Align the holes and fix them with the CSK Allen screws as shown in Step 2.

Once both the side panels are fixed with their Bottom Flats(Step 2), turn them right side up and join them in the middle with the help of stretcher frame, using provided bolts(G) and wrench(J), as shown in Step 3.

On the frame(Step 3), align the holes under the Wooden Top with the holes on the the frame at all 4 points and fix it with the Nuts and Bolts(G) provided as shown in Step 4.

Place the rods of the 4 chairs in the bushes of the 4 chair attachments(as shown in Step 4) and fix them with the studs provided. These chairs now become fixed and part of the table as shown in Step 5.

Assembly is complete.

CARE INSTRUCTIONS

1. Clean periodically by wiping with a soft damp cloth, wipe dry.
2. Do not use abrasive cleaners, chemical cleaners or metal polishes. This may spoil the vintage look of the wood and the metal polish, which may get

