


PRINTED CANVAS TENT

PARTS INCLUDED

- (A) TENT COVER
- (B+C) ALUMINIUM POLE SETS
- 4 SETS - (37.5"+ 37.5")

ASSEMBLY INSTRUCTIONS

1. Insert part B into part C to make one complete set.
2. Repeat to make 4 complete sets.
3. Insert all 4 sets into 4 pole pockets on tent cover.
4. Close all Velcro tabs at the end of pole pockets to secure poles.

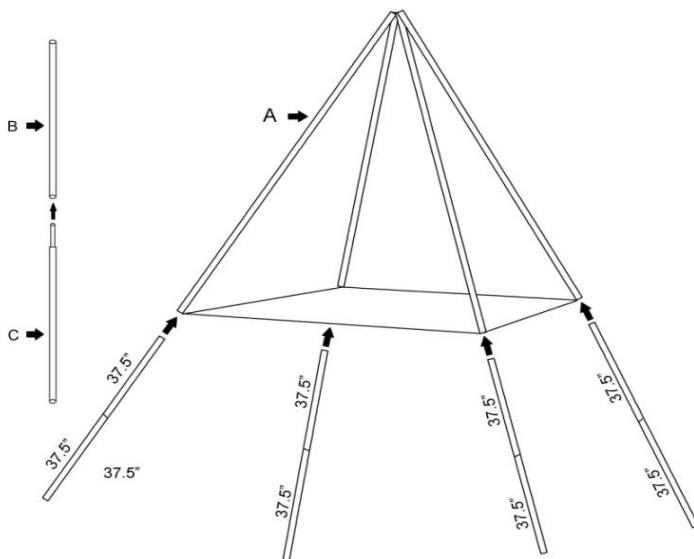

CARE INSTRUCTIONS

1. Machine wash cold
2. Do not use bleach
3. Do not dry clean
4. Medium iron
5. Tumble dry low

IMPORTANT SAFETY INSTRUCTIONS

1. Please note this tent is treated with flame retardant, but is not flame resistant.
2. Two adults recommended for assembly.
3. For children ages 3+