


# baby&child

RESTORATION HARDWARE

## DISTRESSED CANVAS PITCH TENT


### PARTS INCLUDED

- (A) TENT COVER
- (B) SIDE POLE (Includes part 1 and 2) - 6 SETS
- (C) BASE POLE (Includes part 1 and 2) - 1 SET
- (D) TOP POLE - 1

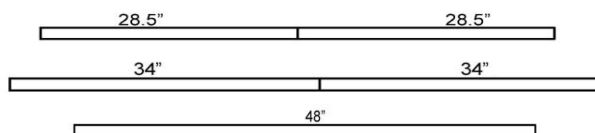

### ASSEMBLY INSTRUCTIONS

1. Insert pole part '1' into '2' to make complete pole as shown in the diagram. Repeat this procedure 7 times to make all side and base pole sets.
2. Insert all side poles (B) in their pole pockets as shown.
3. Insert base pole (C) in base pole pocket.
4. Insert top pole (D) in top pole pocket.
5. Close all Velcro tabs at the end of pole pockets to secure poles.

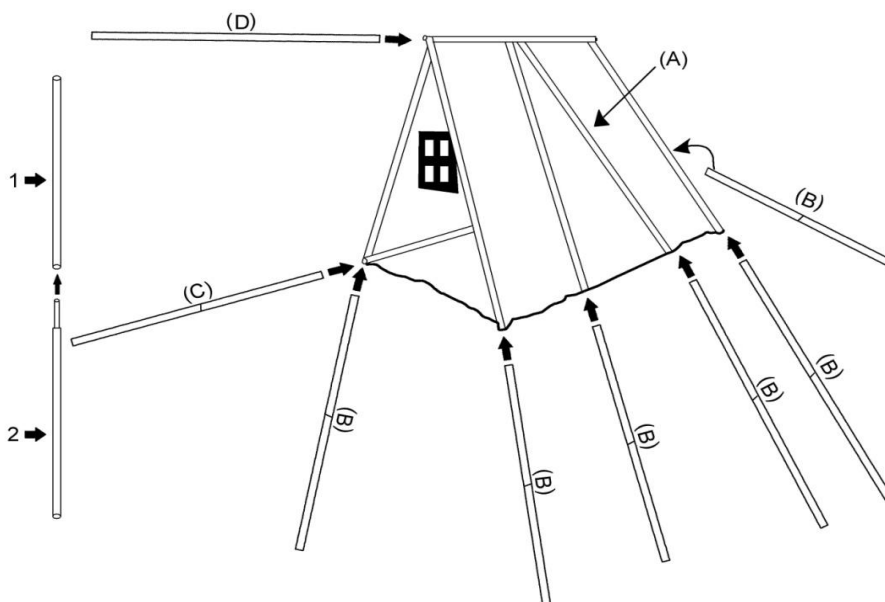

### CARE INSTRUCTIONS

1. Machine wash cold
2. Gentle cycle
3. Do not use bleach
4. Tumble dry low
5. Warm iron if necessary

### IMPORTANT SAFETY INSTRUCTIONS

1. Please note this tent is treated with flame retardant, but is not flame resistant.
2. Two adults recommended for assembly.
3. For children ages 3+