



## ELLIS SWING-ARM SCONCE WITH SHADE - ASSEMBLY INSTRUCTIONS

### PARTS ENCLOSED:

- |                    |                            |
|--------------------|----------------------------|
| (A) Socket ring    | (a) Wire connector (2)     |
| (B) Tube           | (b) Mounting screw (2)     |
| (C) Lamp shade     | (c) Green ground screw (1) |
| (D) Socket         | (d) Backplate screw (2)    |
| (E) Backplate      |                            |
| (F) Cord cover     |                            |
| (G) Mounting plate |                            |
| (H) Lightbulb      |                            |

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this fixture is equipped with a polarized plug (one prong is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

**DIRECT WIRE FIXTURES: WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

This fixture has been rated for up to (1) 40-Watt maximum Type B standard incandescent lightbulb (not included) or one (1) 13-Watt maximum compact fluorescent lightbulb (not included) or one (1) 4-Watt maximum LED lightbulb (included).

To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until the fixture is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug the fixture, and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

### **WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

### PLUG-IN ASSEMBLY:

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Attach the mounting plate (G) to the wall using the mounting plate screws (b).
3. Attach the backplate (E) to the mounting plate (G) using the enclosed backplate screw (d).
4. Insert the bulb (H) into threaded socket (D).
5. Screw the cord cover (F) into the hole located on the bottom of the backplate (E).
6. Attach the tube (B) to the bottom of the fixture.
7. Plug into proper electrical outlet and test fixture.

### DIRECT WIRE ASSEMBLY:

1. Carefully remove all parts from the box.
2. Shut off power to the junction box where the sconce will be installed.
3. Guide the wiring from the outlet box through center hole in the mounting plate (G).
4. Attach the ground wire (usually green or bare wire) from the fixture to the ground junction box wire from the outlet box (usually green or bare wire) with a wire connector (a). Wrap the connection with electrical tape or screw the green ground screw (c) into the mounting plate (G) and wrap the fixture's bare ground wire around the green ground screw (c).
5. Connect the hot wire to the hot junction box wire (usually black) with a wire connector (a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a wire connector (a) and wrap the connection with electrical tape.
6. Attach the mounting plate (G) to the outlet box using the mounting plate screws (b).
7. Attach the backplate (E) to the mounting plate (G) using the enclosed backplate screw (d).
8. Insert the bulb (H) into threaded socket (D). Turn clockwise to secure.
9. Restore power to the junction box and test fixture.
10. Assembly is complete.

### CARE INSTRUCTIONS:

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.

