

# baby&child


## RESTORATION HARDWARE

Thank you for selecting Restoration Hardware Baby & Child lighting. Our assortment is crafted with the highest quality materials that coordinate perfectly with our Baby & Child bedding collections, making it easy to create an elegant nursery or child's bedroom. The item's surface is sealed, which eliminates the need for polishing and ensures a lasting finish for years to come.

### PART ENCLOSED:

- (A) Mounting plate (1) (a) Mounting plate screw (2)  
(B) Back plate (1) (b) Green ground wire screw (1)  
(C) Shade (1) (c) Back plate screw (2)  
(D) 3 Prong plug (1) (d) Wire connectors (2)  
(e) Plug screw (1)  
(f) Cord cover (1)

## Academy Task Swing-Arm Sconce

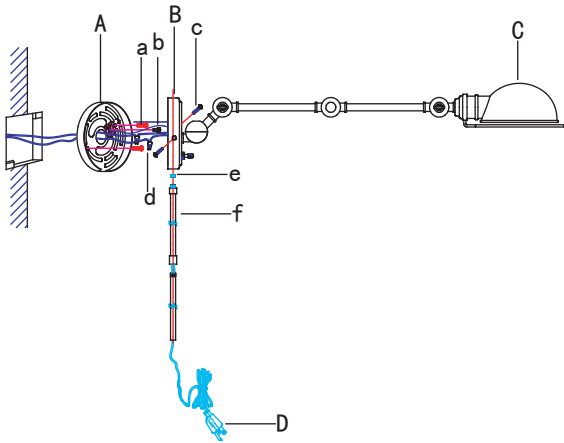

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one prong is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

\*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) E26 TYPE B 40 watt standard bulb. To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.

Keep flammable materials away from lit bulb.

THIS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

### CORD COVER ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Attach the mounting plate (A) to the wall using the mounting plate screws (a).
3. Attach the back plate (B) to the mounting plate (A) using the enclosed back plate screw (c).
4. Screw the cord cover (f) into the hole located on the bottom of the back plate (B).
5. Screw the bulb (not included) into the threaded socket.
6. Insert 3 prong plug (D) into outlet.

### CORD COVER ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic covering.
2. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
3. Cut the plug from the end of the electrical cord. From the back side of the fixture, pull the electrical cord through the exit hole at the bottom of the back plate. Then thread plug screw (e) into the hole vacated by the cord.
4. Cut the cord to the desired length (at least 6" from the back plate) from making "J BOX" connection.
5. Guide the wire from the outlet box through center hole in the mounting plate (A).
6. Attach the mounting plate (A) to the outlet box using the mounting plate screws (a).
7. Attach the ground wire (Usually green or bare wire) from the fixture to the ground junction box wire from the outlet box (Usually green or bare wire) with a wire connector (d) and wrap the connection with electrical tape or screw the ground wire screw (b) into the mounting plate (A) and wrap the fixture's bare ground wire around the green ground wire screw (b).
8. Connect the hot wire to the junction box wire (usually black) with a wire connector (d) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (d) and wrap the connection with electrical tape.
9. Attach the back plate (B) to the mounting plate (A) using the enclosed back plate screw (c).
10. Screw the bulb (not included) into the threaded socket.
11. Restore power to the junction box and test lamp fixture.

### CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use polishes or cleaners on your lamp.