

WILKES TRUNK WIDE DRESSER TOPPER

WARNING: FALL HAZARD - To prevent death or serious injury from falls, always keep child within arm's reach, NEVER LEAVE CHILD UNATTENDED and always use restraining system.

This changing table is intended for use with children weighing up to 30 pounds. Wilkes Trunk Wide Dresser Topper will be used with Wilkes Trunk Wide Dresser (sold separately) with size 56" L x 18" W x 33-1/4" H. Cushion pad size is 32"L x 16"W x 4"H.

Do not use Wilkes Trunk Wide Dresser or Topper if damaged or broken.

Customer Service- If you are missing parts or have any question about this product, please contact us at: 1-800-762-1751.

IMPORTANT SAFETY INSTRUCTIONS:

Please read all instructions before use of the dresser or topper.
For your safety, assembly by two or more adults is recommended.
Keep instructions for future use.

PART LIST

- A. [1] WILKES TRUNK WIDE DRESSER TOPPER
- B. [1] WILKES TRUNK WIDE DRESSER
- C. [2] METAL BRACKET
- D. [8] PHILLIPS WOOD SCREW

TOPPER ASSEMBLY INSTRUCTIONS

Place the dresser topper [A] on top of the dresser [B], and check the distance on both sides to make sure the dresser topper is centered correctly. Secure the metal brackets [C] to the back of the dresser [B] and to the back of the dresser topper [A] with screws [D].

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

