


BLACK AND WHITE PRINTED CANVAS TEEPEE TENT INSTRUCTIONS

**PARTS INCLUDED**

- (A) TENT COVER
- (B) TOP BAMBOO POLE 36.2" × 4PCS
- (C) BASE BAMBOO POLE 36.2" × 4PCS
- (D) PLASTIC CONNECTOR × 4PCS
- (E) STRING 1PCS

**ASSEMBLY INSTRUCTIONS**

1. Insert the Top **(B)** and Base Poles **(C)** into the Plastic Connectors **(D)**.
2. Insert the assembled poles into the channels on the corners of the Teepee Cover **(A)**, making sure that the holes in the top of the poles are at the top of the teepee.
3. Lace the String **(E)** alternately through the holes in the Top Poles **(B)** and the grommets in the teepee cover **(A)** top. Tie the String **(E)** together to secure poles.
4. Spread the assembled teepee bottom corners out to the fullest extent. Your teepee tent assembly is now complete.

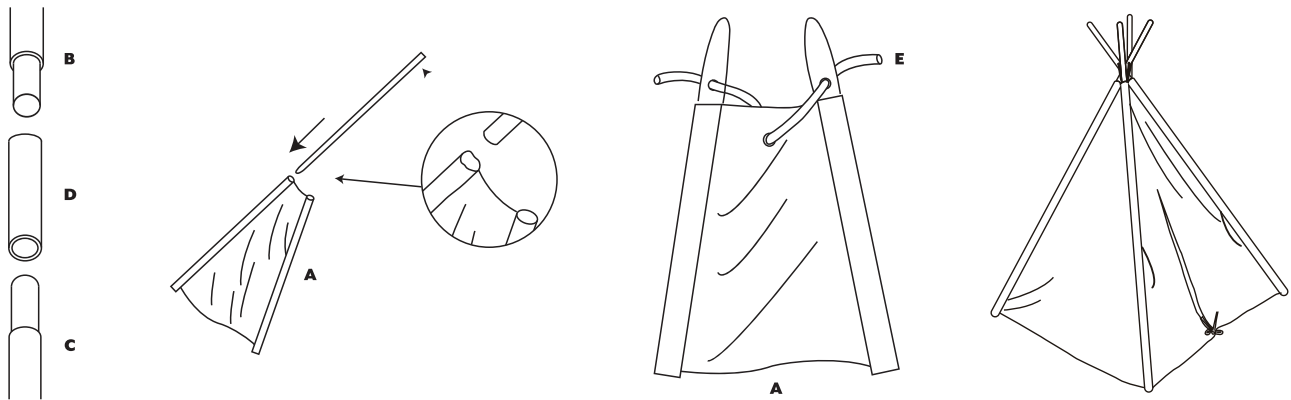

**CARE INSTRUCTIONS**

1. Spot clean
2. Do not use bleach

**IMPORTANT SAFETY INSTRUCTIONS**

1. Please note this tent is treated with flame retardant, but is not flame resistant.
2. Two adults recommended for assembly.
3. For children ages 3+