

RH BABY & CHILD

ILLUMINATED CHALKBOARD OVAL SPEECH BUBBLE

PARTS ENCLOSED:

- (A) Wall anchor (2 pcs.)
- (B) Wall screw (2 pcs.)
- (C) 4W Type G Bulb (10 pcs.)

IMPORTANT SAFETY INSTRUCTIONS:

Professional installation is strongly recommended. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.

For safety purposes, this lamp is equipped with a polarized plug (one prong is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way. This fixture has been rated for up to 7W max type G bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

1. Carefully remove all parts from the box and remove plastic covering.
2. Drill 2 holes in the wall that align with the holes on the back cover of the lamp, and insert wall anchors (A).
3. Screw wall screws (B) into anchors and slide lamp body onto screws.
4. Insert the 4W Type G Bulbs (C) into the sockets.
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

CARE INSTRUCTIONS:

Wipe clean with soft cloth.
Do not use polishes or cleaners, as they will damage the finish.

