

POM-POM CANVAS TEEPEE

PARTS INCLUDED:

- A. Tent cover - 1Pc.
- B. Top wood pole - 40.5 (4 pcs.)
- C. Base wood pole - 40.5 (4pcs.)
- D. Plastic connectors - (4pcs.)
- E. String - (1pcs.)

IMPORTANT SAFETY INSTRUCTIONS:


- 1. Two adults recommended for assembly.
- 2. For children ages 3+.
- 3. Not intended for outdoor use.
- 4. This play tent does not contain chemical fire-retardants; please keep it away from flames.
- 5. Do not remove the pom pom.

WARNING:

CHOKING HAZARD - Small parts. Not for children under 3 years.

ASSEMBLY INSTRUCTIONS:

- 1. Insert the top (B) and base poles (C) into the plastic connectors (D).
- 2. Insert the assembled poles into the channels on the corners of the teepee cover (A), making sure that the holes in the top of the poles are at the top of the teepee.
- 3. Lace the string (E) alternately through the holes in the top poles (B) and the grommets at the top of the teepee cover (A). Tie the string (E) together to secure poles.
- 4. Stand the poles upright and position the bottom of the poles as far away from one another as possible.

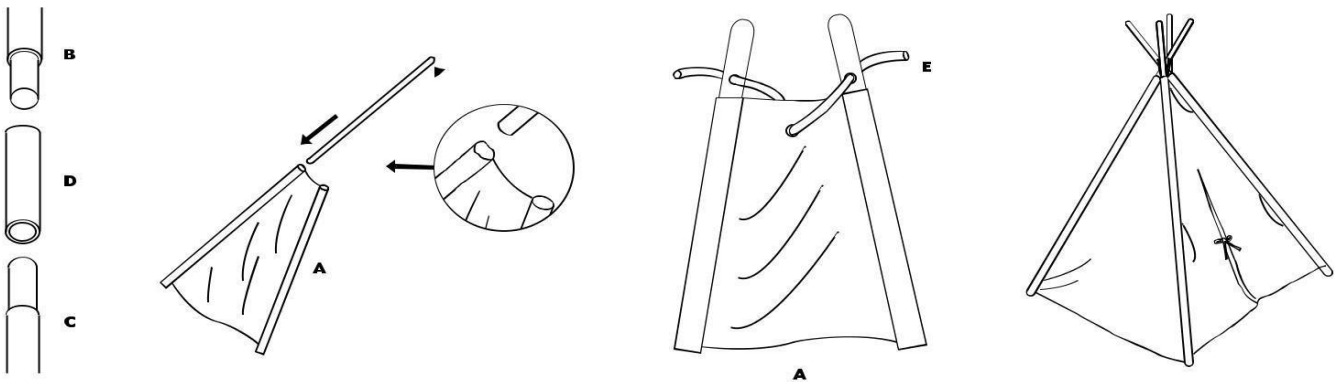

CARE INSTRUCTIONS:

- 1. Machine wash cold
- 2. Gentle cycle
- 3. Do not use bleach
- 4. Tumble dry low
- 5. Warm iron if necessary