

baby&child

RESTORATION HARDWARE

EMBROIDERED ANIMAL CANVAS TEEPEE

PARTS INCLUDED:


- A. Tent cover (1pc.)
- B. Top wood pole - 38" (4 pcs.)
- C. Base wood pole - 38" (4 pcs.)
- D. Aluminum connectors (4 pcs.)
- E. String (1 pc.)

IMPORTANT SAFETY INSTRUCTIONS:

1. Two adults recommended for assembly.
2. For children ages 3+.
3. Not intended for outdoor use.

ASSEMBLY INSTRUCTIONS:

1. Insert the top (B) and base poles (C) into the aluminum connectors (D).
2. Insert the assembled poles into the channels on the corners of the teepee cover (A), making sure that the holes in the top of the poles are at the top of the teepee.
3. Lace the string (E) alternately through the holes in the top poles (B) and the grommets at the top of the teepee cover (A). Tie the string (E) together to secure poles.
4. Stand the poles upright and position the bottom of the poles as far away from one another as possible.

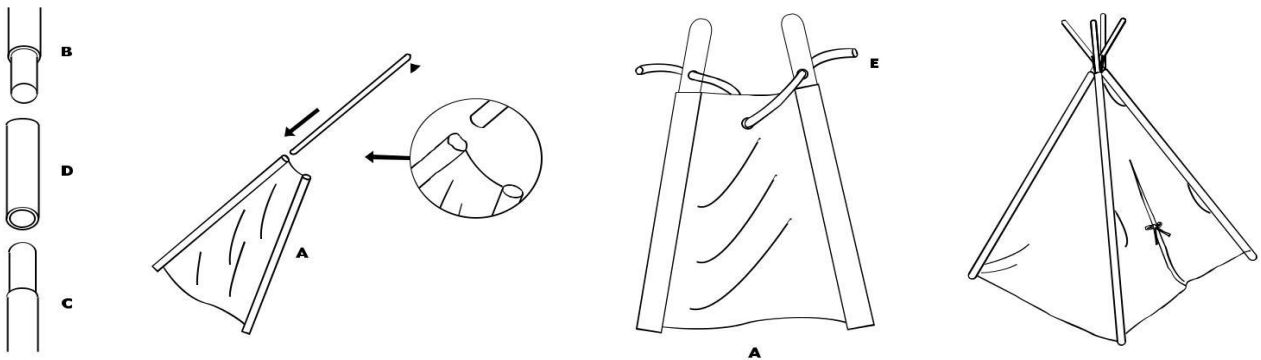

CARE INSTRUCTIONS:

1. Machine wash cold
2. Gentle cycle
3. Do not use bleach
4. Tumble dry low
5. Warm iron if necessary