

RH BABY & CHILD

MINIMALIST BOOK DISPLAY SHELF

 
 

PARTS INCLUDED:

- A SHELF (1 pc.)
- B MOUNTING BRACKET (1 pc.)

Phillips-head screwdriver (not included)


IMPORTANT SAFETY INSTRUCTIONS

1. These instructions are provided for your safety. It is important that they are read completely and carefully before installation of the fixture.
2. 20 lb. maximum load.
3. Never sit on, stand on or apply heavy pressure to the shelf.
4. Professional installation recommended.


NO.	ITEM	DESCRIPTION	QTY.
1		Screws (C)	8 pcs.
2		Wall Anchors (D)	8 pcs.
3		Shelf Screws (E)	3 pcs.

ASSEMBLY INSTRUCTIONS


1. Carefully unpack the contents of the carton.
2. Mounting bracket is fixed inside the shelf. Untighten the screws and take the mounting bracket out. (Fig. 1)
3. To mount the shelf a minimum of 2 wall anchors are required. Mark the position of holes in the wall using the predrilled holes in the mounting bracket. Ensure that the bracket is level for accurate hanging.
4. Drill holes at the marked locations and insert wall anchors (D). Place wall bracket (B) over wall anchors. Screw wall screws (C) through wall bracket (B) and into wall anchors (D). (Fig. 2)
5. Slide the shelf into the mounting bracket until the mounting bracket is completely flush inside the shelf and tighten the shelf screws (E). (Fig. 3)
6. Assembly is complete.

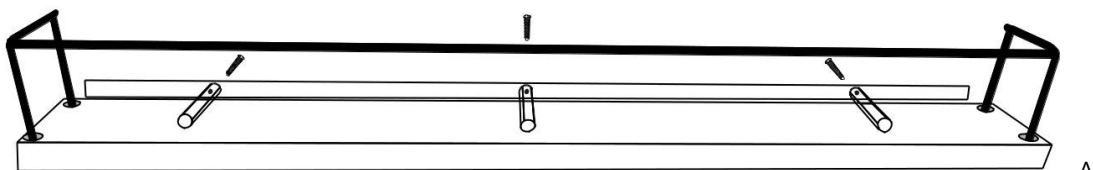

(Fig. 1)

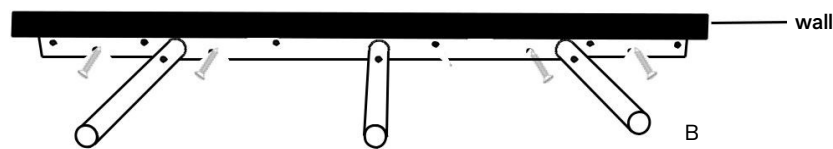

(Fig. 2)

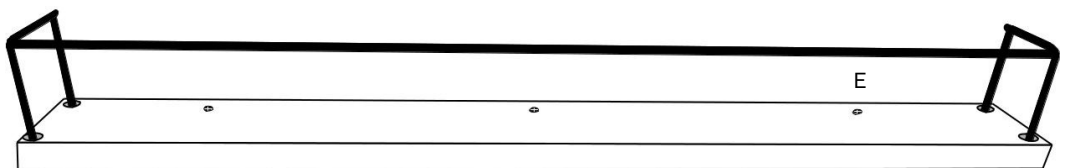

(Fig. 3)

CARE INSTRUCTIONS

1. Clean periodically by wiping the product with a soft cloth. Furniture wax can be used for cleaning.
2. Do not use abrasive cleaners, chemical cleaners or metal polishes.