baby&child

RESTORATION HARDWARE

REINETTE IRON BED

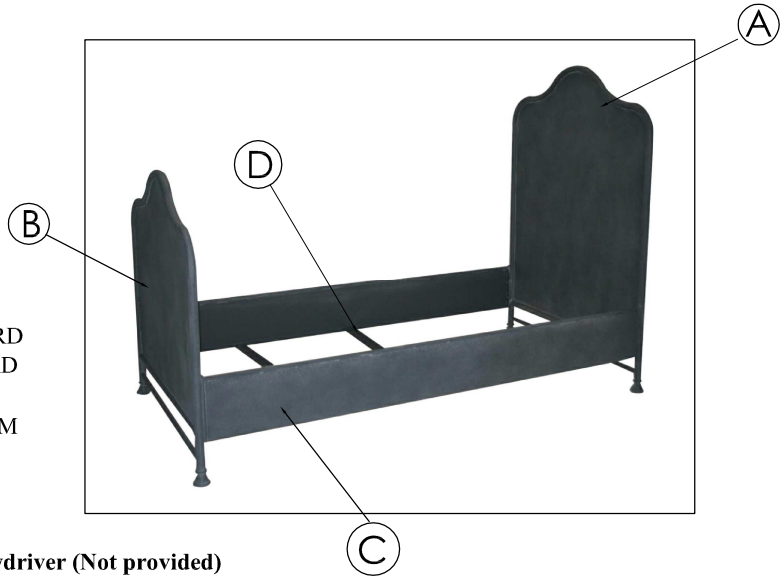

PART LIST :

A[1] HEADBOARD
B[1] FOOTBOARD
C[2] SIDERAIL
D[2] CROSSBEAM

Tools needed

-Philip head screwdriver (Not provided)

NO.	Description		Q'TY
1.	Allen bolt		8Pcs
2.	Flat washer		8Pcs
3.	Lock washer		8Pcs
4.	Allen key		1Pc
5.	Bolt		4Pcs
6.	Nut		4Pcs
7.	Wrench		1Pc

ASSEMBLY INSTRUCTION

Step 1:

1.Position the side rail(C) beside the headboard (A) and align the holes at the top with given holes on the headboard as shown in the sketch.

2. Attach side rail(C) to the headboard(A) by using the lock washer(3) flat washer(2) and Allen bolt (1),tighten the Allen bolt(1) using Allen key.

3. Repeat the procedure with the other side of rail and the other siderail.

Step 2:

1.Position the crossbeam(D) over the siderail(C) and align the holes with given holes on the siderail as shown in the sketch.

2.Insert the bolts (5) and tighten the nuts(6) with the wrench(7).

3.Repeat the procedure at each end of the crossbeam.

STEP 1:

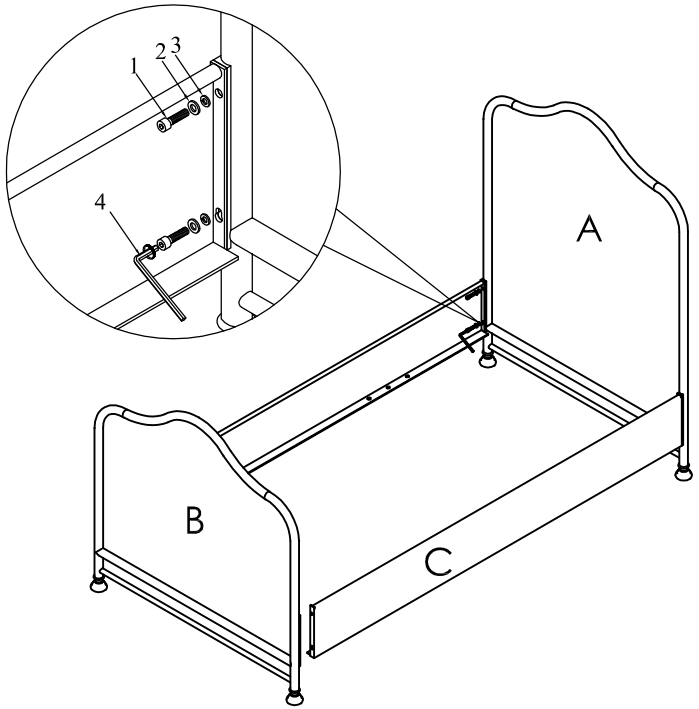

STEP 2:

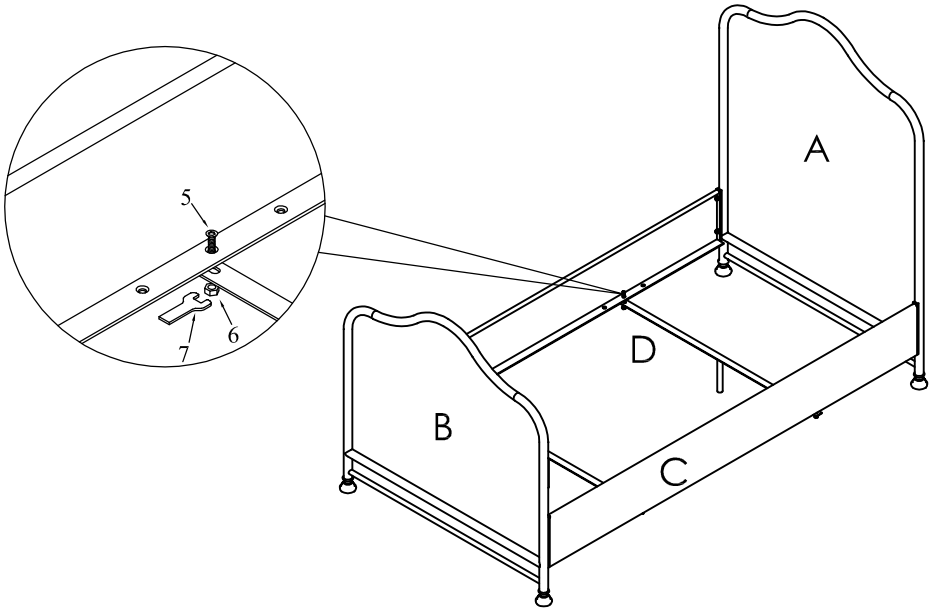

Thank you for your purchase

www.rhbaby&child.com