

19TH C SPINDLE FULL BED



WARNING: ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

Customer Service- If you are missing parts or have any questions about this product, please contact us at : 1-800-762-1751

PART LIST

- A [1] HEADBOARD
- B [1] FOOTBOARD
- C [2] SIDE RAILS
- D [1] SLAT ROLL

TOOLS NEEDED

- Rubber/wood Mallet or hammer
- Book or magazine
- Phillips head screwdriver

HARDWARE LIST

NO.	Description		Q'TY
1		Wood Screw 8x30mm	4 Pcs

ASSEMBLY INSTRUCTIONS

Note: Bed can be assembled by one person rather easily, but if two people are available it is easier and the operation will require less preparation. The instructions are written assuming one person is assembling the bed.



- Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bed fast hardware should be facing the inside, toward the mattress.

The Side Rails (C) are not handed parts so either rail will work on the right or left side. While holding the Headboard (A) up, place the hooks in the rail into the slots in the post of the headboard. If necessary, using a thick magazine or book to protect the side rails, hammer the hook-rail with a mallet or hammer until tight.

Repeat the procedure with the other rail. The Headboard Panel (A) will now stand on it's own with the rails supporting it.

Insert the side rail hooks into the slots in the Footboard (B) and use the method described above (as shown in Diagram 1).

- Lay the Slat Roll (D) in between the Side Rails (B) and use Wood Screws (1) to fasten 2 end slats to the Side Rails (C) with a screwdriver (as shown in Diagram 2).

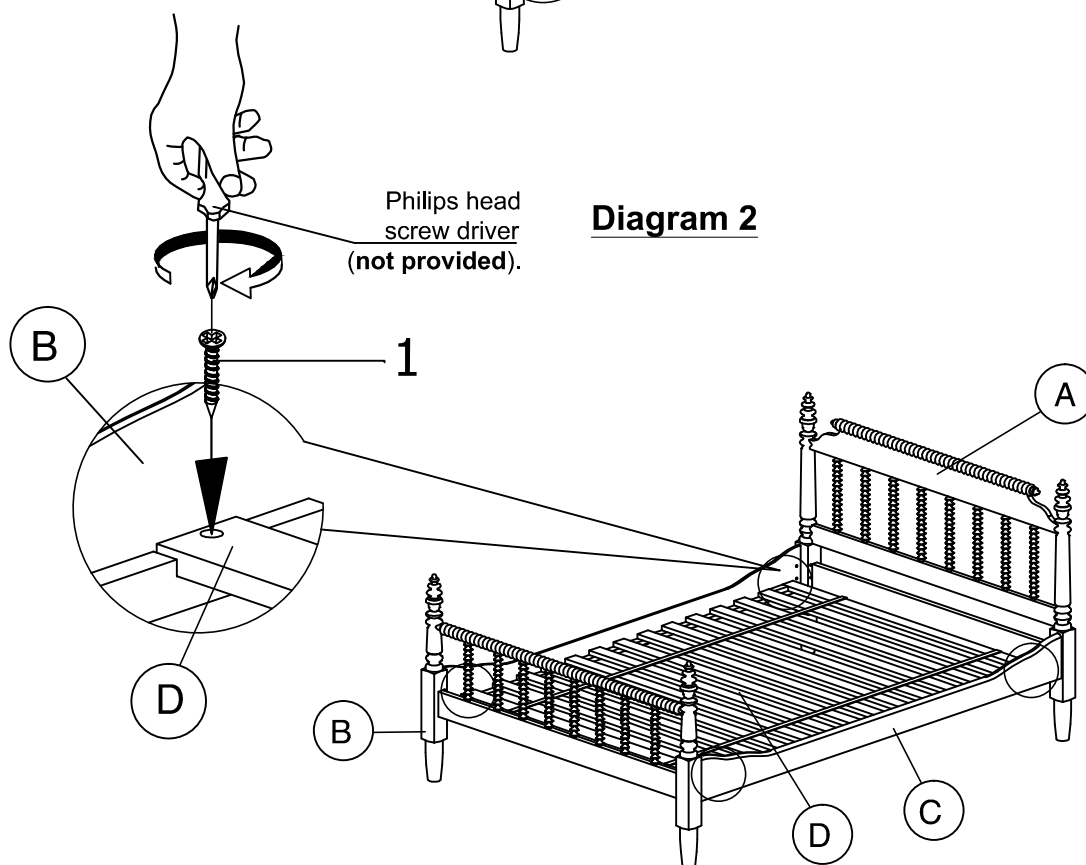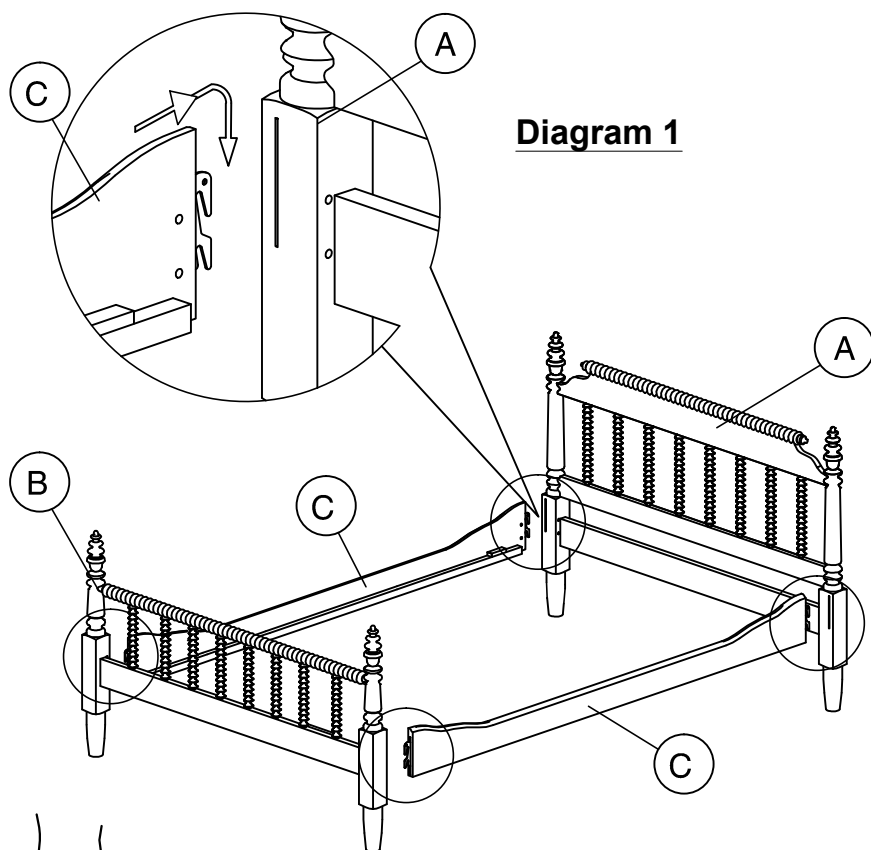

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.