


GRAND CANVAS WALL TAPESTRY

1. Un-pack the contents of the box. Here is what is included:
 - 1- Folding dowel assembly with velcro and predrilled holes (*Shown Fig. A*)
 - 1- Tapestry with velcro
 - 6- Screws (*Shown Fig. B*)
 - 6- Spiral anchors (*Shown Fig. B*)

Fig. A: Folding dowel with velcro facing up and hinge facing down



Fig. B

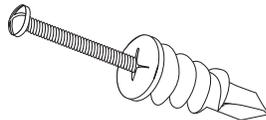

Tools you will need: Awl, Level, Drill with phillips tip

2. Unfold the tapestry and measure the width and height. Use the measurements to determine where the dowel should be positioned on the wall and mark a level line along where the dowel will be installed.


3. Use an assistant to support the dowel in the correct location (with the velcro facing up and the hinge facing down) push an awl through the pre-drilled holes to mark the wall. This will provide the correct location for installing the spiral drywall anchors.

4. Place the dowel aside and use a drill with a phillips tip to screw the spiral anchors into the wall. Be careful to align each anchor directly over the marked locations.

Note: If one of the awl marks align over a stud use only a screw. Do not use a spiral anchor at that location.

5. Use an assistant to re-align the dowel on the wall. Using the drill, screw through the pre-drilled holes into the spiral drywall anchors.

6. Unfold the tapestry and starting at one end, apply the tapestry to the velcro on top of the dowel. Have your assistant keep their end of the tapestry away from the velcro while keeping the tapestry taut. Work your way across and rub the velcro into position as you go. (*Shown in Fig. C*)

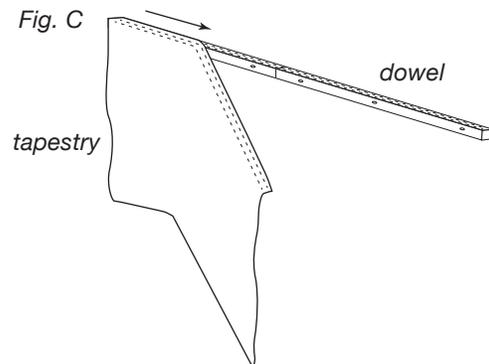

This packet only includes the proper hardware for installation on a drywall wall. For other applications please use the appropriate hardware.