## COLE FRAMED BED QUEEN - ASSEMBLY INSTRUCTIONS Model No: 355 - 125

### PARTS INCLUDED:

A [2] SIDE FRAME

B [1] SLAT ROLL

C [2] SIDE RAIL

D [1] CENTER STRETCHER

E [2] SIDE STRETCHER

F [5] SUPPORT LEG

#### **TOOLS NEEDED:**

Phillips-head screwdriver (not included)



### NOTE:


- Bed must be assembled by at least two people.
- Please read instructions carefully before assembling bed.
- Use the parts and fittings list to identify each component.
- Keep all packing materials until assembly is complete to avoid loss of smaller parts.
- Do not completely tighten all bolts until all steps are finished.

### **ASSEMBLY INSTRUCTIONS:**

#### STEP 1:


Insert the Threaded Rods (5) into the posts of the Side Frames (A).

NO.	ITEM	DESCRIPTION	QTY.
1		Long Bolt 5/16" x 2-1/4"	2 pcs.
2		Spring Washer 5/16"	2 pcs.
3		Flat Washer 5/16"	2 pcs.
4		Allen Key 4mm	1 pc.
5		Threaded Rod 5/16" x2-3/4"	4 pcs.
6	<b>@mmm</b> >	Screws 8 x 30mm	4 pcs.
7		Hex Nut 5/16" x 12mm	4 pcs.
8		Curved Slotted Washer 35 x 16 x 12 x 3 mm	4 pcs.
9		Multi Wrench 12mm	1 pc.
10	<b>*************</b>	Extra Long Screws 7 x 35mm	6 pcs.
11		Extra Metal Bracket	2 pcs.

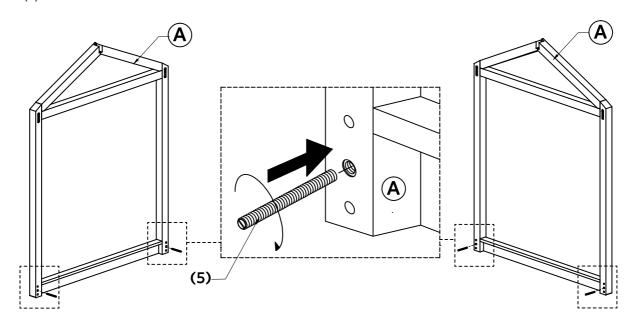


# COLE FRAMED BED QUEEN – ASSEMBLY INSTRUCTIONS Model No: 355 - 125

#### STEP 2:

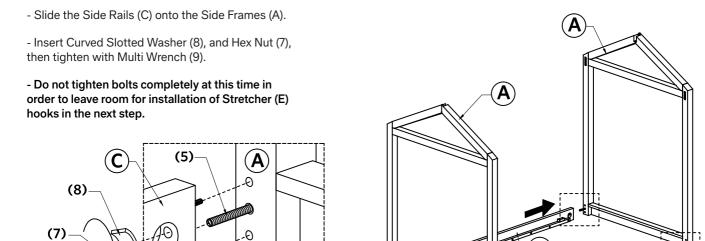

### STEP 3:

(9)

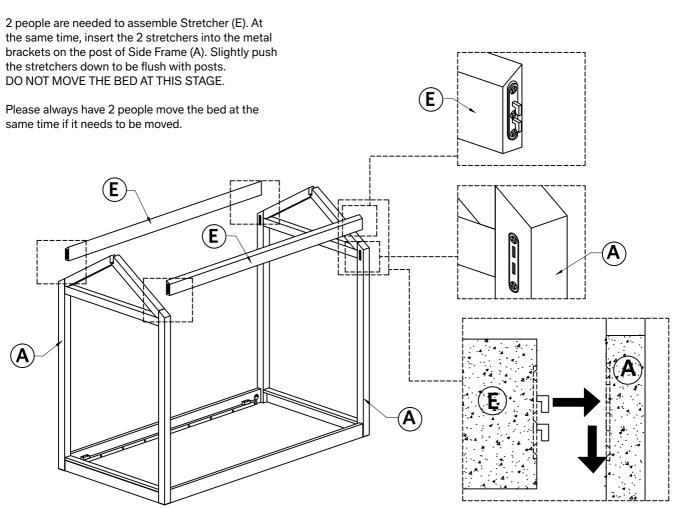


## COLE FRAMED BED QUEEN - ASSEMBLY INSTRUCTIONS Model No: 355 - 125

### INSTRUCTIONS TO REPLACE METAL BRACKETS IF NEEDED:

If the metal bracket malfunctions or becomes damaged, please replace it with an extra metal bracket.

Unscrew the wooden screws with a Phillips-head screwdriver, then remove the damaged Metal Bracket.

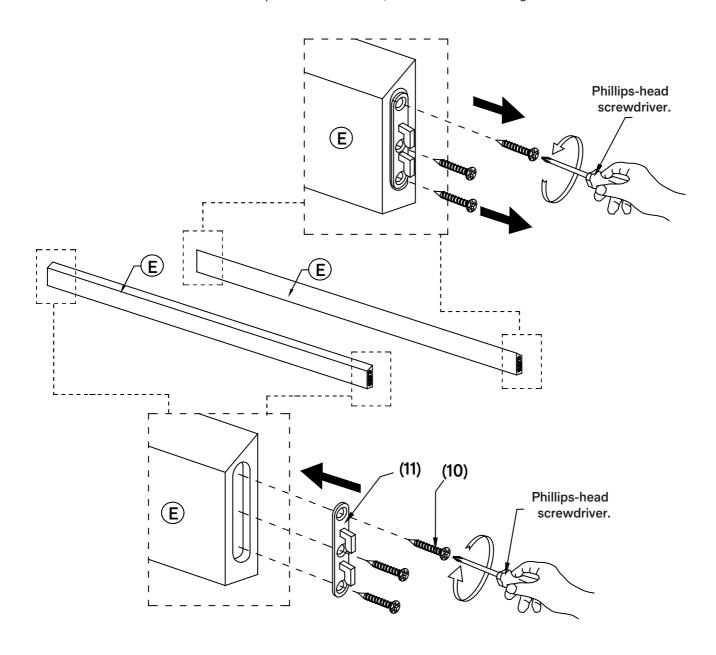

Install the new Metal Bracket (11) to the top of Side Stretcher (E) using new Wood Screws (10). Tighten the screws with a Phillips-head screwdriver.

## COLE FRAMED BED QUEEN – ASSEMBLY INSTRUCTIONS Model No: 355 - 125

### STEP 4:

Insert the Center Stretcher (D) onto the top of Side Frames


(A) by using Long Bolts (1), Spring Washers (2), Flat

Washers (3), and use Allen Key (4) to tighten.

Tighten all side rail bolts.

### STEP 5:


Tighten the Support Legs (F) to the bottom of Slat Roll (B).

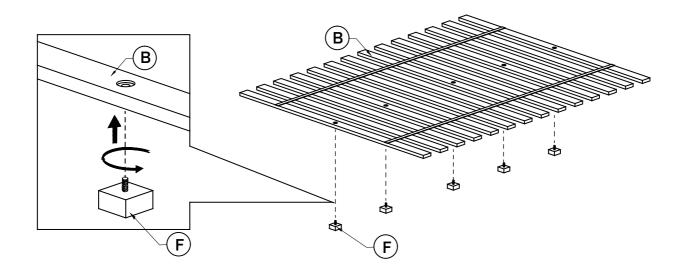

## COLE FRAMED BED QUEEN – ASSEMBLY INSTRUCTIONS Model No: 355 - 125

### STEP 6:

Lay the Slat Roll (B) between the Side Rails (C) and attach using Screws (6) with Phillips-head screwdriver (not provided).

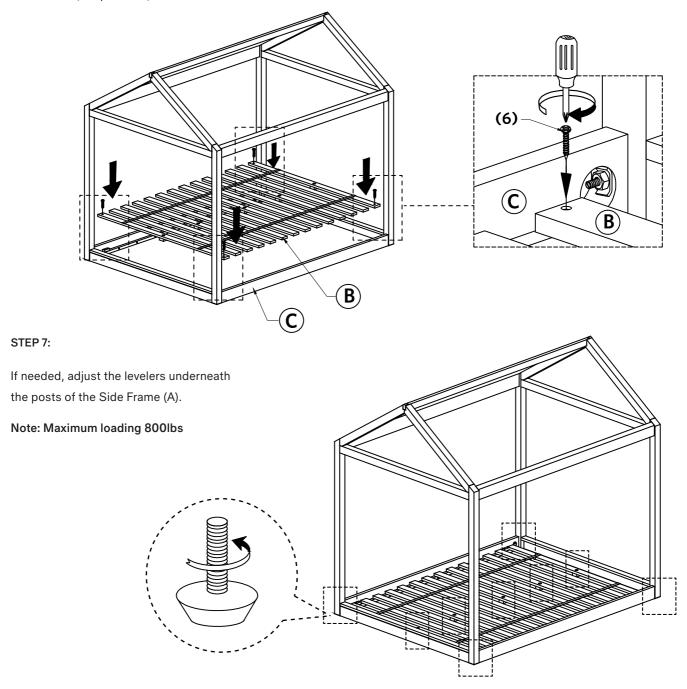

### **CARE INSTRUCTIONS:**

- 1. DUST OFTEN USING A CLEAN, SOFT, DRY LINT- FREE CLOTH.
- 2. BLOT SPILLS IMMEDIATELY AND WIPE WITH A CLEAN, DAMP CLOTH.
- 3. DO NOT USE CHEMICAL CLEANERS, ABRASIVES OR FURNITURE POLISH ON THE LACQUERED FINISH.