

# baby&child

## RESTORATION HARDWARE

### TWIN/FULL METAL BED FRAME WITH FEET INSTRUCTIONS

#### PARTS INCLUDED

- A [2] SIDE RAILS
- B [2] HEADBOARD BRACKETS
- C [5] GLIDES
- D [2] END CAPS
- E [2] BOLTS
- F [4] NUTS

#### TOOLS NEEDED

- A [2] WRENCH

#### ASSEMBLY INSTRUCTIONS

1. Install ROLLERS as shown in Figure 1. It may be necessary to tap PLASTIC SOCKETS into place.
2. Mount HEADBOARD BRACKETS to SHOULDER RIVETS at ends of side rails. Choose the setting (high or low) closest to the mounting holes in the headboard. Secure tightly with NUT and BOLT. See Figure 2.  
Note: The headboard brackets may be reversed to accommodate wide headboards.
3. Swing out CROSS ARMS TO 90 degrees. Overlap CROSS ARMS and engage SHOULDER RIVETS into proper keyholes.  
Note: Both rivet heads must engage in keyhole slots. See Figure 3.  
**WARNING: END CAPS MUST BE PLACED OVER END OF SIDE RAILS TO AVOID SERIOUS INJURY.**


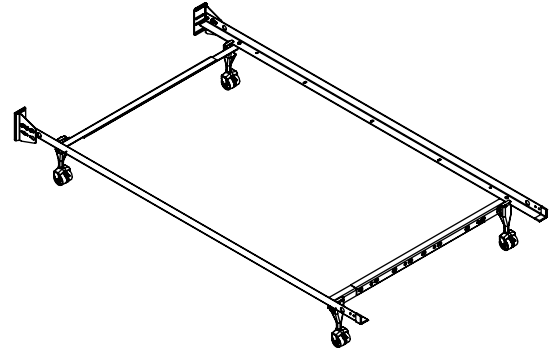


Figure 1.

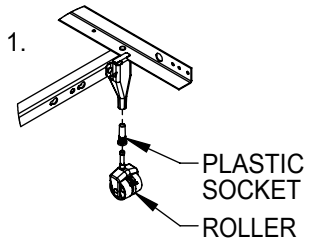

**WARNING!** When attaching this frame to a headboard with narrow posts it is recommended that any excess bolt be cut off after attachment. See figure below.


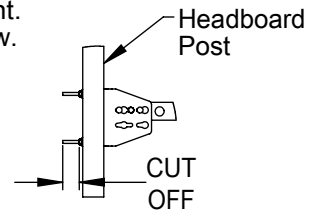


Figure 2.



High setting

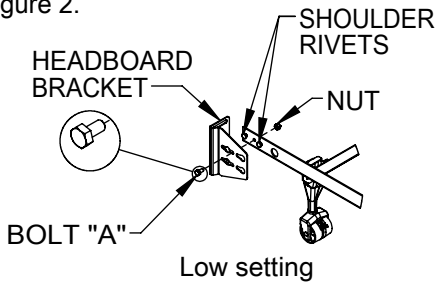

Headboard Bracket reversed

Note: Use the same settings on both sides of the bed.

Figure 3.

