

EMELIA TWIN & FULL CANOPY BED



WARNING: ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

Customer Service- If you are missing parts or have any questions about this product, please contact us at : 1-800-762-1751

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.





PART LIST

- A [1] HEADBOARD PANEL
- B [2] SHORT CANOPY POSTS
- C [2] LONG CANOPY POSTS
- D [1] FOOTBOARD PANEL
- E [2] SIDE RAILS
- F [1] SLAT ROLL
- G [2] SHORT CANOPY RAILS
- H [2] LONG CANOPY RAILS
- I [4] CANOPY FINIALS - SMALL
- J [4] CANOPY FINIALS - LARGE

TOOLS NEEDED

- Rubber/ wood Mallet or hammer
- Book or magazine
- Screwdriver

HARDWARE LIST


NO.		Description	QTY
1		Connecting bolt 6 x 14mm	8 Pcs
2		Camlock wheel	8 Pcs
3		Wood Screw 8x30mm	4 Pcs
4		Wood plug 8x30mm	8 Pcs

ASSEMBLY INSTRUCTIONS

Note: Bed can be assembled by one person rather easily, but if two people are available it is easier and the operation will require less preparation. The instructions are written assuming one person is assembling the bed.

Our hook-rail construction allows you to adjust the height of the bed for 2 settings. The higher setting is for use with a trundle and for use without a box spring. The lower setting is for use with a box spring. To insure the correct setting please measure the following distances:
 Higher setting- distance from the floor to the bottom of the hook-rail measures 8 1/2".
 Lower setting- distance from the floor to the bottom of the hook-rail measures 6 1/2".

1. Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bedfast hardware should be facing the inside, toward the mattress.
The Side Rails (E) are not handed parts so either rail will work on the right or left side. While holding the Headboard (A) up, place the hooks in the rail into the slots in the post of the headboard. If necessary, using a thick magazine or book to protect the side rails, hammer the hook-rail with a mallet or hammer until tight.
Repeat the procedure with the other rail. The Headboard Panel (A) will now stand on it's own with the rails supporting it.
Insert the siderail hooks into the slots in the Footboard (D) and use the method described above.
2. Lay the Slat Roll (F) in between the Side Rails (E) and use Wood Screws (3) to fasten 2 end slats to the side rails with a screwdriver.
3. Secure the Canopy Posts (B) & (C) to the top of bed posts.

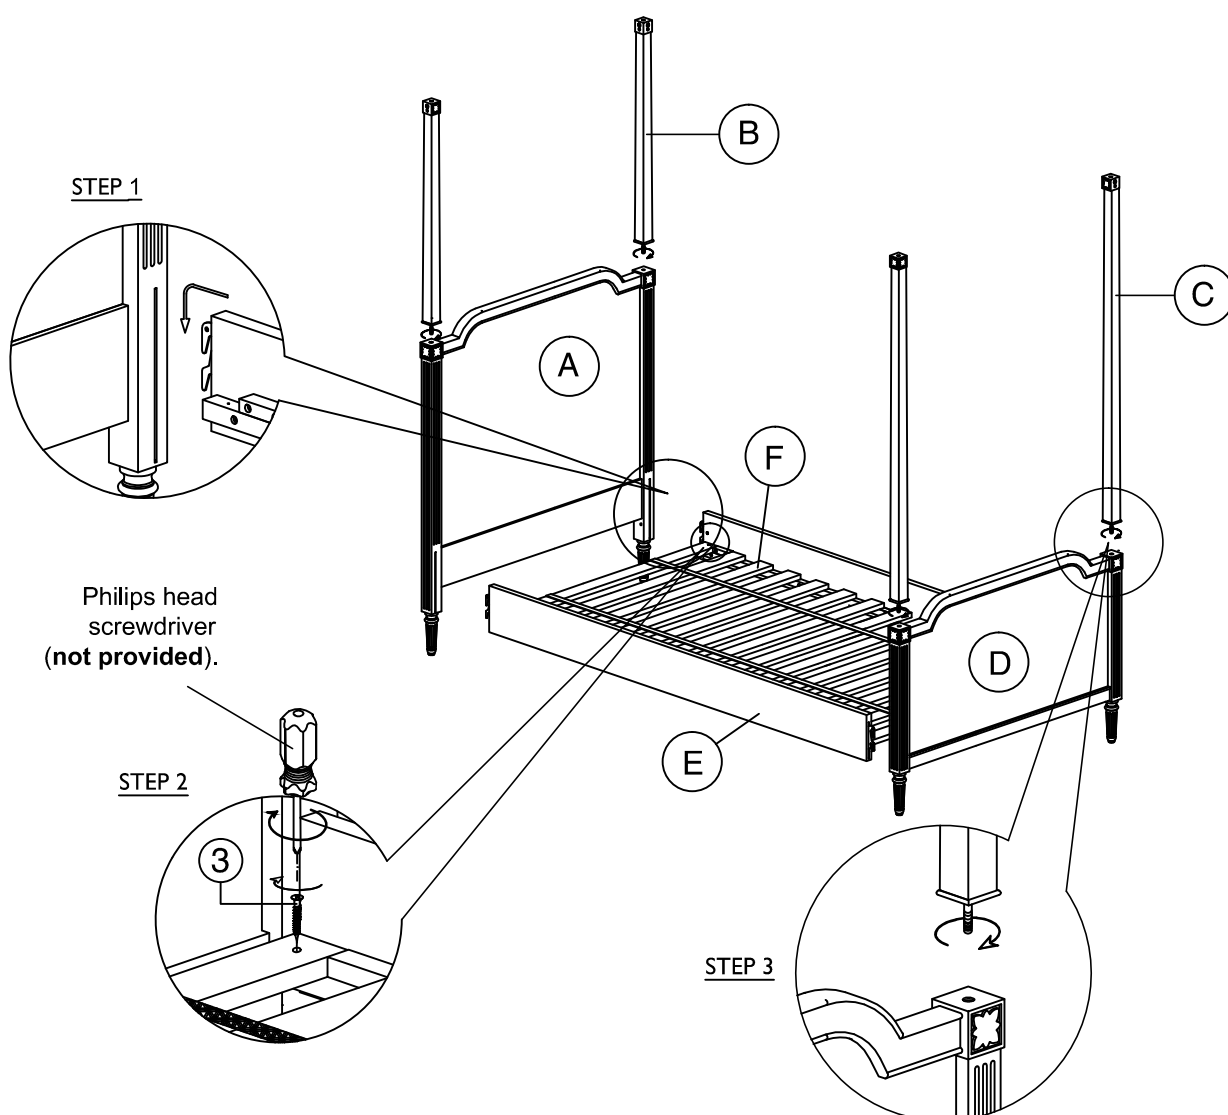

4. Insert Connecting Bolts (1) and Wood Plugs (4) to the Canopy Posts (B) & (C). Then secure the Canopy Rails (G) & (H) to the canopy posts. Place Camlock Wheel (2) into the holes inside of the canopy rails by aligning the arrow sign of the camlock wheel to the connecting bolt. Twist to tighten in counter clockwise direction using Phillips head screwdriver (not provided).
Repeat the same procedure to the other 3 connection points of canopy set.

