

baby&child

RESTORATION HARDWARE


Thank you for selecting Restoration Hardware Baby & Child lighting. Our assortment is crafted with the highest quality materials that coordinate perfectly with our Baby & Child bedding collections, making it easy to create an elegant nursery or child's bedroom. The item's surface is sealed, which eliminates the need for polishing and ensures a lasting finish for years to come.

PARTS ENCLOSED:

- (A) Mounting Plate (1)
- (B) Plastic Wire Connector (2)
- (C) Ground Screw (1)
- (D) Mounting Screw (2)
- (E) Canopy (1)
- (F) Ring (1)
- (G) Wood Post (1)
- (H) Metal Pole (1)
- (I) Ball (1)
- (J) Drops (12)
- (K) Sleeves (6)
- (L) Bulb (6) - Not Included
- (M) Shade (6)

VERONA CHANDELIER

Direct Wire Installation

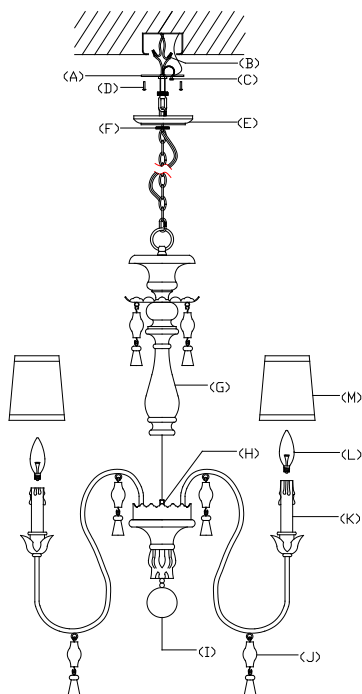

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to six (6) 60-watt maximum TYPE E12 B-10 bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your sconce is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off chandelier and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the chandelier will be installed.
3. Screw Wood Post (G) to Metal Pole (H).
4. Use the Plastic Wire Connector (B) to connect the hot wire on the chandelier to the hot wire on the junction box and wrap the connection with electrical tape. Connect the neutral wire on the chandelier to the neutral wire on the junction box with a Plastic Wire Connector (B) and wrap the connection with electrical tape.
5. Attach the ground wire on the fixture to the ground junction box wire, or wrap the ground wire on the fixture around the green Ground Screw (C).
6. Attach the Mounting Plate (A) to the junction box using the Mounting Screws (D) and tighten.
7. Attach the Canopy (E) to the Mounting Plate (A) using the Ring (F) and tighten.
8. Attach Ball (I) and Drops (J) to the chandelier arms.
9. Place (6) Sleeves (K) on each socket and insert (6) 60-watt Bulb (J-Not Included).
10. Clip on all (6) Shades (M) onto Bulbs (L - Not Included).
11. Restore power to the junction box and test fixture.
12. Installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your sconce. Wipe clean with a soft cloth.