

# baby&child



## RESTORATION HARDWARE

### INDUSTRIAL RIVET CHALKBOARD

#### PARTS INCLUDED


- (A) Industrial Rivet Chalkboard, 1 Pc.
- (B) Toggle Anchors, 3 Pcs.
- (C) Toggle Screws, 3 Pcs.

Please note: Toggle anchors and toggle screws are to be used for drywall installation only.

A	Industrial Rivet Chalkboard	1 pc.
B		Toggle Screws 3 pcs.
C		Toggle Anchor 3 pcs.

#### ASSEMBLY INSTRUCTIONS

1. Unpack all parts and place them on a protected work surface.
2. Hold product at desired location. With a pencil, mark on wall the top outside corners. These marks will be used to determine the location of your keyhole.
3. Measure down from the top of Industrial Rivet Chalkboard to the top of both keyhole notches. Record these measurements on the wall, using the marks in step 2 as a guide.
4. Measure in from the side of the Industrial Rivet Chalkboard to the top of both keyhole notches. Again, record these measurements on the wall. Align the two measurements until they intersect. This is the toggle anchor insertion point of your keyhole.
5. Insert toggle screws into the wall, leaving approximately ½" between the back of the toggle screw head and the wall.
6. Align keyhole notches over the toggle screw heads.
7. Slide Industrial Rivet Chalkboard down until the top keyholes rest on the screws. Tighten or loosen screws as needed to fit them snugly against wall.
8. The weight of the product is 16.75 lbs.

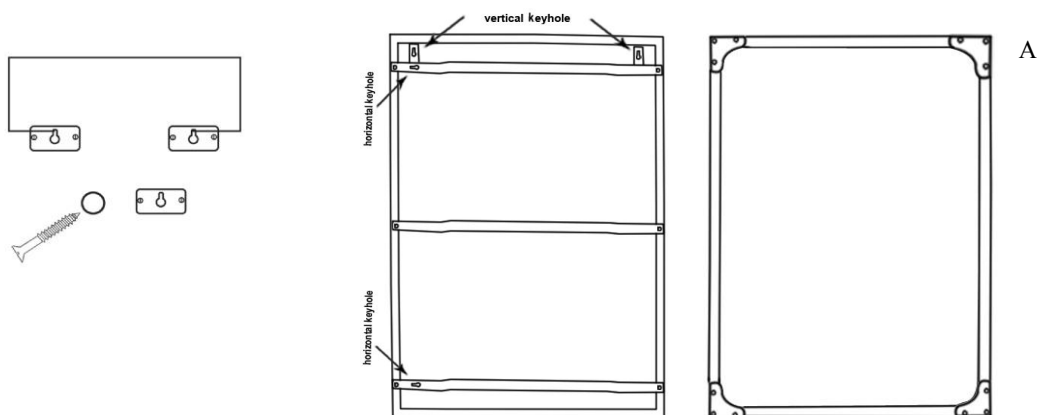

#### TOOLS NEEDED

Electronic stud finder, #2 “L” Phillips screwdriver, drill with #2 “L” Phillips bit, pencil

#### CARE INSTRUCTIONS

1. To clean, wipe gently with a soft, dry cloth.
2. Avoid the use of harsh chemicals or abrasive cleaners as they may damage this finish.

#### IMPORTANT SAFETY INSTRUCTIONS

This hanging system is meant for drywall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, we recommend using two people during installation.