

baby&child

RESTORATION HARDWARE



Thank you for selecting Restoration Hardware Baby & Child lighting. Our assortment is crafted with the highest quality materials that coordinate perfectly with our Baby & Child bedding collections, making it easy to create an elegant nursery or child's bedroom. The item's surface is sealed, which eliminates the need for polishing and ensures a lasting finish for years to come.

PARTS ENCLOSED:

- | | |
|--------------------------------|-----------------------------|
| (A) Mounting Plate (1) | (J) Arm |
| (B) Plastic Wire Connector (2) | (K) Nut (1) |
| (C) Ground Screw (1) | (L) Metal washer (1) |
| (D) Mounting Screw (2) | (M) Ground wire (1) |
| (E) Screw (4) | (N) Rubber washer (1) |
| (F) Wall Sconce Base | (O) Wrench |
| (G) Candle Sleeve (1) | (P) Thick rubber washer (1) |
| (H) Bulb (1) (Included) | (Q) Thin rubber washer (1) |
| (I) Shade (1) (Included) | |

MEDICI MIRRORED SCONCE

Direct Wire Installation

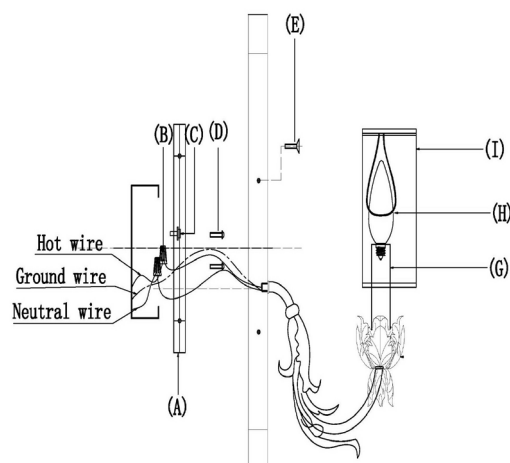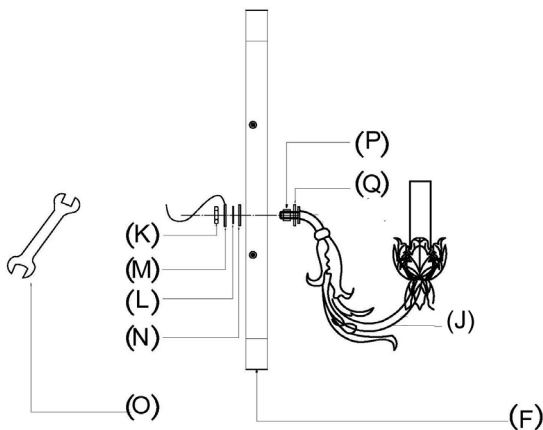

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN. This fixture has been rated for up to 1 (one) 40-watt maximum TYPE E12 bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your sconce is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off sconce and allow it to cool prior to replacing the light bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Insert arm (J) through mirror hole to the wall sconce base (F) with thin rubber washer (Q) and thick rubber washer (P) already attached to the arm thread.
3. On the wall sconce base (F), assemble the rubber washer (N), metal washer (L) and ground wire (M) and tighten nut (K) using the wrench (O).
4. Turn OFF power to the junction box where the wall sconce will be installed.
5. Connect (A) mounting plate to the hot junction box wire with (D) mounting screws.
6. Use the (B) plastic wire connector to connect the wires and wrap the ground wire (silver wire) around the ground screw (C).
7. Connect the wall sconce base (F) to the mounting plate (A) with screws (E).
8. Put on the candle sleeve (G) and insert 40-watt bulb (H).
9. Put on shade (I) and clip the bulb with shade clip.
10. Restore power to the junction box and test the fixture.
11. Installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.
JUST WIPE CLEAN WITH A SOFT CLOTH.