

HAYLAN SINGLE ARMOIRE

PARTS INCLUDED

A [1] ARMOIRE B [2] WOODEN SHELF

TOOLS NEEDED


- Phillips head screwdriver (not provided)


ASSEMBLY INSTRUCTION

- 1. Attach one of the mounting brackets near the top back edge of the furniture piece by inserting the shorter screws.
- 2. Determine the final position of the furniture piece. Mark location on the wall approximately 2" below the bracket mounted to the back of the furniture.
- 3. Drill a starter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert plastic anchor. Gently tap the anchor until the flange of the anchor is flush with the wall.
- 4. Attach the second bracket by inserting the longer screw through the bracket and into the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket in the wall.
- 6. Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
- 7. To double lock; return the beaded end back through the keyholes as shown.
- 8. Check to make sure the Restraint strap is securely laced and locked to the brackets.

(B)

can be adjusted.

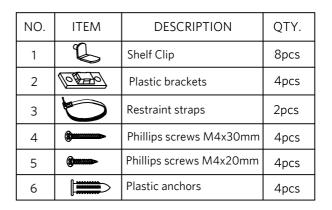

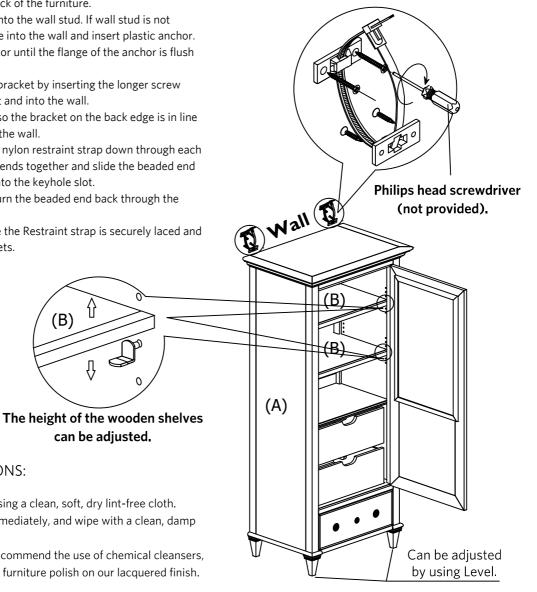



- 1. Dust often using a clean, soft, dry lint-free cloth.
- 2. Blot spills immediately, and wipe with a clean, damp
- 3. We do not recommend the use of chemical cleansers. abrasives, or furniture polish on our lacquered finish.