

RH BABY & CHILD

HAND-CARVED ROCOCO LEANER MIRROR - ASSEMBLY INSTRUCTIONS


PARTS ENCLOSED:

(A) Screws (5)

(B) Plastic anchor (5)

(C) Hangman wall bracket (1)

(D) Bubble Level (1)

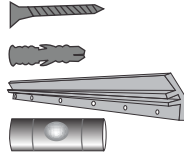

(The Screws and Toggle Anchors are meant for drywall only)

TOOLS NEEDED:

Electronic stud finder, #2 "L" Phillips screwdriver, drill with #2 "L" Phillips bit, pencil

IMPORTANT SAFETY INSTRUCTIONS:





This hanging system is meant for drywall/stud mounting only. If wall is concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, we recommend using two people during installation.

ASSEMBLY & INSTALLATION:

1. Unpack all the parts and place them on a protected work surface.
2. Hold mirror at desired location. With a pencil, mark the top outside arch of the mirror on the wall. These marks will be used to determine the location of the wall bracket (C).
3. Measure down from the top of the mirror to the top of the mounting hardware. Mark these measurements on the wall and drill holes into the marks using the electric drill. Use the bubble level (D) to ensure the placement of the wall bracket (C) is straight.
4. Insert the wall anchors (B) into the holes. Attach the wall bracket (C) by installing the screws (A) into the wall anchors with a #2 "L" Phillips screwdriver or drill bit.
5. Mount the Rosette Mirror to the wall by sliding the mirror until the mount bracket rests on the wall bracket (C).

CARE INSTRUCTIONS:

To clean, wipe gently with a soft, dry cloth. Avoid the use of harsh chemicals or abrasive cleaners, as they may damage the mirror's finish.

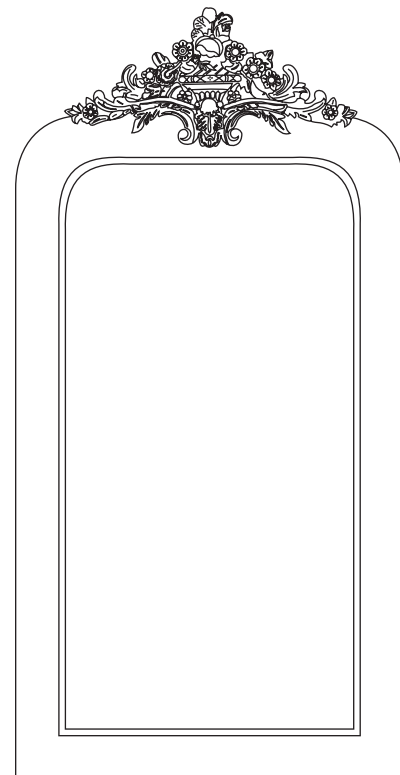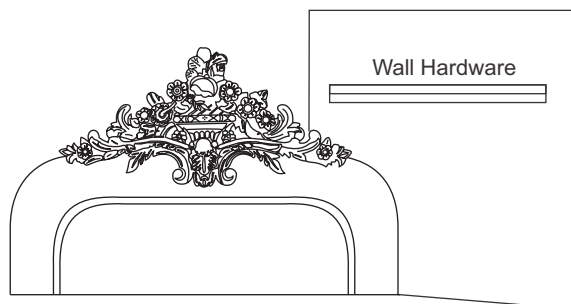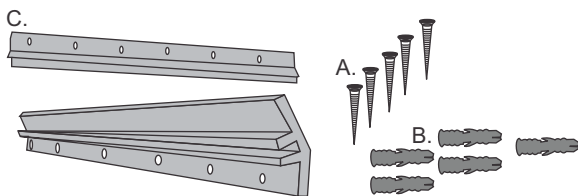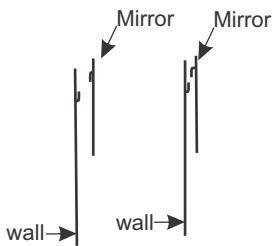

RH BABY & CHILD

HAND-CARVED ROCOCO LEANER MIRROR






ANTI-TIP ASSEMBLY INSTRUCTIONS

PARTS INCLUDED:


A complete kit contains 1 set of the following

ASSEMBLY INSTRUCTIONS

Professional installation recommended

NO.	ITEM	DESCRIPTION	QTY
1		Screw-0.75"	2 PCS.
2		Screw-1.5"	2 PCS.
3		Steel Cable	1 PC.
4		Steel Brackets	2 PCS.
5		Mini Anchors	2 PCS.

1. Tighten the metal bracket onto the wall and mirror piece with the help of the provided screw. For drywall mounting, mini anchors should be used with the screws.
2. Tighten the steel cable (3) onto the brackets (4) on the wall and on the product as shown below.
3. Tighten the cord grip as required and adjust the spacing with the wall accordingly.

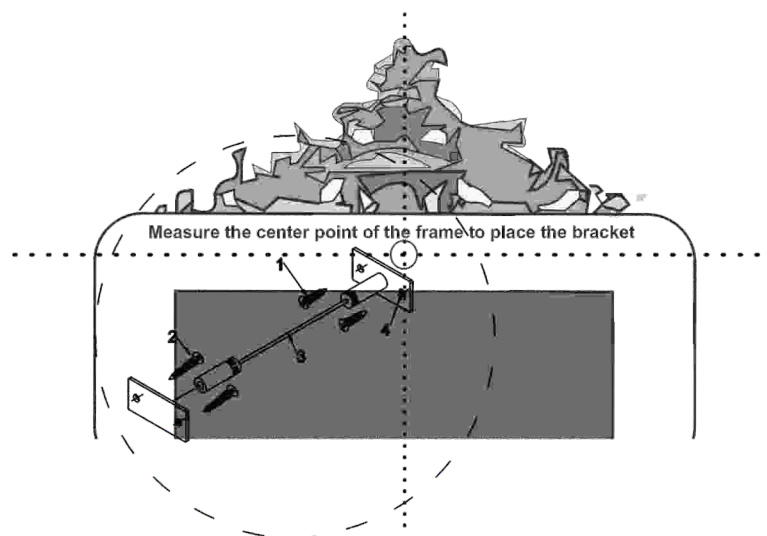

Mirror back side

WARNING

Serious or fatal crushing injuries can occur from mirror tip-over.
Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-overs.