



baby&child

RESTORATION HARDWARE

INDUSTRIAL WIRE CAR CUBBY STORAGE


PARTS ENCLOSED

- A. WIRE CAR CUBBY
- B. SCREW
- C. PLASTIC ANCHOR

NO.	ITEM	DESCRIPTION	QTY.
A		WIRE CAR CUBBY	1
B		SCREW	2
C		PLASTIC ANCHOR	2

ASSEMBLY INSTRUCTIONS

1. Unpack all parts and place them on a protected work surface.
2. Hold product at desired location. With a pencil, mark on wall the top outside corners. These marks will be used to determine the location of your mounting hardware.
3. Measure down from top of the Wire Car Cubby to the top of both keyhole notches. Record these measurements on the wall, using the marks in step one as a guide.
4. Measure in from the side of the Wire Car Cubby to the top of both keyhole notches. Again, record these measurements on the wall. Align the two measurements until they intersect. This is the insertion point of your mounting hardware. Use a level to ensure the item will be straight.
5. Insert screws (B) into wall, leaving approximately ½" between the back of the screw (B) head and the wall.
6. Align keyhole notches over the screw (B) heads.
7. Slide Wire Car Cubby down until the top keyhole rests on the screws (B). Tighten or loosen screws (B) as needed to fit them snugly against wall.

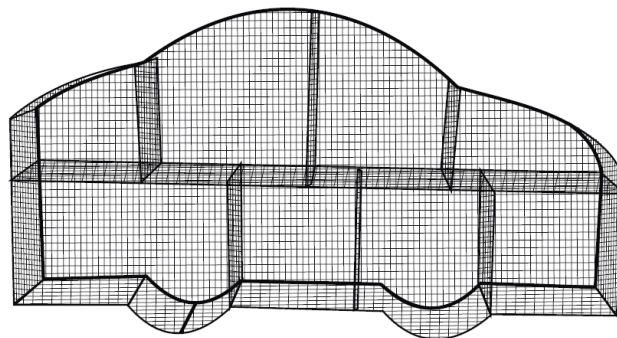

CARE INSTRUCTIONS:

1. To clean, wipe gently with a soft dry cloth.
2. Avoid the use of harsh chemicals or abrasive cleaners as they may damage the finish.

IMPORTANT SAFETY INSTRUCTIONS:

1. Stud mounting recommended. Use proper hardware for your wall type (such as plastic anchors(C) for drywall). When in doubt, consult your local hardware store.
2. For your safety, it is strongly recommended that two people hang this product.
3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.