

RHBABY&CHILD

Model No: 178 - 1/2 INDUSTRIAL LOCKER TWIN/FULL BUNK BED

All Restoration Hardware bunk bed are designed to meet the highest safety standards and comply with all U.S. and Canadian bunk bed and cradles regulations.

Made in Vietnam

Distributed in the U.S.A by:

Restoration Hardware Baby & Child

11640 Harrel St. Suite B

Mira Loma, CA 91752

www.rhbabyandchild.com

Distributed in Canada by:


Restoration Hardware Canada, Inc.

1500-1055 West Georgia Street

Vancouver, British Columbia V6E4N7



WARNING: Read all Instructions before assembling this product.
KEEP INSTRUCTIONS FOR FUTURE USE.

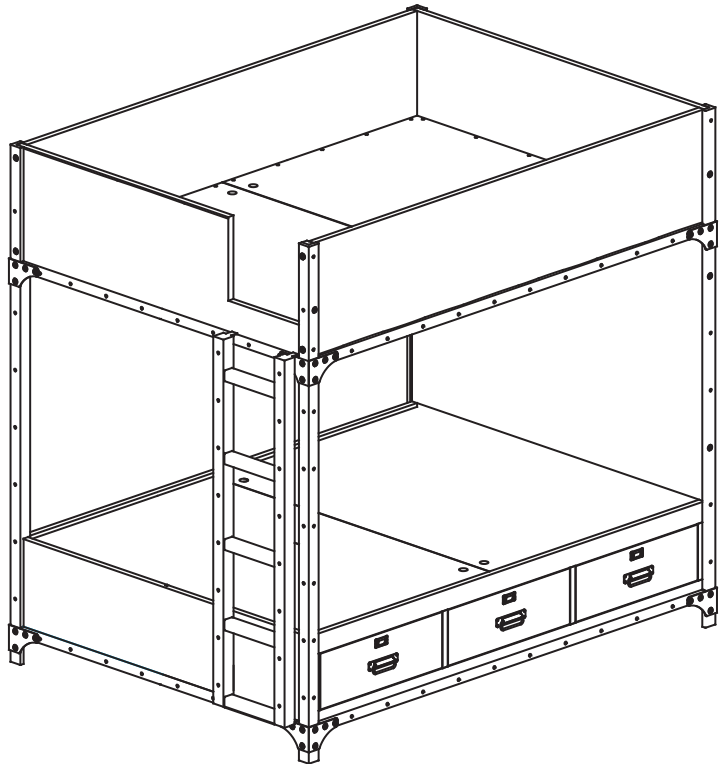

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact us first. You can also order parts by writing to the address above. Include the product model number, color, and a brief description of the part. Call 1-800-762-1751.

CARE AND CLEANING

DO NOT scratch or chip the finish. DO NOT use abrasive chemicals for cleaning. If the crib is to be stored, store in a cool dry place and carefully package all original hardware to protect from loss.

TOOLS AND INSTALLATION

Tools Necessary: Key Wrench (included).

NOTE : It may be easier to assemble product with two people.

NOTE: When inserting bolts, turn clockwise until tight. Then loosen 1/2-3/4 of a turn. After crib is completely assembled, return to each bolt and tighten.

RH BABY & CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

IMPORTANT SAFETY INFORMATION FOR BUNK BED

1. Follow the information on the WARNINGS appearing on the upper bunk end structure and on the carton. **DO NOT REMOVE WARNING LABEL FROM BED.**
2. Always use the specified size mattress or mattress support, or both to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches below the upper edge of guardrails on top bunk.
4. Do not allow children under 6 years of age to use the upper bunk.
5. Prohibit more than one person on upper bunk.
6. Periodically check and ensure that the guardrails, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact Restoration Hardware for replacement parts
10. Use of a night light may provide added safety precaution for a child using the upper bunk.
11. Use guardrails on both sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
13. The use of water flotation mattresses is prohibited.
14. **STRANGULATION HAZARD** - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed: for example, but not limited to, hooks, belts, and jump ropes.
15. Keep these instructions for future reference.



WARNING


TO HELP PREVENT SERIOUS OR FATAL INJURIES FROM
ENTRAPMENT OR FALLS

1. Never allow a child under 6 years on upper bunk.
2. - If bunk is Twin/Twin:
Use only mattress which is 75" long and 38" wide and 6" height on upper bunk,
and mattress which is 75" long and 38" wide and 10" height on lower bunk.
- If bunk is Full/Full:
Use only mattress which is 75" long and 53" wide and 6" height on upper bunk,
and mattress which is 75" long and 53" wide and 10" height on lower bunk.
3. Ensure thickness of mattress does not exceed 6" and mattress surface is at least 5 inches below upper edge of guardrails. Thickness for lower bunk is 10" high.
4. Use guardrails on both sides of upper bunk.
5. Prohibit horseplay on or under bed(s).
6. Prohibit more than one person on upper bunk.
7. Use ladder for entering and leaving upper bunk.
8. If the bunk bed will be placed next to a wall the guardrails that run the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

STRANGULATION HAZARD

9. Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to hooks, belts, and jump ropes.



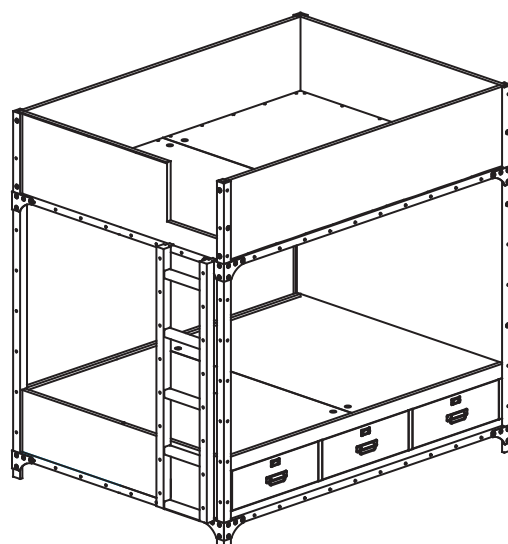









DO NOT REMOVE THIS LABEL



RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED



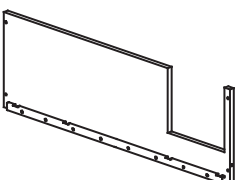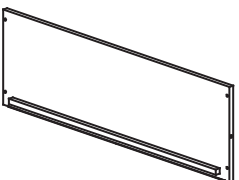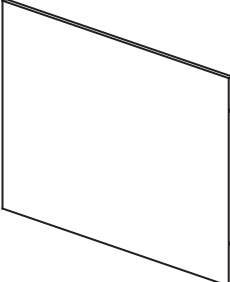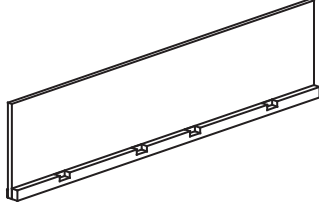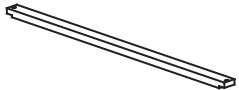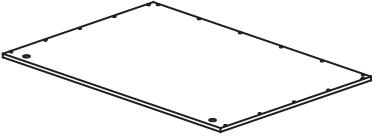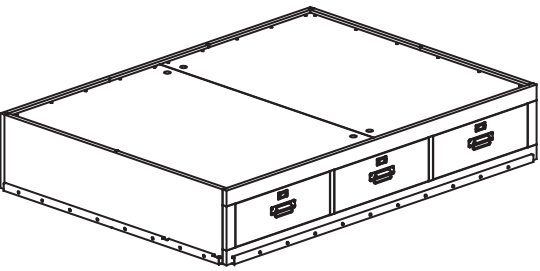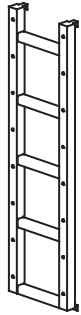







PARTS IDENTIFICATION

 <p>(A) Left Post of Footboard (x1 piece)</p>	 <p>(B) Right Post of Footboard (x1 piece)</p>	 <p>(C) Left Post of Headboard (x1 piece)</p>	 <p>(D) Right Post of Headboard (x1 piece)</p>
 <p>(E) Back Side Rail (x1 piece)</p>	 <p>(F) Front Side Rail (x1 piece)</p>	 <p>(G) Headboard Panel (x1 piece)</p>	
 <p>(H) Long Side Rails (x2 pieces)</p>	 <p>(I) Stretcher Bars (x4 pieces)</p>	 <p>(J) Top Platform Panels (x2 pieces)</p>	
 <p>(K) Base Bed (x1 set)</p>			 <p>(L) Ladder (x1 piece)</p>

RH BABY & CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

HARDWARE INCLUDED

NO.	ITEM	DESCRIPTION	QTY.
1		Key Wrench 4mm	1 piece.
2		Multi Wrench 13mm	1 piece.
3		Long Bolt M8x2-3/4"	8 pieces.
4		Middle Bolt M8x1-1/2"	8 pieces.
5		Short Bolt M8x21mm	1 piece.
6		Small Bolt M8x1/2"	63 pieces.
7		Screw 8x30mm	32 pieces.
8		Left Metal Bracket (for footboard)	2 pieces.
9		Right Metal Bracket (for footboard)	2 pieces.
10		Metal Bracket (for Headboard)	4 pieces.

TOOLS NEEDED

Phillips-head Screwdriver (not included)



ASSEMBLY INSTRUCTIONS

- Note:**
- Bed must be assembled by at least two people.
 - Please read instructions carefully before assembling bed.
 - Use the parts and fittings list to identify each component.
 - Keep all packing materials until assembly is complete to avoid loss of smaller parts.
 - Do not completely tighten all bolts until all steps are finished.


RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


NOTE:

The bunk has total of 4 orientations. Ladder (L) can be attached to left or right of the footboard, depending on where you would like the Ladder (L) to be positioned, and on either side of drawers (use options below).


Orientation 1

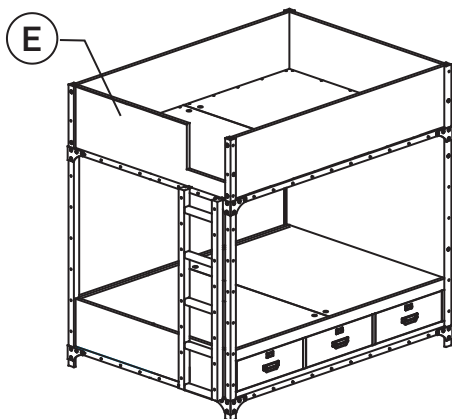


Orientation 2

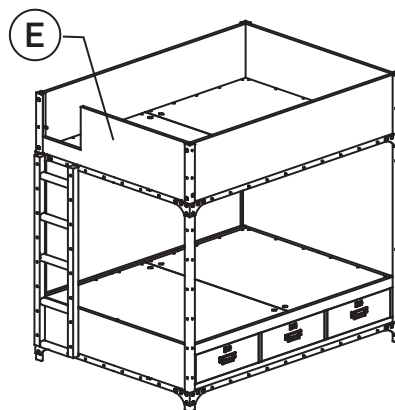

Orientation 3

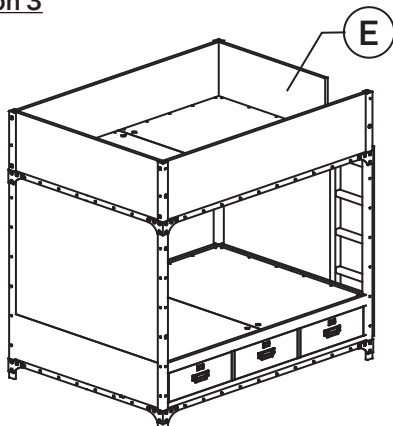


Orientation 4

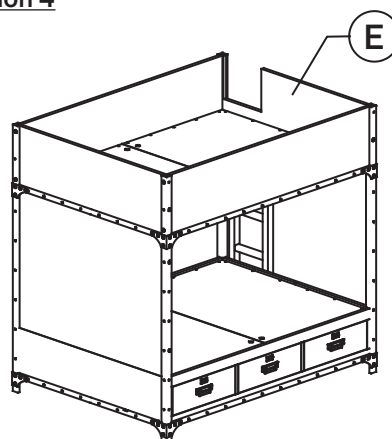


BACK SIDE RAIL CAN BE CONVERT TO LEFT OR RIGHT OF THE BUNK:

Orientation 2, 3

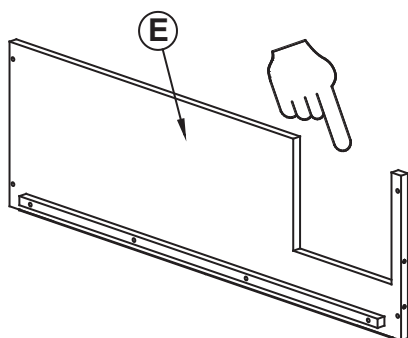

Orientation 1, 4

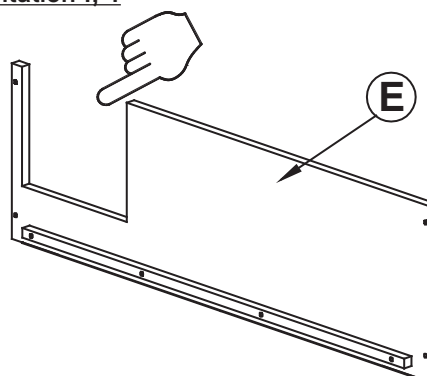


RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

TO CONVERT THE BACK SIDE RAIL, FOLLOW THESE BELOW STEPS:


Remove the crossbars from the Back Side Rail (E),
by unscrewing the bolts/ screws found on back
side rail, as seen below.

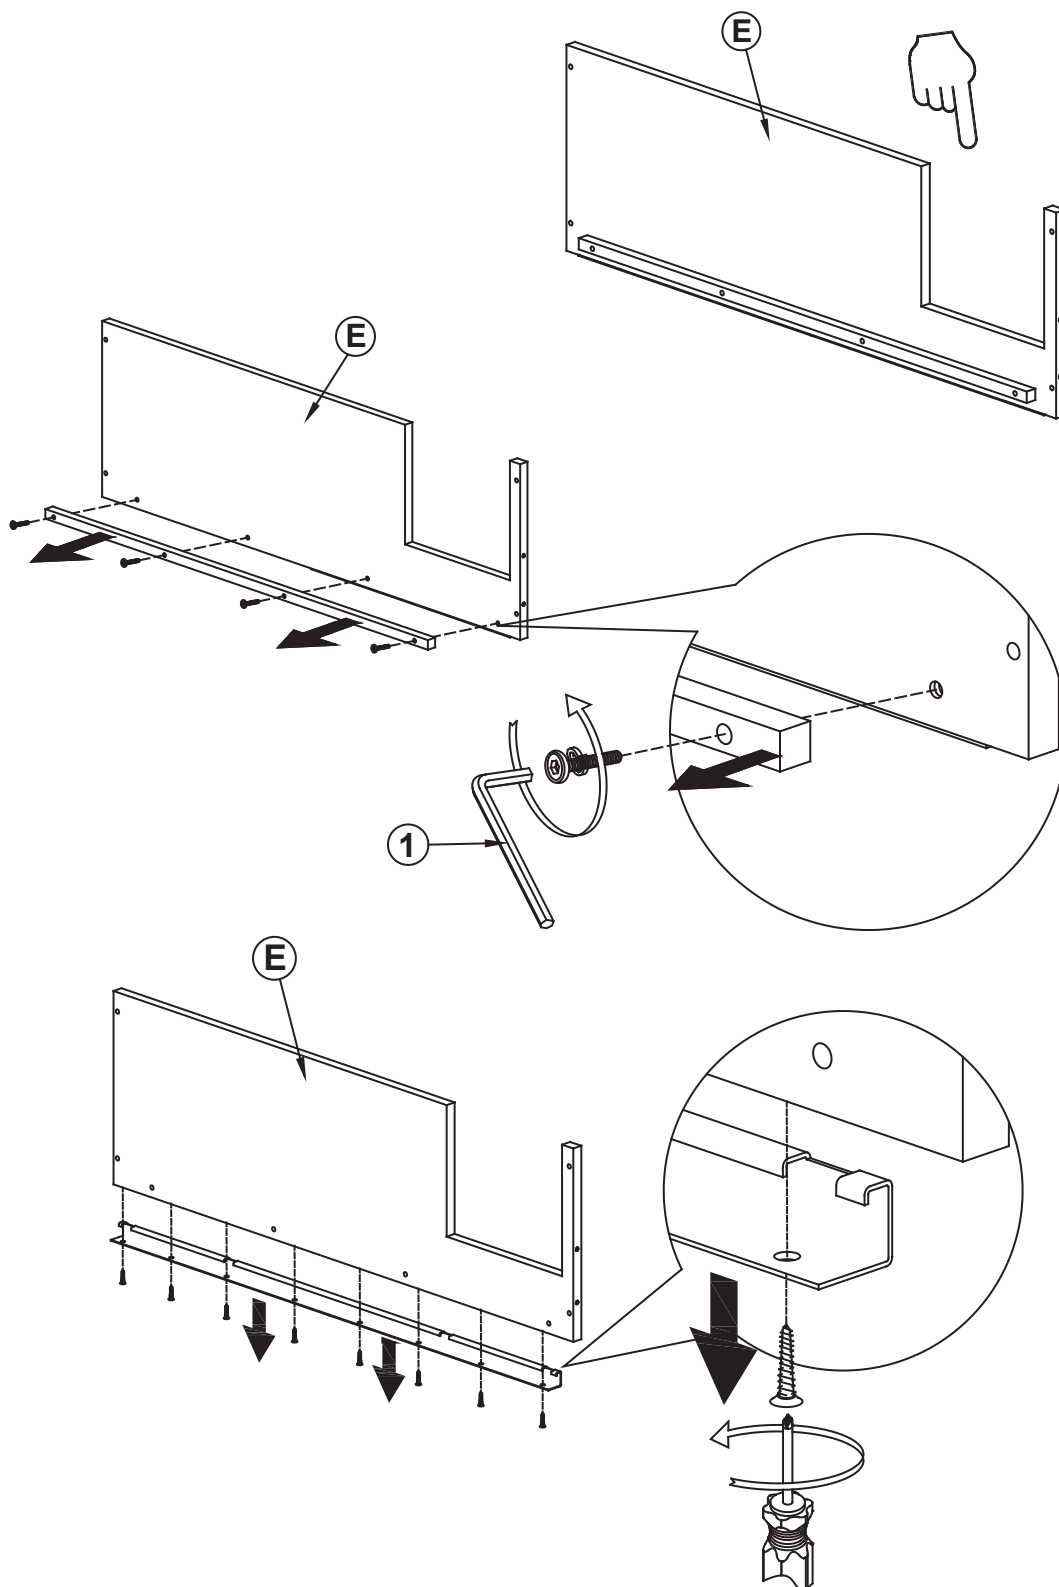

RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

- Turn the open end of Back Side Rail (E) to the left.
- Re-attach the cross bars to the Back Side Rail (E) by the original bolts/ screws.
- Tighten the bolts/ screws using Key Wrench (1) and Philips Head Screwdriver (not included).

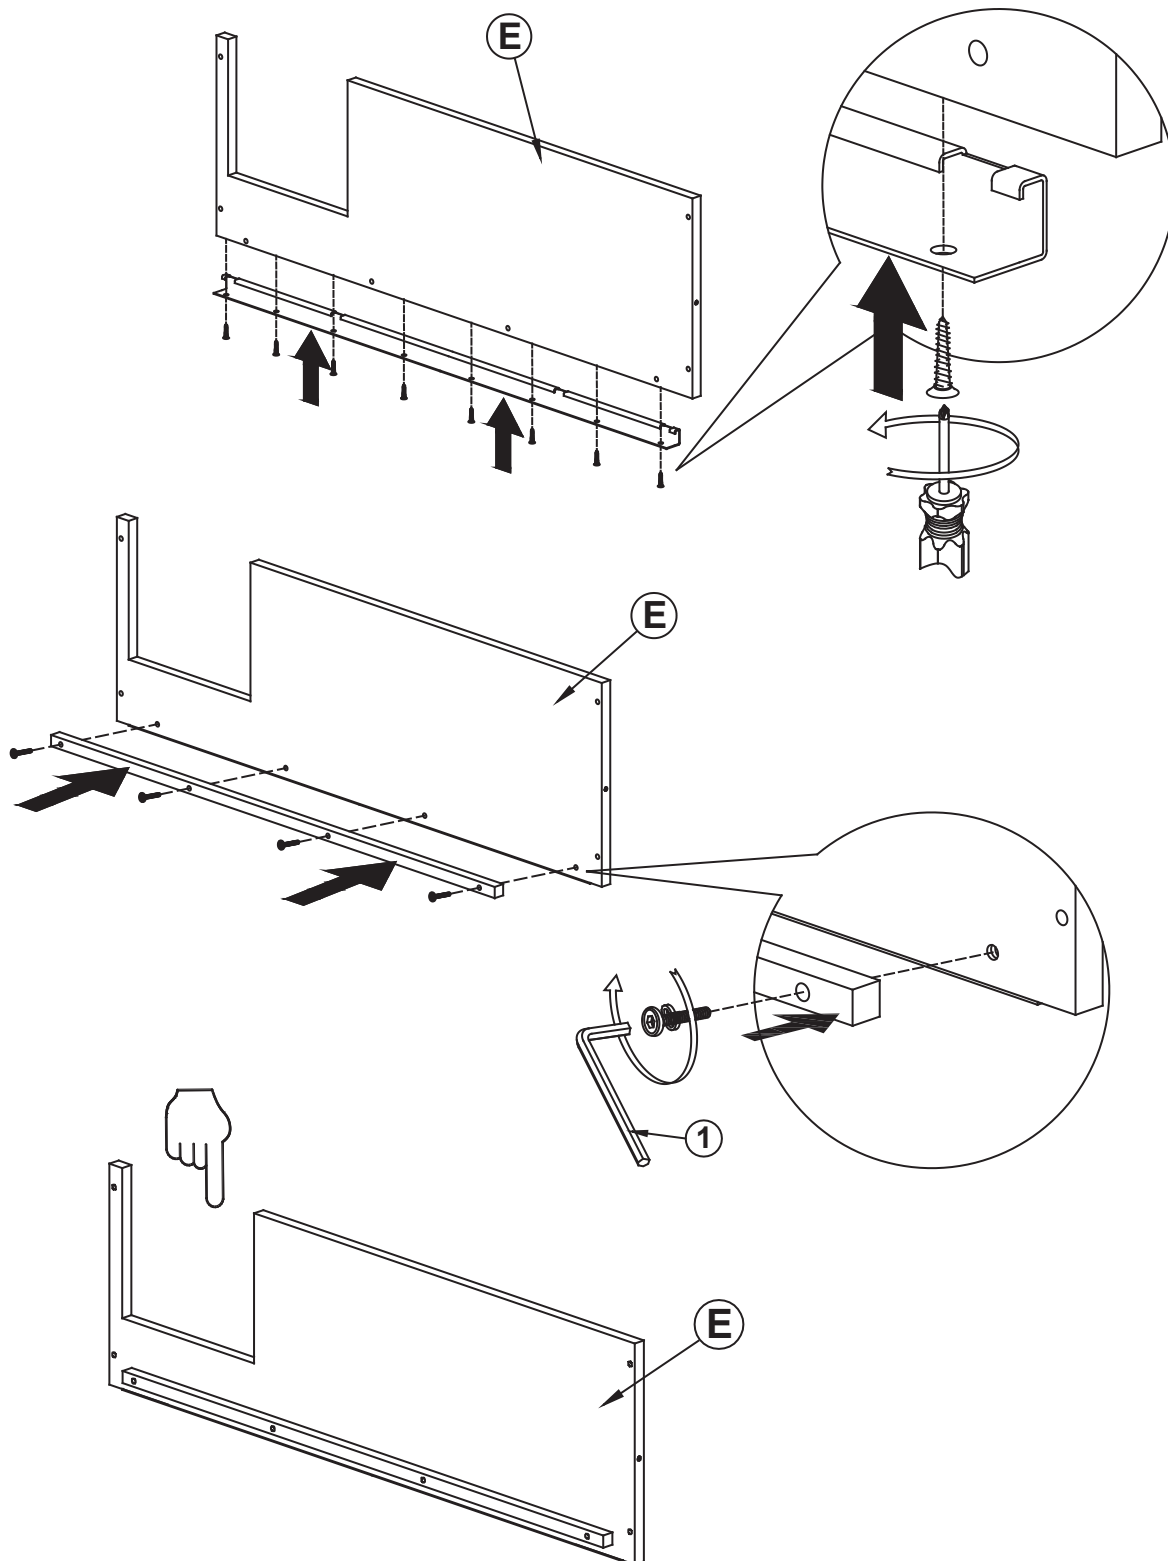


RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


STEP 1:

Install Left/ Right Posts of Footboard (A,B) to the Back Side Rail (E).
Insert Middle Bolts (4) and tighten with Multi Wrench (2).

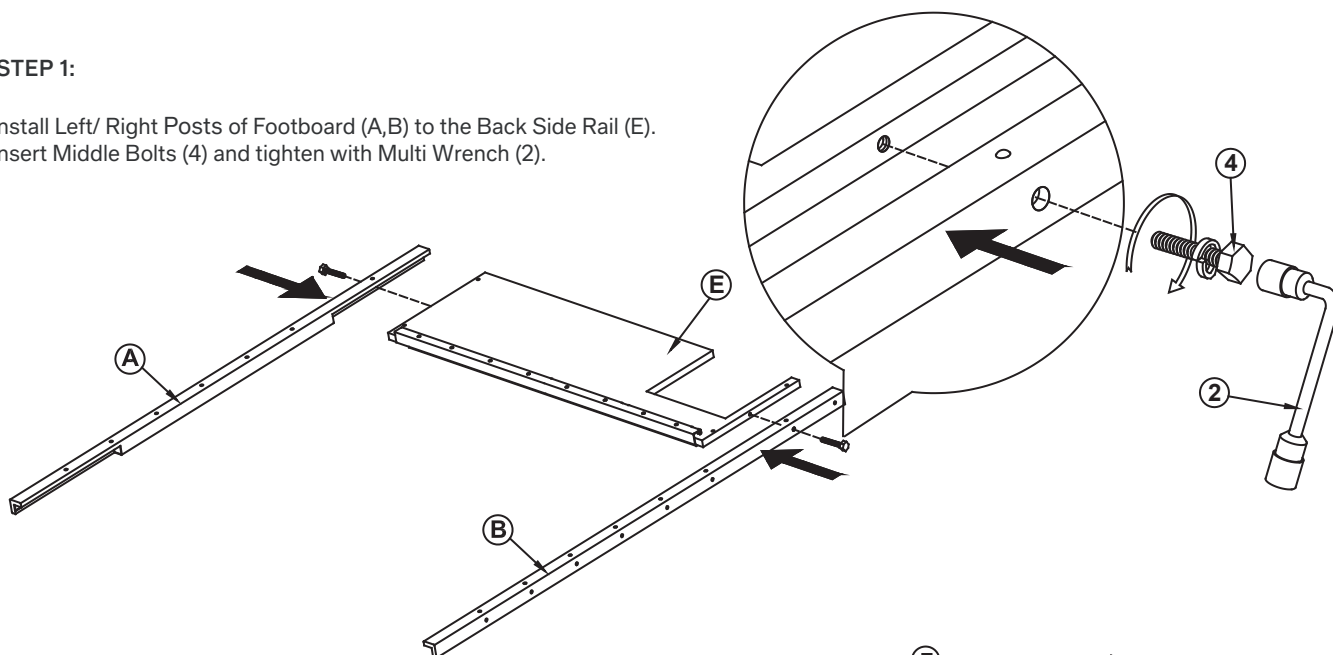

STEP 2:

Lay the Front Side Rail (F) to either the Headboard Panel (G).
Next, attach the 2 Left/ Right Posts of Headboard (C,D) to the
Headboard Panel (G) by inserting the Middle Bolts (4) into
the pre-drilled holes in each Headboard Panel (G) and Front
Side Rail (F). Tighten all bolts with Multi Wrench (2).

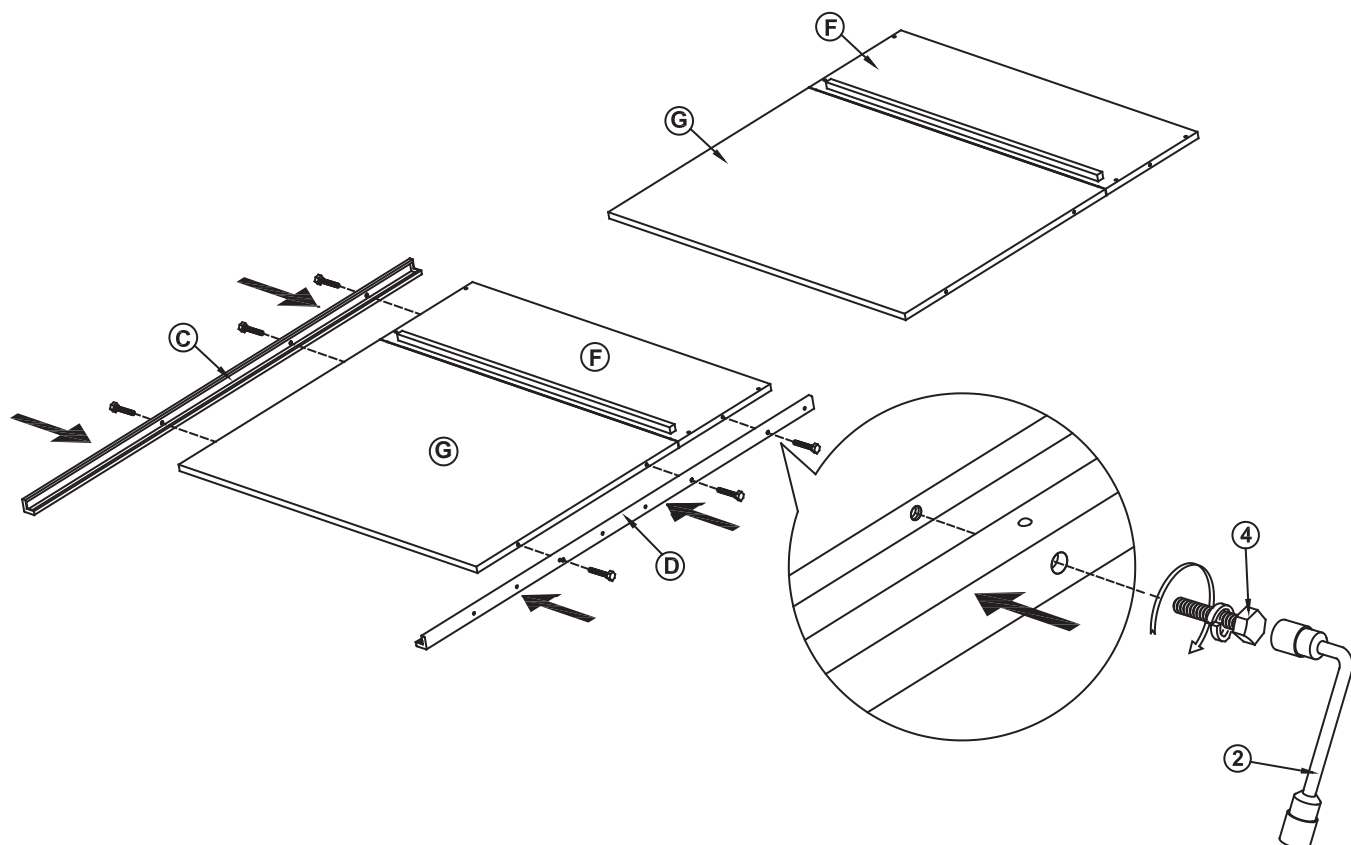


RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

STEP 3:

Secure place the headboard to the Base Bed (K). Attach metal brackets (10) to the posts (C,D) of the headboard. Then insert Small Bolts (6), and tighten with Multi Wrench (2), as seen below.

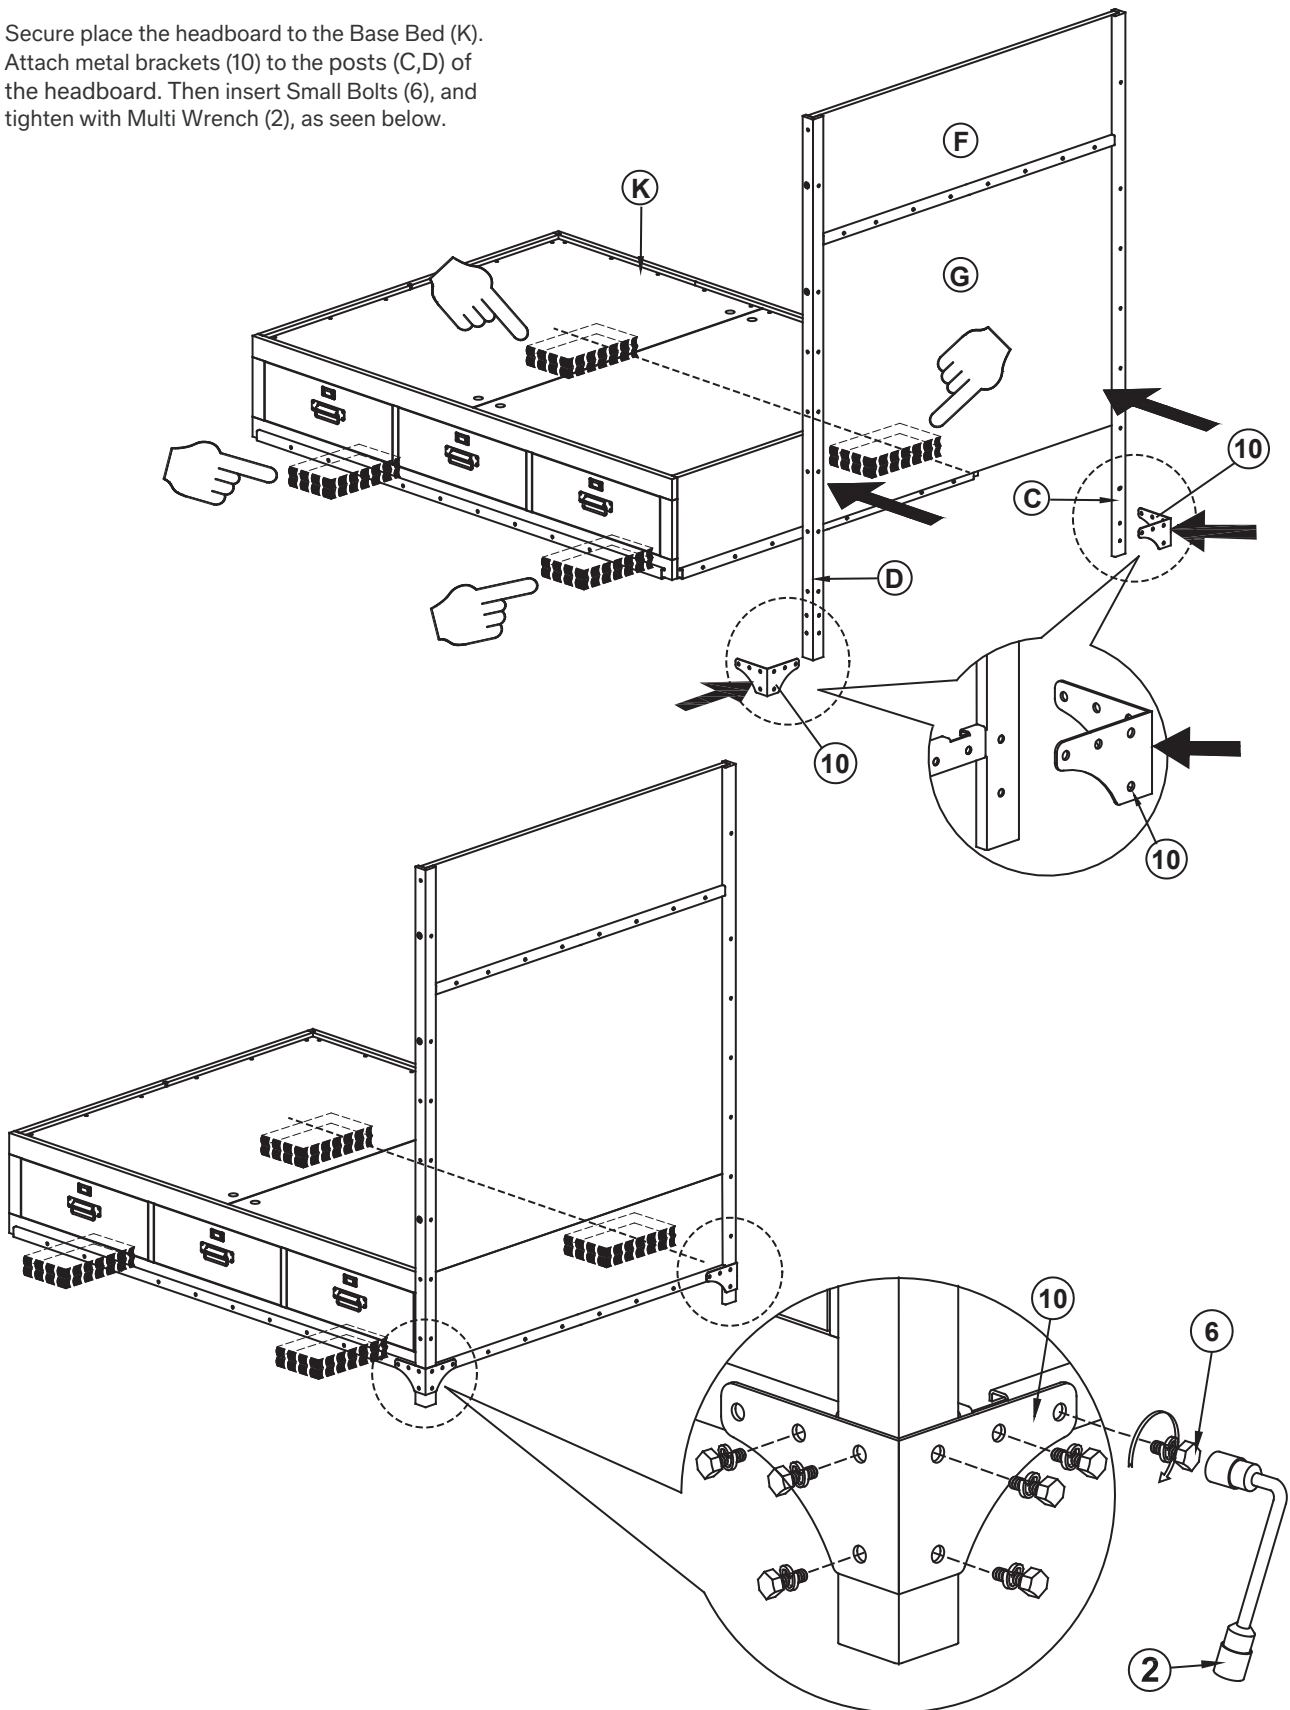


RH BABY & CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


STEP 4:

Secure place the footboard to the Base Bed (K).
Insert metal brackets (8, 9) to the posts (A, B) of
the footboard, as seen below.

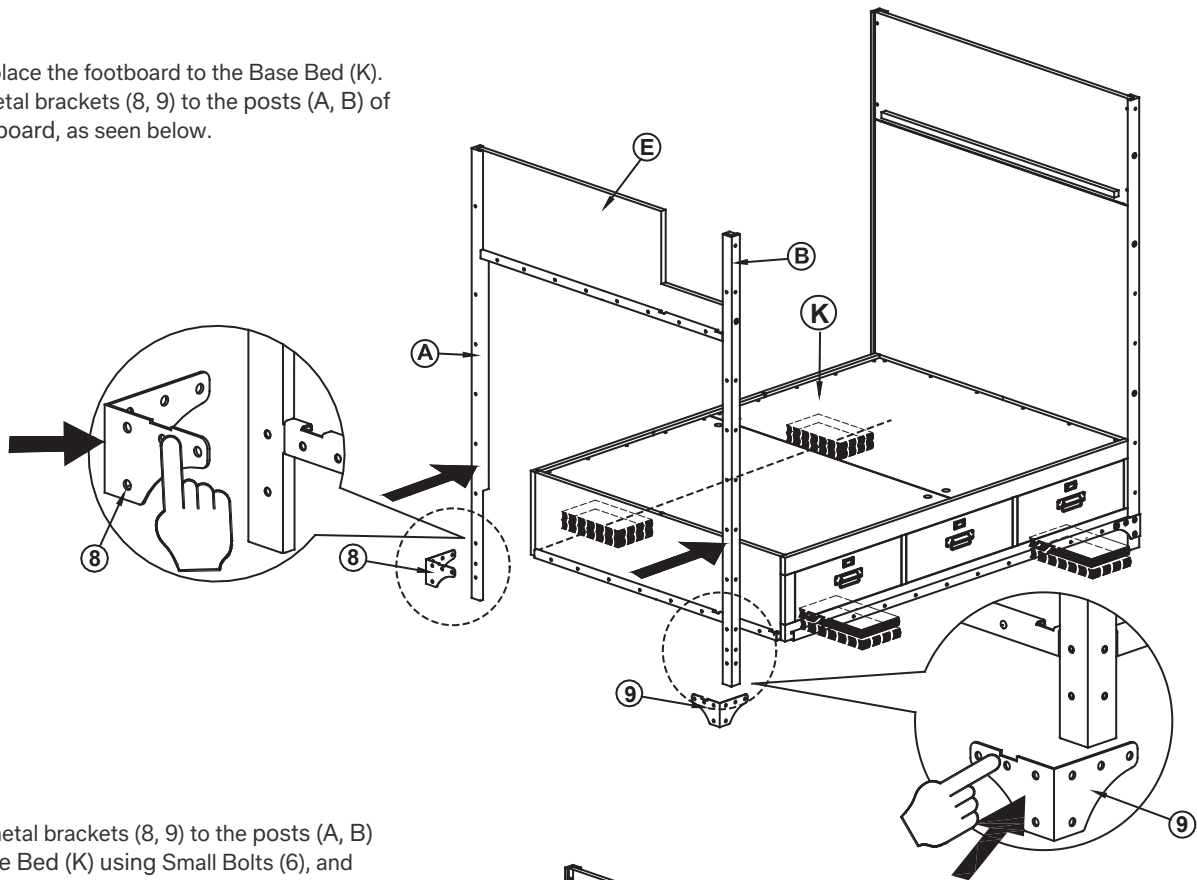

STEP 5:

Attach metal brackets (8, 9) to the posts (A, B)
and Base Bed (K) using Small Bolts (6), and
tighten with Multi Wrench (2), as seen below.

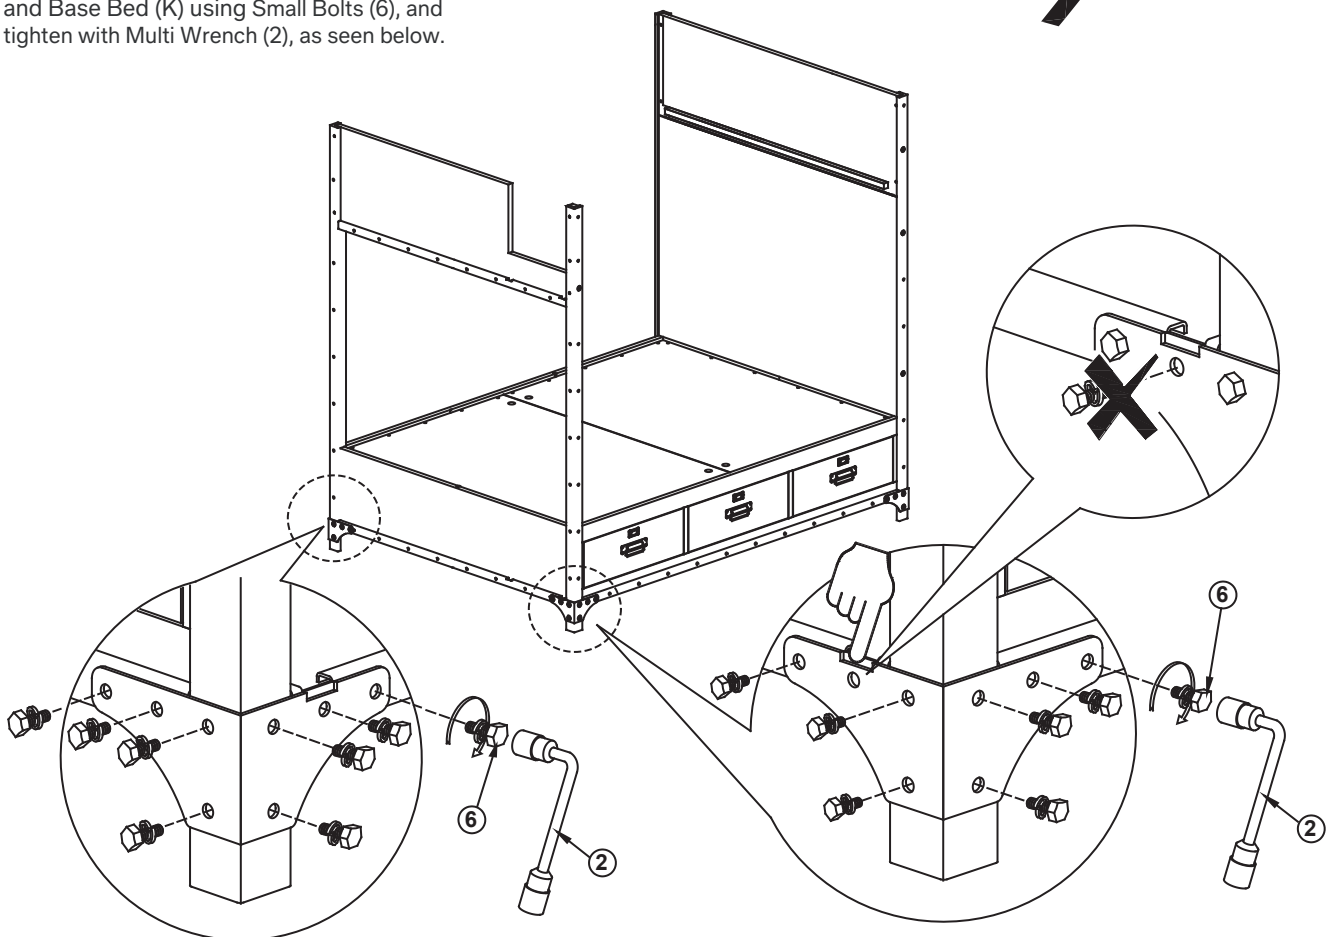


RH BABY & CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


STEP 6:

Slide the Long Side Rails (H) to the posts of headboard/ footboard.

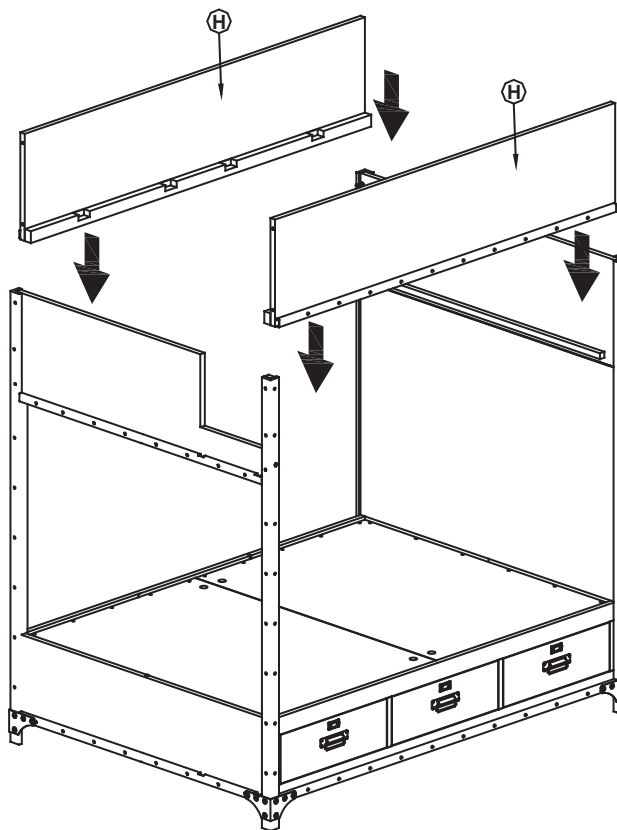

STEP 7:

Attach the headboard and footboard to the Long Side Rails (H) by using Long Bolts (3), and tighten with Multi Wrench (2).

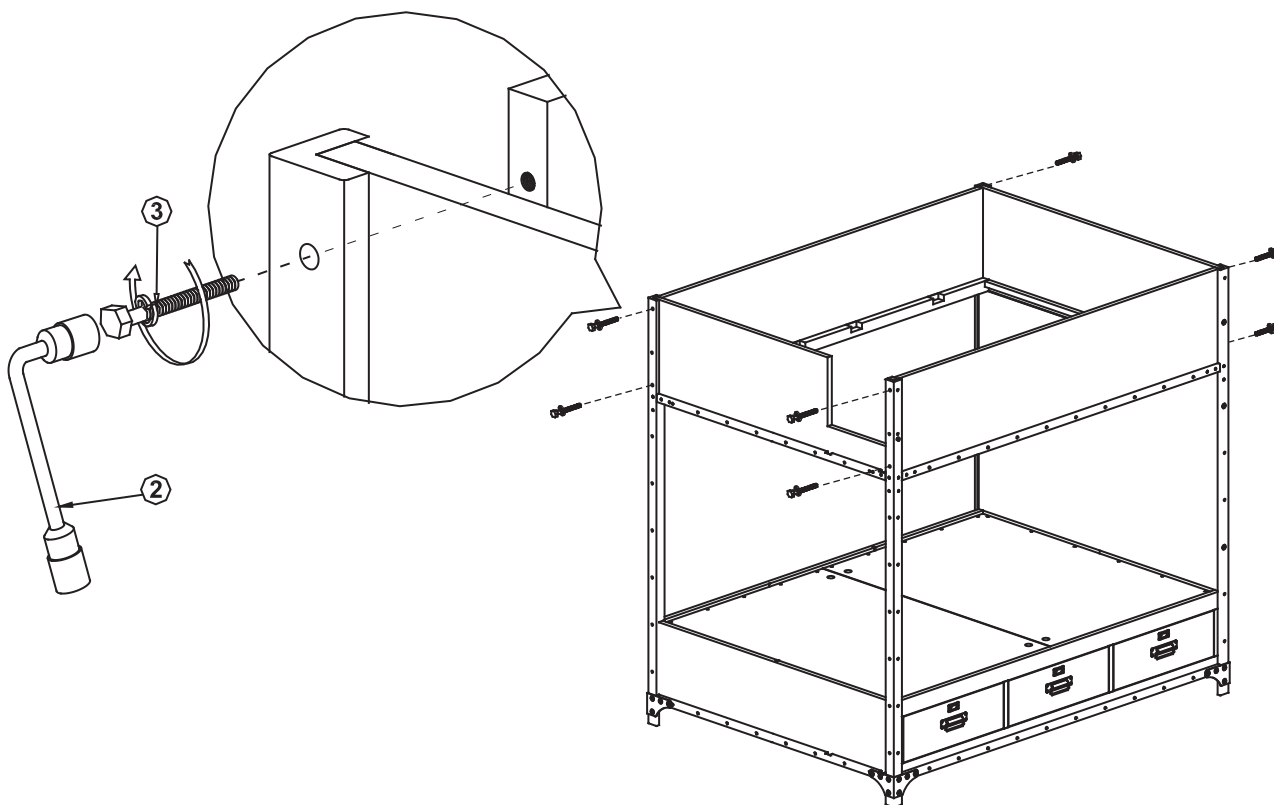


RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


STEP 8:

Insert Metal Brackets (8,9,10) to the posts, as seen below.

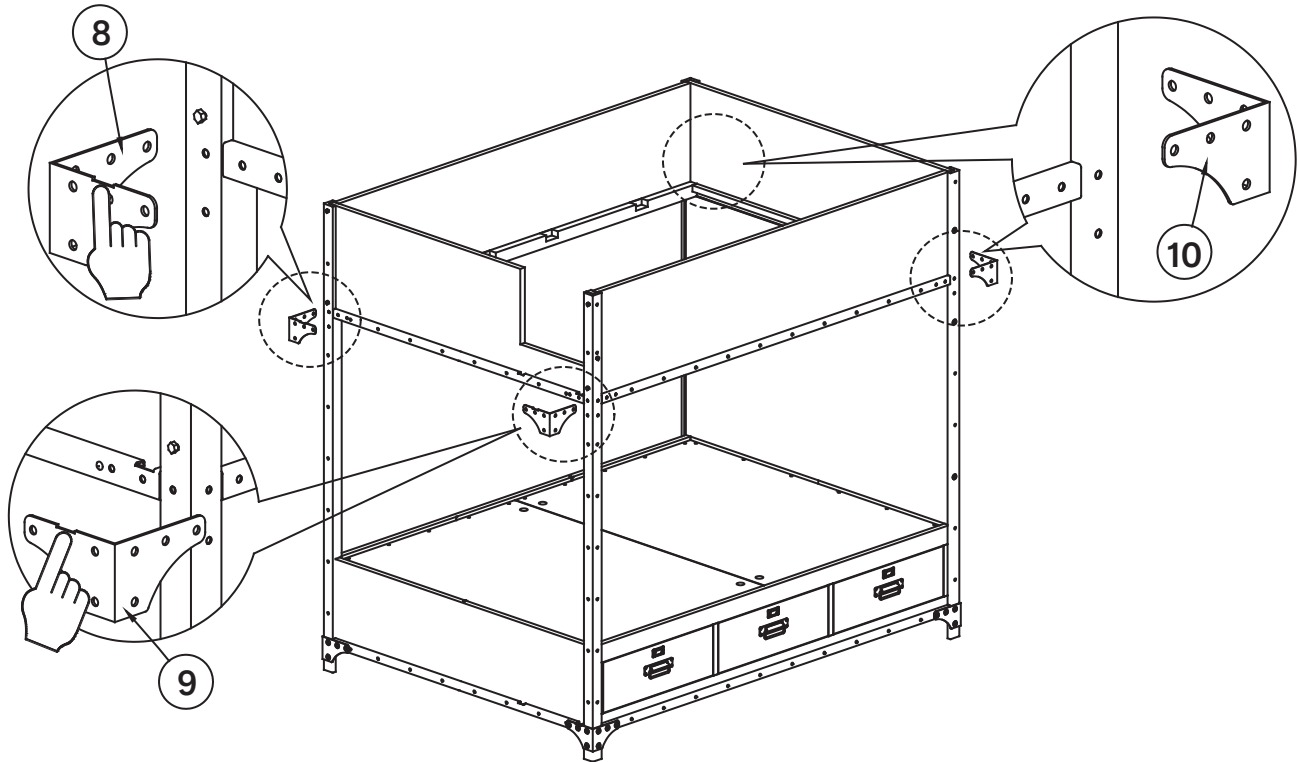

STEP 9:

Insert Small Bolts (6), and tighten with Multi Wrench (2).

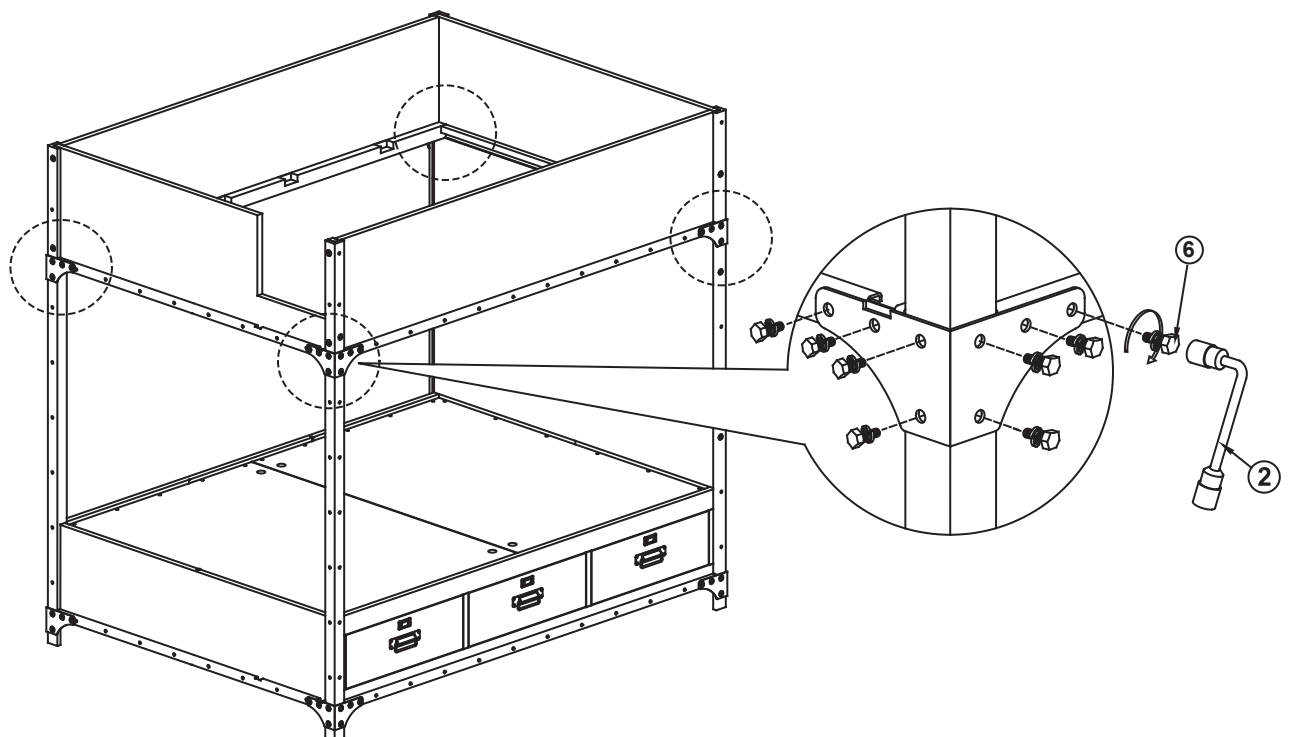



RHBABY&CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

STEP 10:

Position the Ladder (L) in the opening between the footboard. Hook the Ladder (L) over the cross bar of Back Side Rail (E) and Base Bed (K).

Then insert Short Bolt (5), and tighten with Multi Wrench (2).

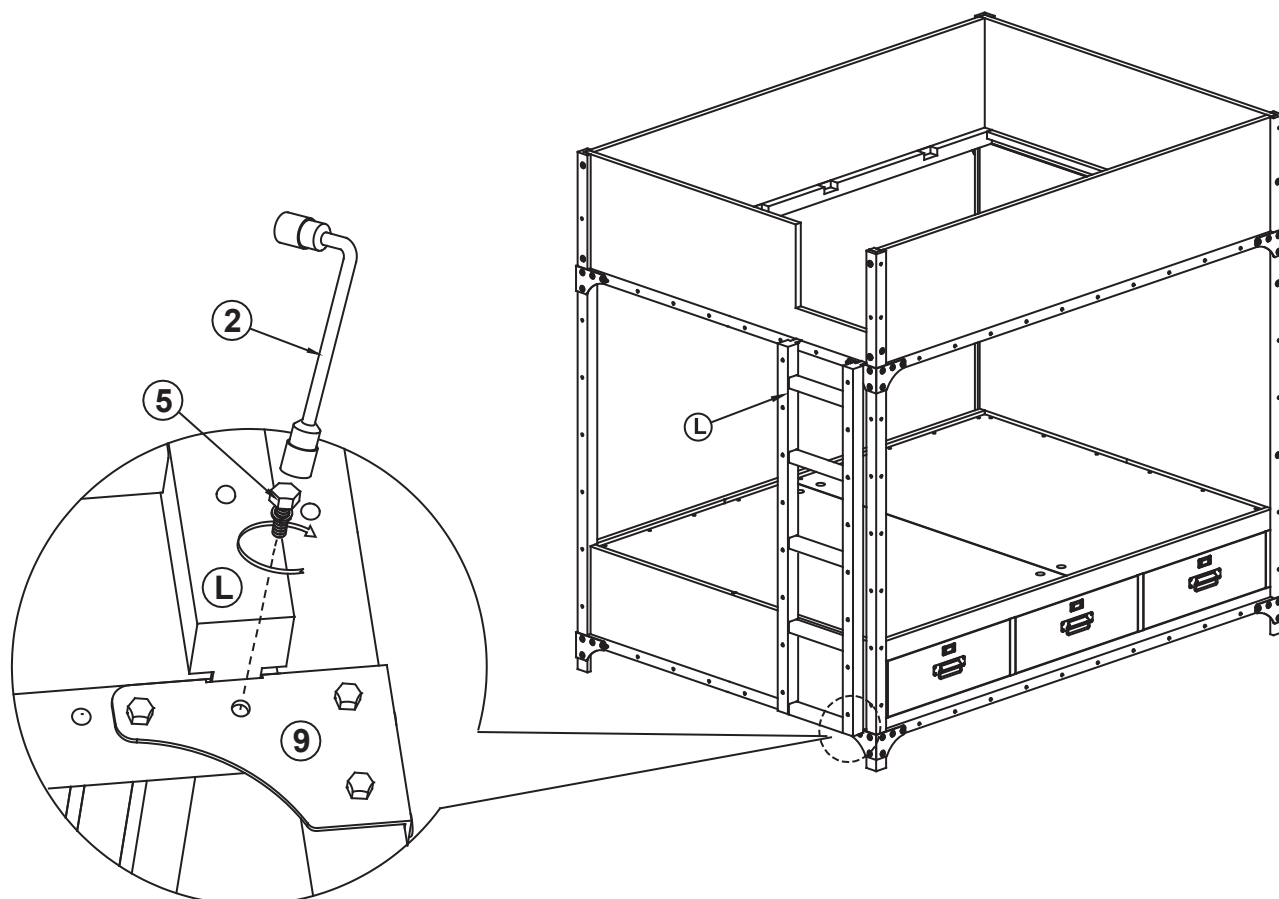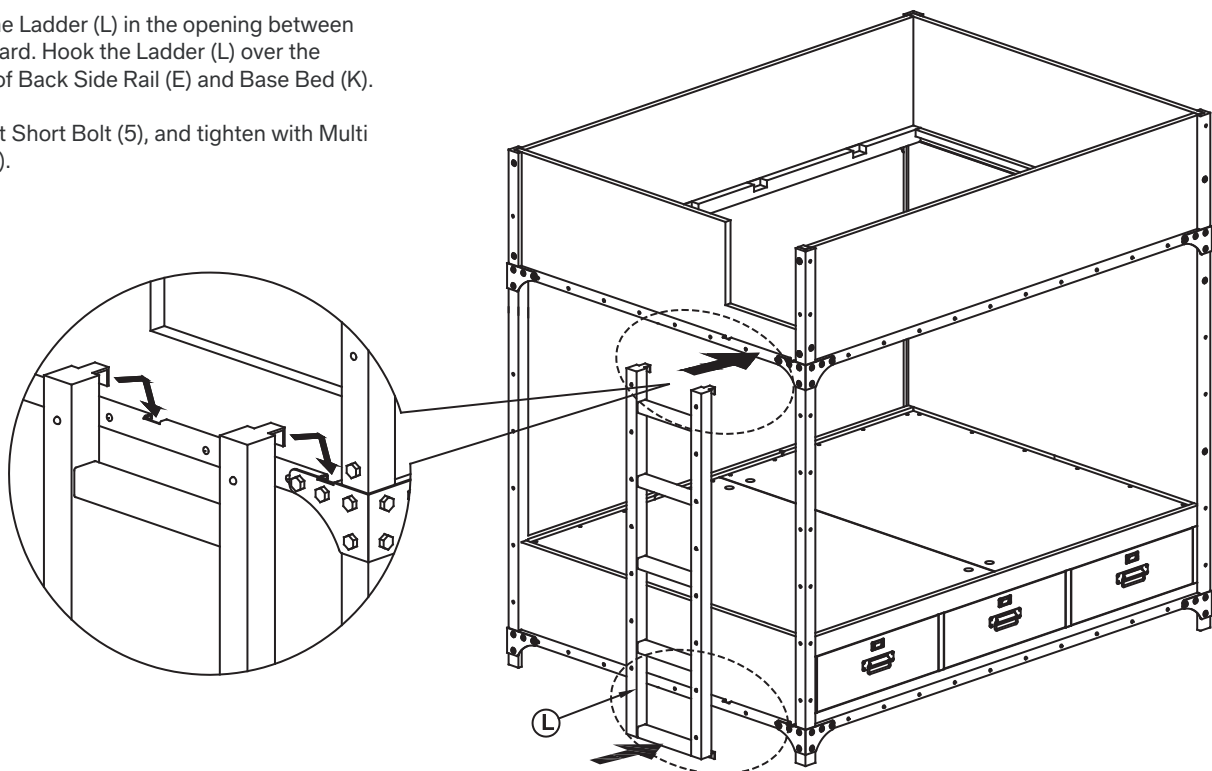


RHBABY&CHILD

Model No: 178 - 1/ 2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED


STEP 11:

Lay the Stretcher Bars (I) between the Long Side Rails (H), then tighten using Screws (7) and Phillips - head screwdriver (not included).

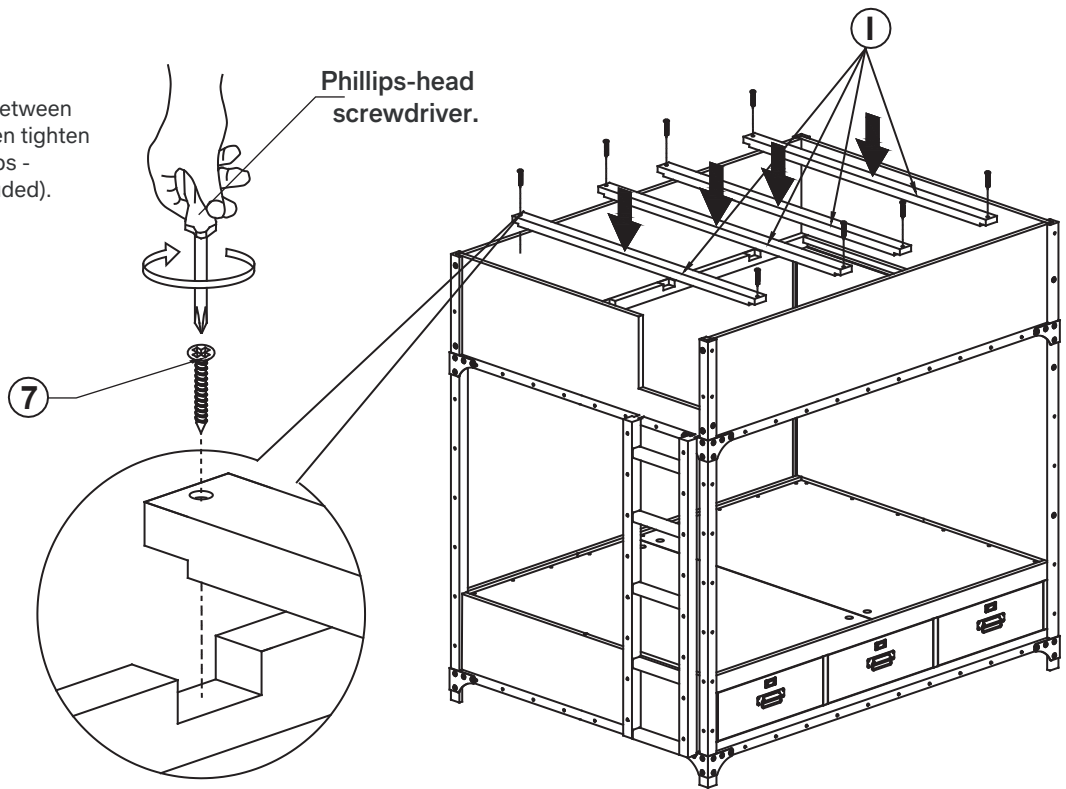

STEP 12:

Lay the Top Platform Panels (J) on top of the Stretcher Bars (I) and attach using Qty.24 Screws (7) with Phillips-head screwdriver.

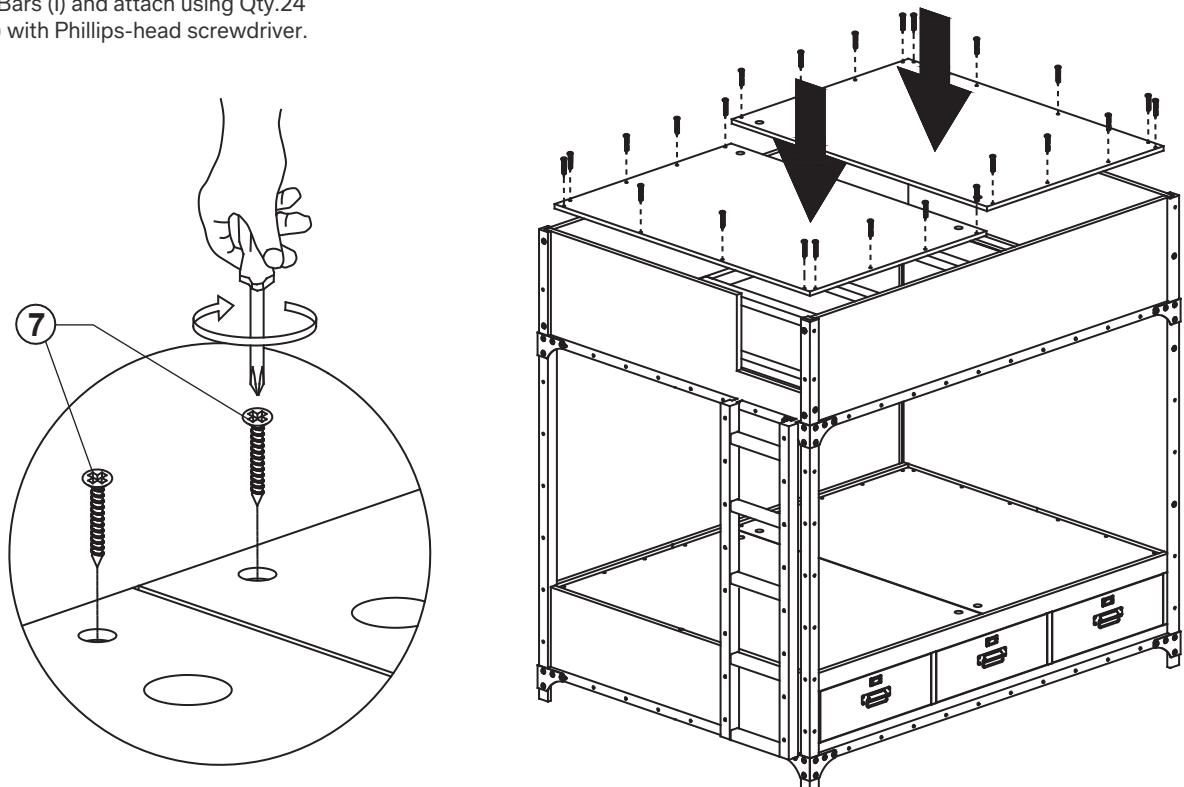

RH BABY & CHILD

Model No: 178 - 1/2
INDUSTRIAL LOCKER TWIN/FULL BUNK BED

STEP 13: INSTALL BEDDING

BEDDING SPECIFICATIONS FOR TOP BUNK:

The following size mattress and Foundation are specified for use with this Bunk bed:

MATTRESS DIMENSION SPECIFICATIONS FOR TOP BUNK

Twin - over - twin bunk: 75" long x 38" wide x 6" thick

Full - over - full bunk: 75" long x 53" wide x 6" thick

MATTRESS DIMENSION SPECIFICATIONS FOR LOWER BUNK

Twin - over - twin bunk: 75" long x 38" wide x 10" thick

Full - over - full bunk: 75" long x 53" wide x 10" thick

PLATFORM :

-Twin - over - twin bunk: Upper bed consists of 2 pcs platform 37 3/4" long x 38 3/4" wide x 3/4" thick & bottom bed consists of 14 pcs slats 38 3/4" long x 2 1/2" wide x 3/4" thick.


-Full - over - full Bunk: Upper bed consists of 2 pcs platform 37 3/4" long x 53 7/8" wide x 3/4" thick & bottom bed consists of 14 pcs slats 53 7/8" long x 2 1/2" wide x 3/4" thick.

****Note: MATTRESS THICKNESS MUST NOT EXCEED MAX 6" FOR TOP BUNK.**

Be sure to adhere to these BEDDING SPECIFICATIONS in order to avoid the possibility of falling or entrapment.

THESE SPECIFICATIONS MUST BE STRICTLY ADHERED TO !

UPPER BUNK MATTRESS DIAGRAM

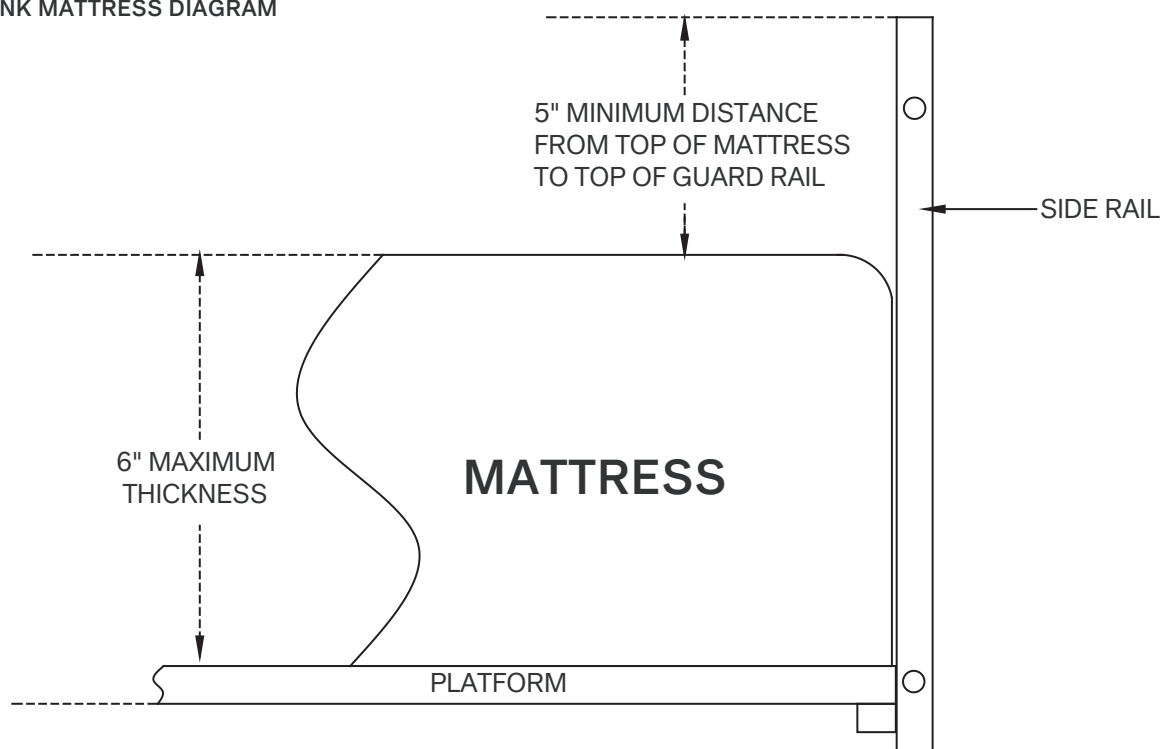

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.