

CALLUM QUEEN PLATFORM CANOPY BED WITH HEADBOARD INSTRUCTIONS

PARTS INCLUDED:

A [1] HEADBOARD PANEL
 B [2] HEADBOARD POST
 C [2] FOOTBOARD POST
 D [2] LONG SIDE RAIL
 E [2] SHORT SIDE RAIL
 F [1] SLAT ROLL
 G [2] LONG CANOPY RAIL
 H [2] SHORT CANOPY RAIL
 I [4] SUPPORT LEG

TOOLS NEEDED:












Phillips Head Screwdriver (not included)

ASSEMBLY INSTRUCTIONS:


Note: Two adults are recommended to assemble this bed.

1. Attach the Long Side Rail (D) to the Short Side Rails (E).


| NO. | ITEM | DESCRIPTION | QTY. |
|-----|---|--------------------------|---------|
| 1 |  | Long Bolt 5/16" x 2-1/4" | 20 pcs. |
| 2 |  | Flat Washer 5/16" | 20 pcs. |
| 3 |  | Spring Washer 5/16" | 20 pcs. |
| 4 |  | Long Screws M8 x 30mm | 28 pcs. |
| 5 |  | Short Screw M8 x 15mm | 20 pcs. |
| 6 |  | Allen Key 4mm | 1 pc. |
| 7 |  | Connecting Bolt 6mm | 4 pcs. |
| 8 |  | Camlock Wheel | 4 pcs. |

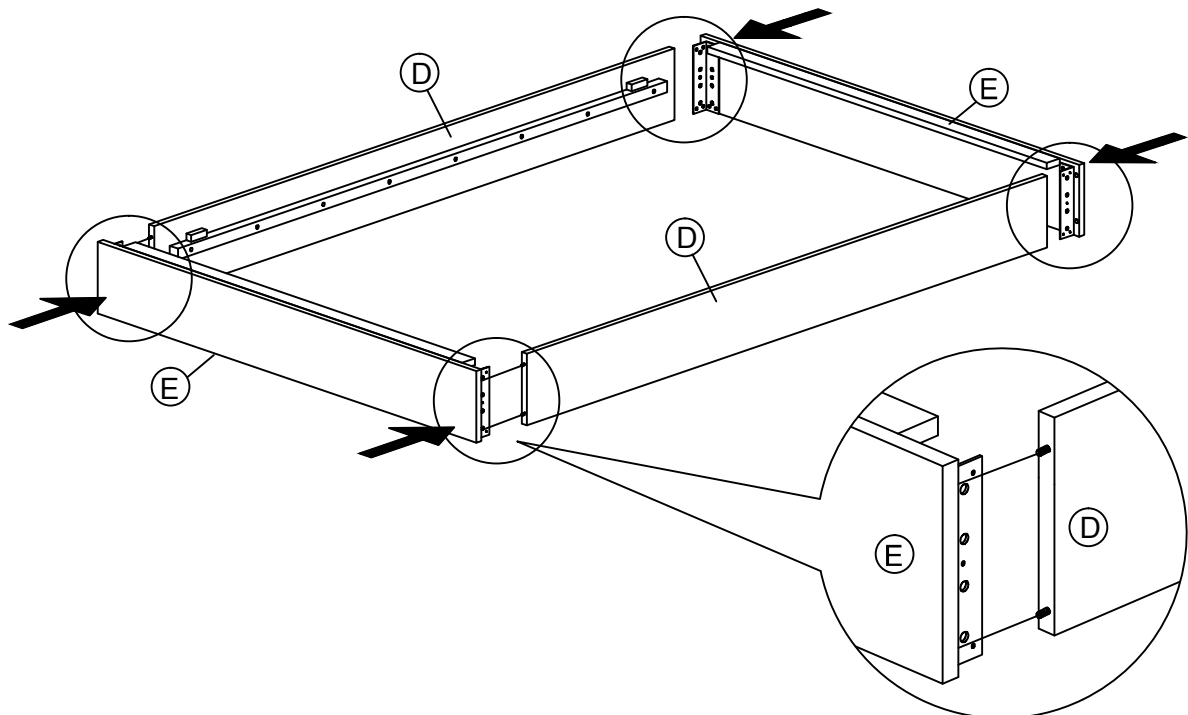

2. Attach the Short Side Rails (E) to the Long Side Rail (D) using Short Screws (5), and tighten with Philips Head Screwdriver (not included).

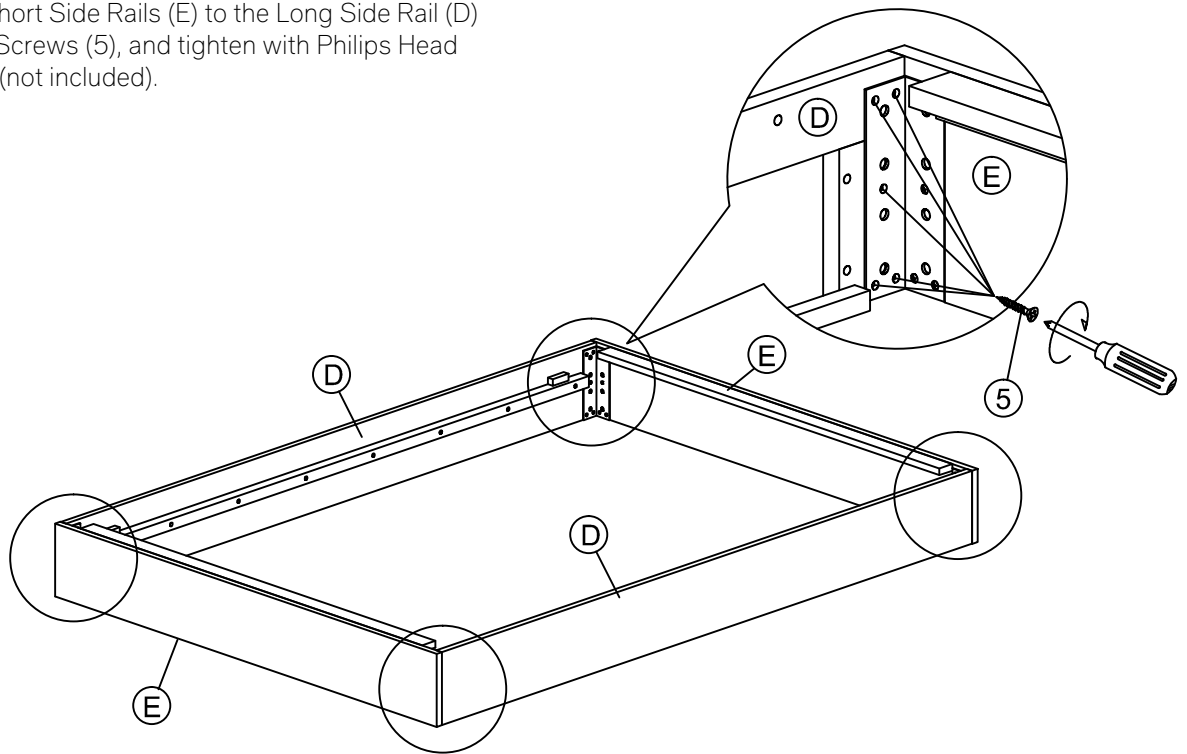



3. Place the hooks of the Headboard Panel (A) into the slots in the Headboard Post (B). If necessary, using a thick magazine or book to protect the Headboard Panel (A), hammer with a mallet or hammer until tight.

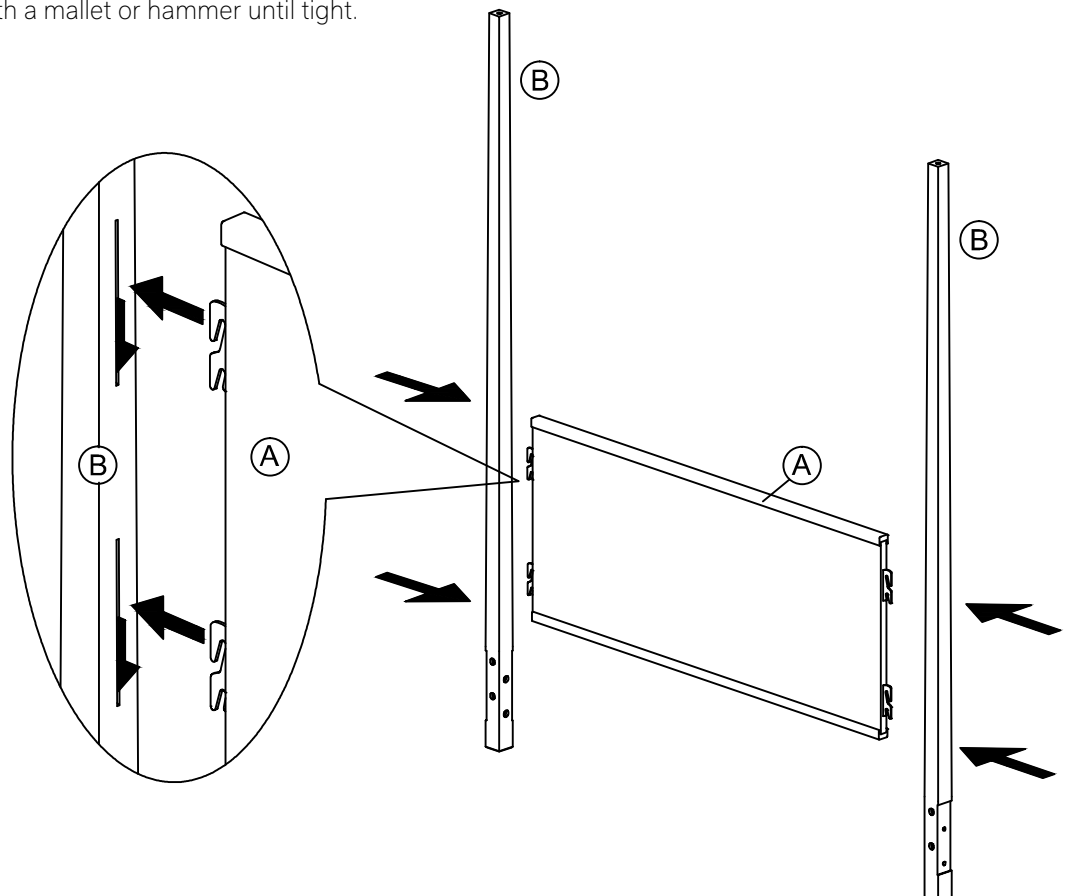


4. Attach the Headboard Posts (B) and Footboard Posts (C) to the Bed Base.

Note:

- Bolts on Headboard/ Footboard are located in the 1st and 3rd bolt locations.
- Bolts on the Side Rails are located in the 2nd and 4th hole locations.
- Repeat steps for all 4 corners.
- Footboard Posts are interchangeable.

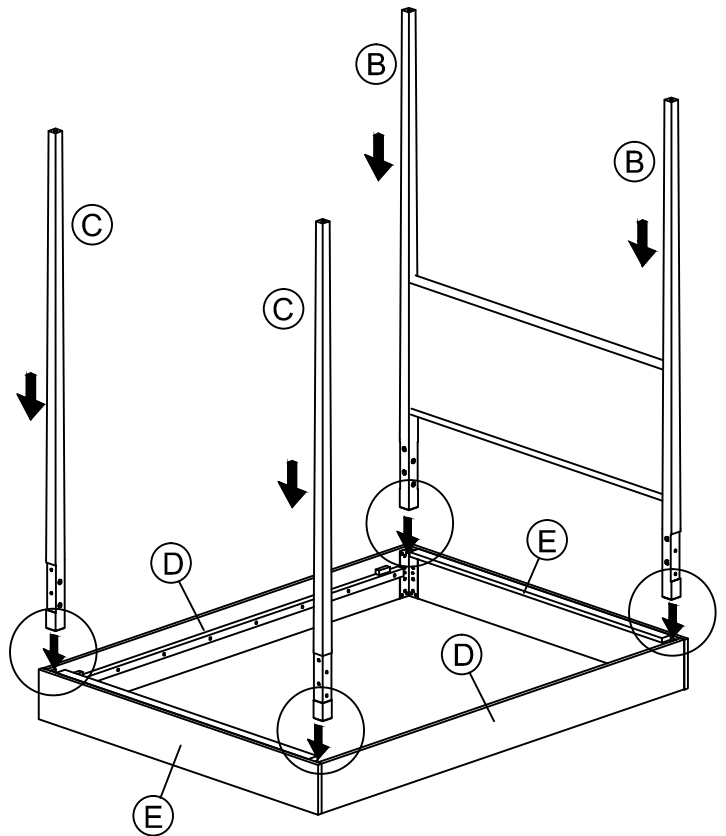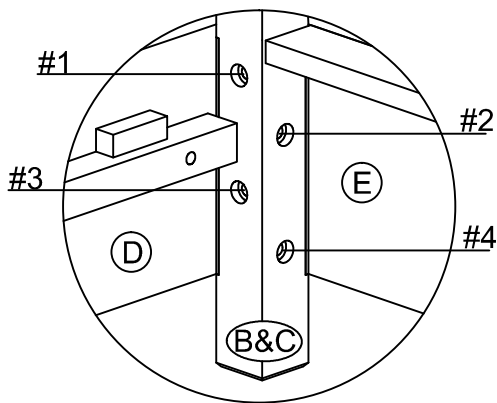


5. Insert Flat Washer (2), Spring Washer (3), and Long Bolt (1) and tighten with Allen Key (6).

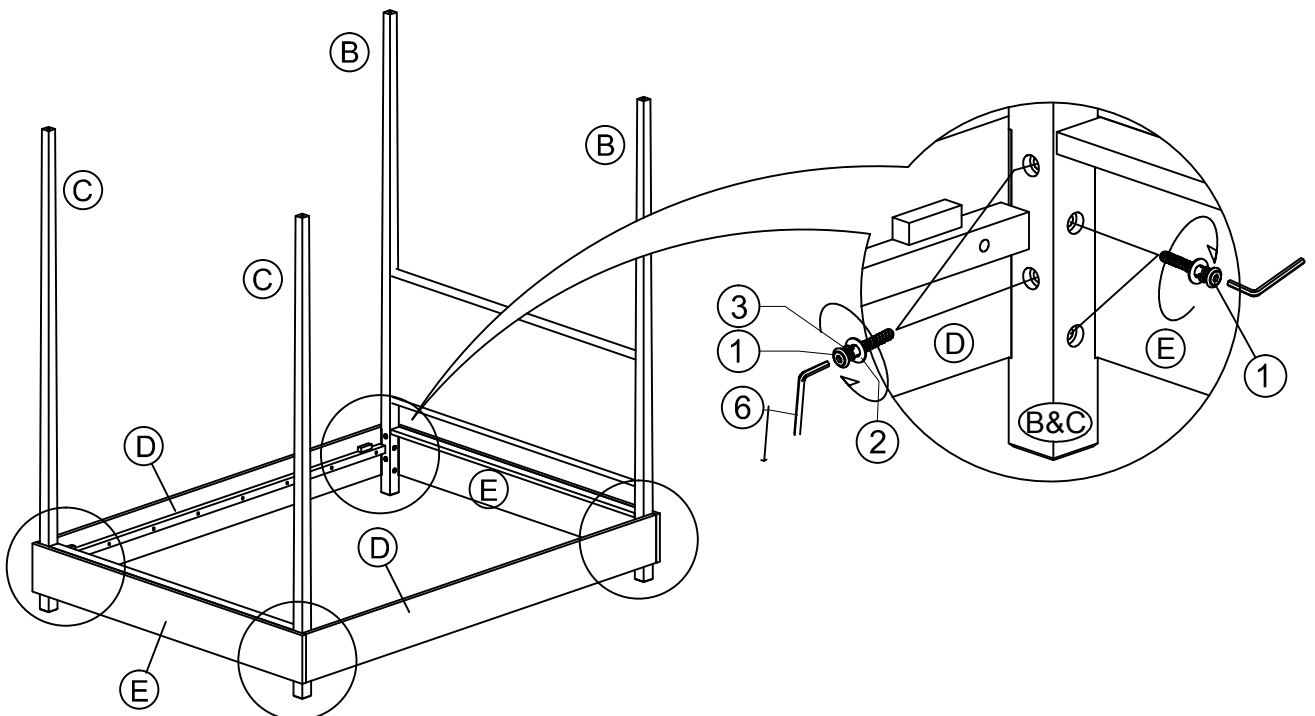

6. Insert Connecting Bolt (7) to the Short Canopy Rail (H). Then secure the Long Canopy Rail (G) to the Short Canopy Rail (H). Place Camlock Wheel (8) into the holes inside of the Long Canopy Rail (G) by aligning the arrow sign of the Camlock Wheel (8) to the Short Canopy Rail (H) and twist to tighten clockwise direction using Allen Key (6).


7. Repeat the same procedure to the other 3 connection points of canopy set.

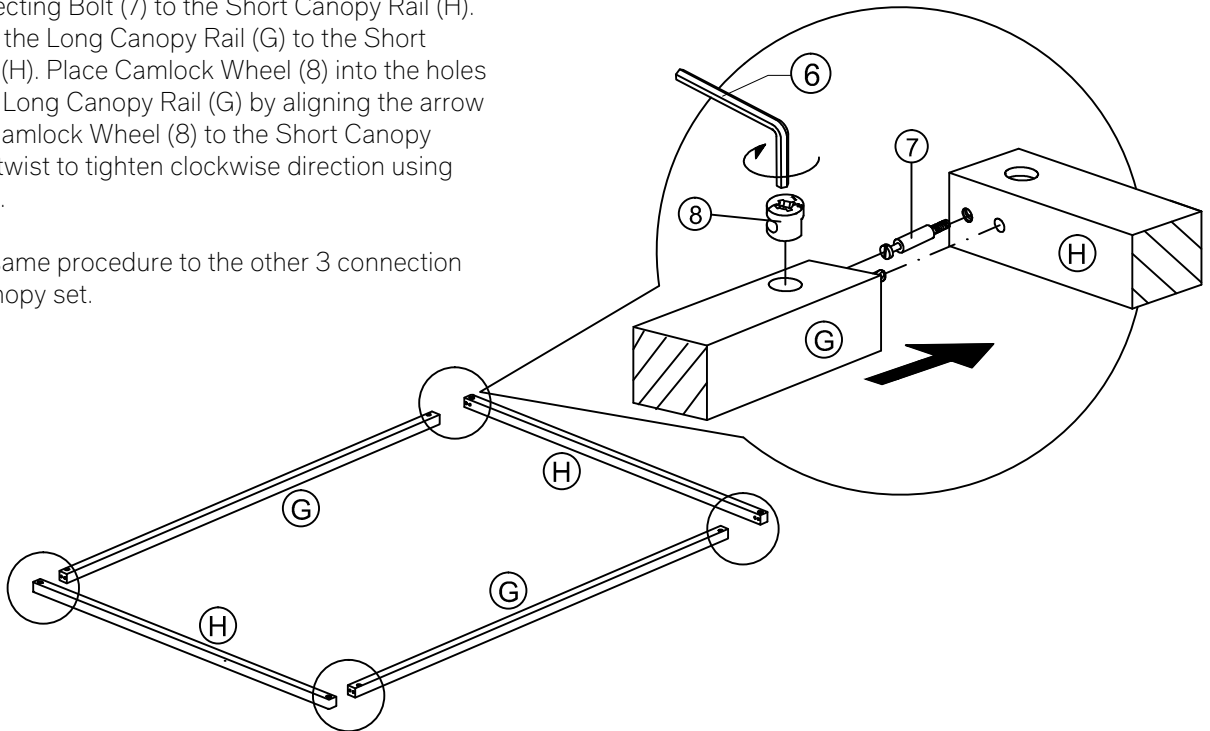


8. This final procedure should be done by two people working together to carefully lift assembled canopy and place on top of bed posts. Insert the Flat Washer (2), Spring Washer (3), Long Bolt (1) into the holes of Short Canopy Rails (H). Tighten with Allen Key (6).

ASSEMBLY ALERT

- Make sure the canopy rails are put together before place on top of the posts.
- Assembling the canopy: suggest to insert all bolts before fully tighten all 4 corners.

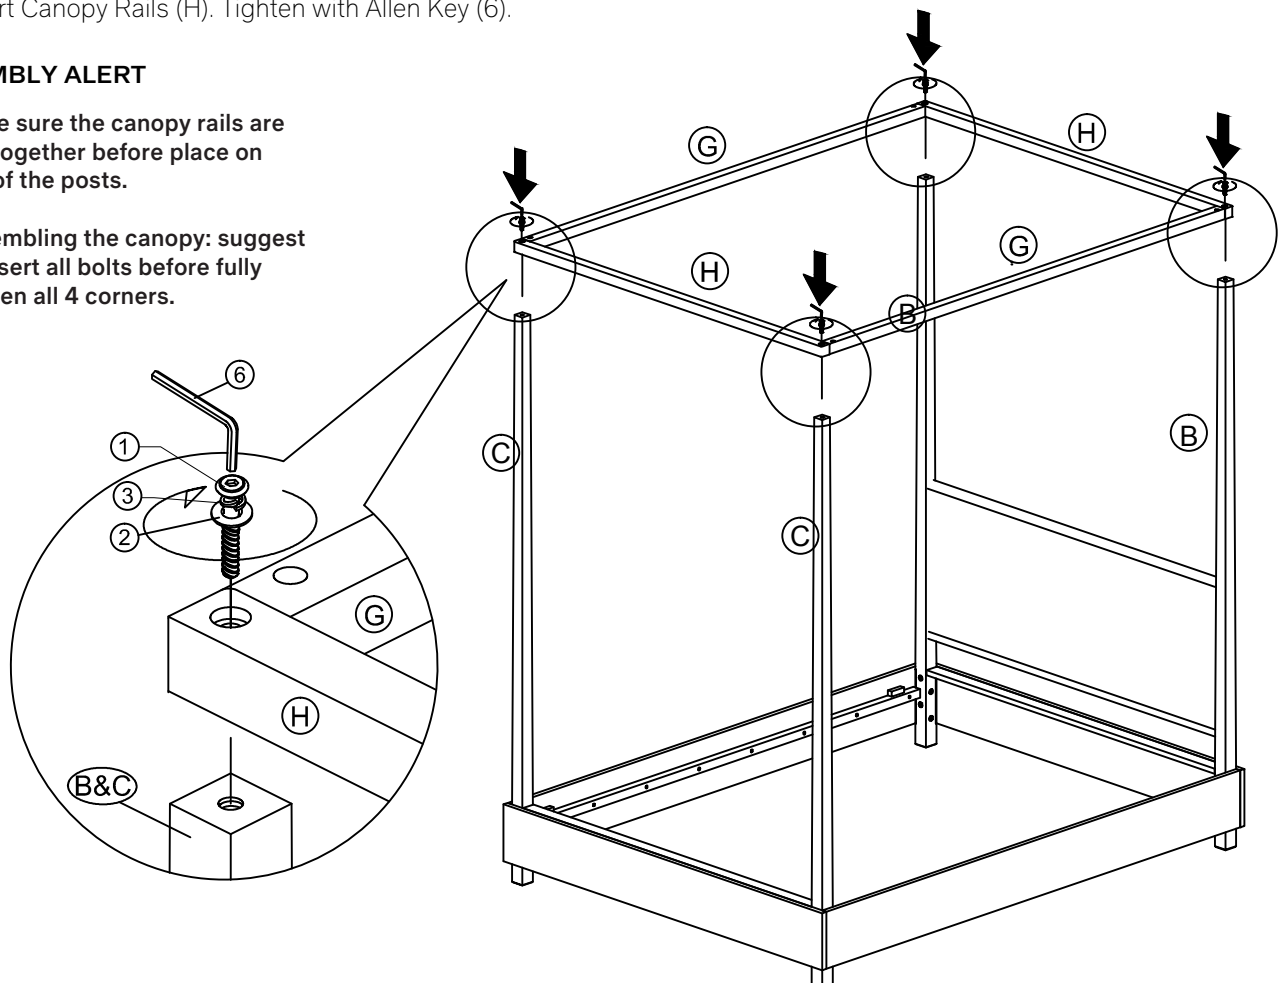


9. Tighten the Support Legs (I) to the Slat Roll (F).
Then lay the Slat Roll (F) in between the Long
Side Rails (D).

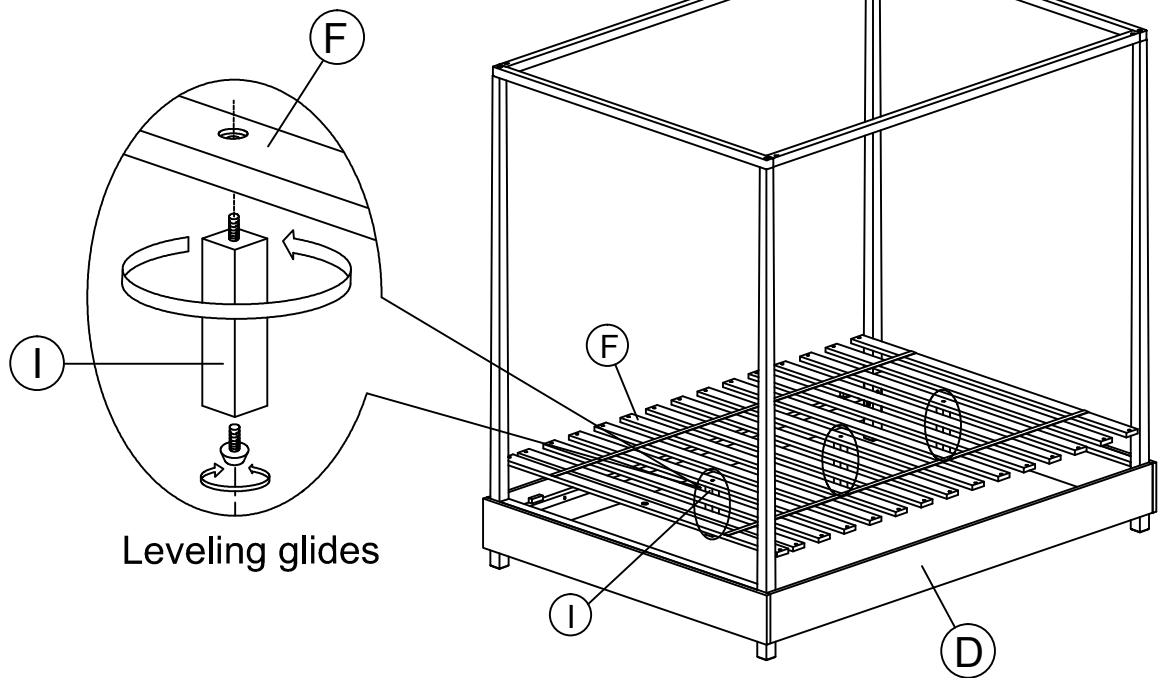

10. Attach the Slat Roll (F) onto the Long Side Rails (D) by
using Long Screws (4), and tighten with a screwdriver.

Assembly is completed

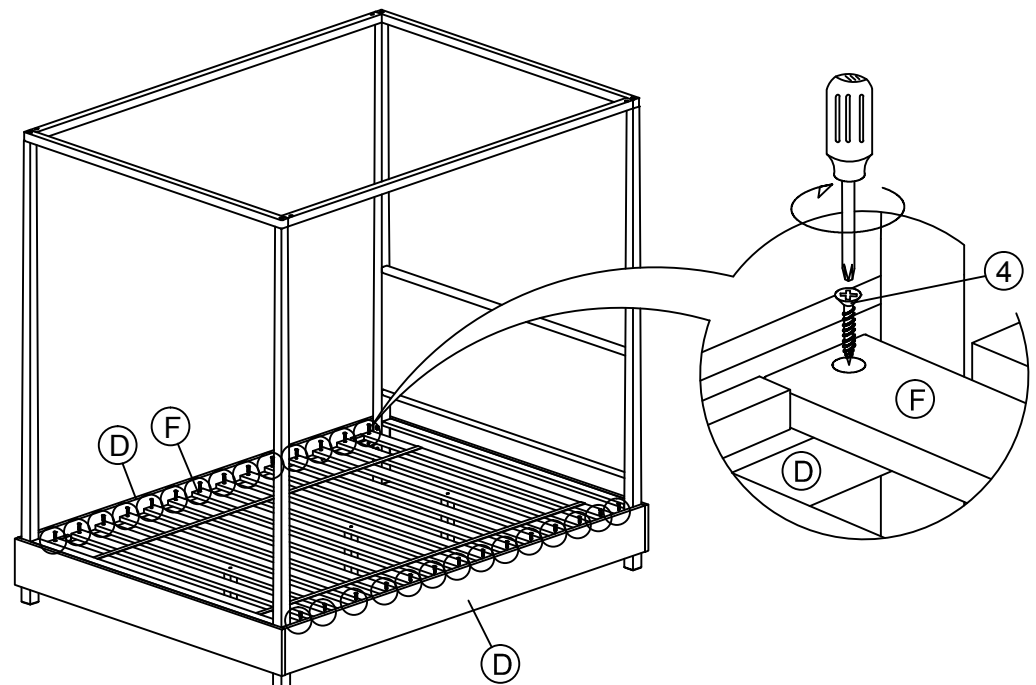

CARE INSTRUCTIONS:

1. Dust often using a clean, soft, dry lint-free cloth.
2. Blot spills immediately, and wipe with a clean, damp cloth.
3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.