


RHBABY&CHILD

CALLUM TWIN/ FULL PLATFORM CANOPY BED WITH HEADBOARD

PARTS INCLUDED:

- A [1] HEADBOARD PANEL
- B [2] HEADBOARD POST
- C [2] FOOTBOARD POST
- D [2] LONG SIDE RAIL
- E [2] SHORT SIDE RAIL
- F [1] SLAT ROLL
- G [2] LONG CANOPY RAILS
- H [2] SHORT CANOPY RAILS

TOOLS NEEDED:



Phillips-Head Screwdriver (not included)











ASSEMBLY INSTRUCTIONS:


Note:

Two adults are recommended to assemble this bed.

STEP 1:

Attach the Long Side Rails (D) to the Short Side Rails (E).

NO.	ITEM	DESCRIPTION	QTY.
1		Long Bolt 5/16" x 2-1/4"	20 pcs.
2		Flat Washer 5/16"	20 pcs.
3		Spring Washer 5/16"	20 pcs.
4		Long Screw 8 x 30mm	4 pcs.
5		Short Screws 8 x 15mm	20 pcs.
6		Allen Key 4mm	1 pc.
7		Connecting Bolt 6mm	4 pcs.
8		Assembling Insert	4 pcs.
9		Camlock Wheel	4 pcs.
10		Allen Key 5mm	1 pc.

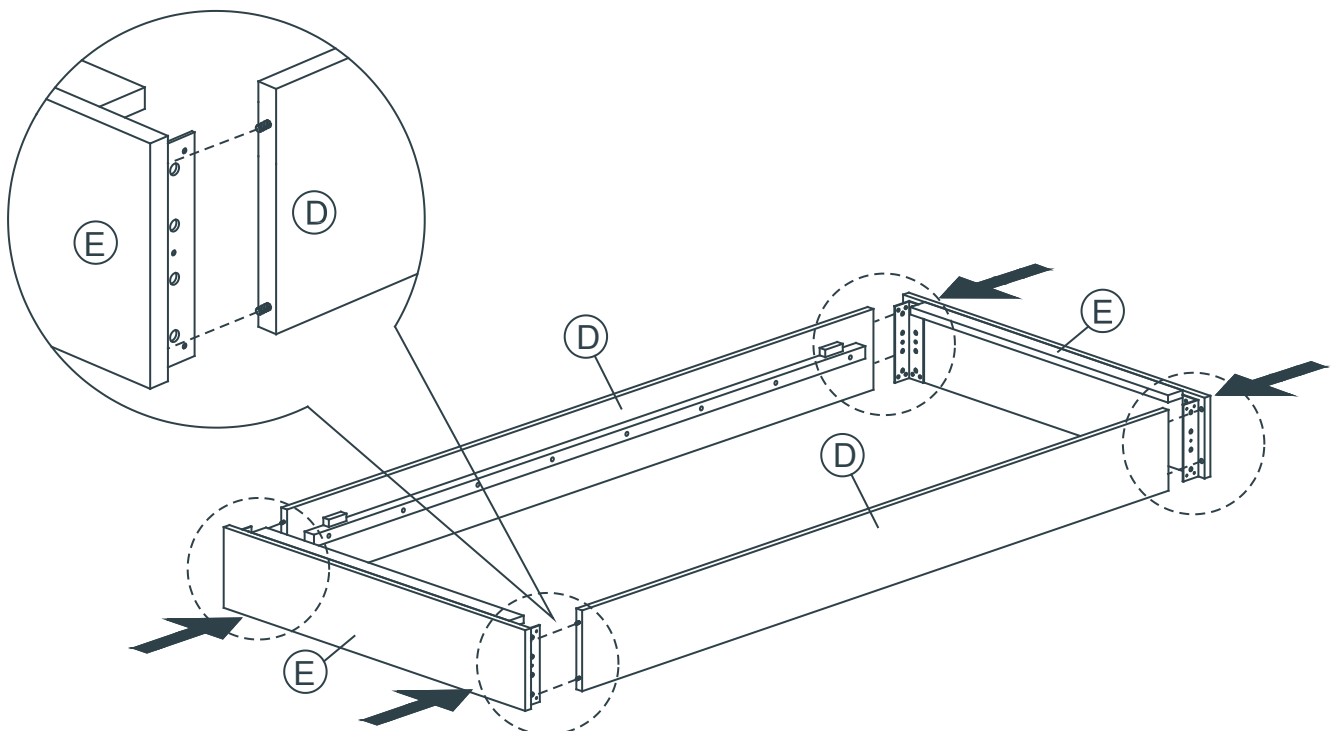


RHBABY&CHILD

CALLUM TWIN/ FULL PLATFORM CANOPY BED WITH HEADBOARD


STEP 2:

Attach the Short Side Rails (E) to the Long Side Rail (D) using Short Screws (5), and tighten with Phillips Head Screwdriver (not included).

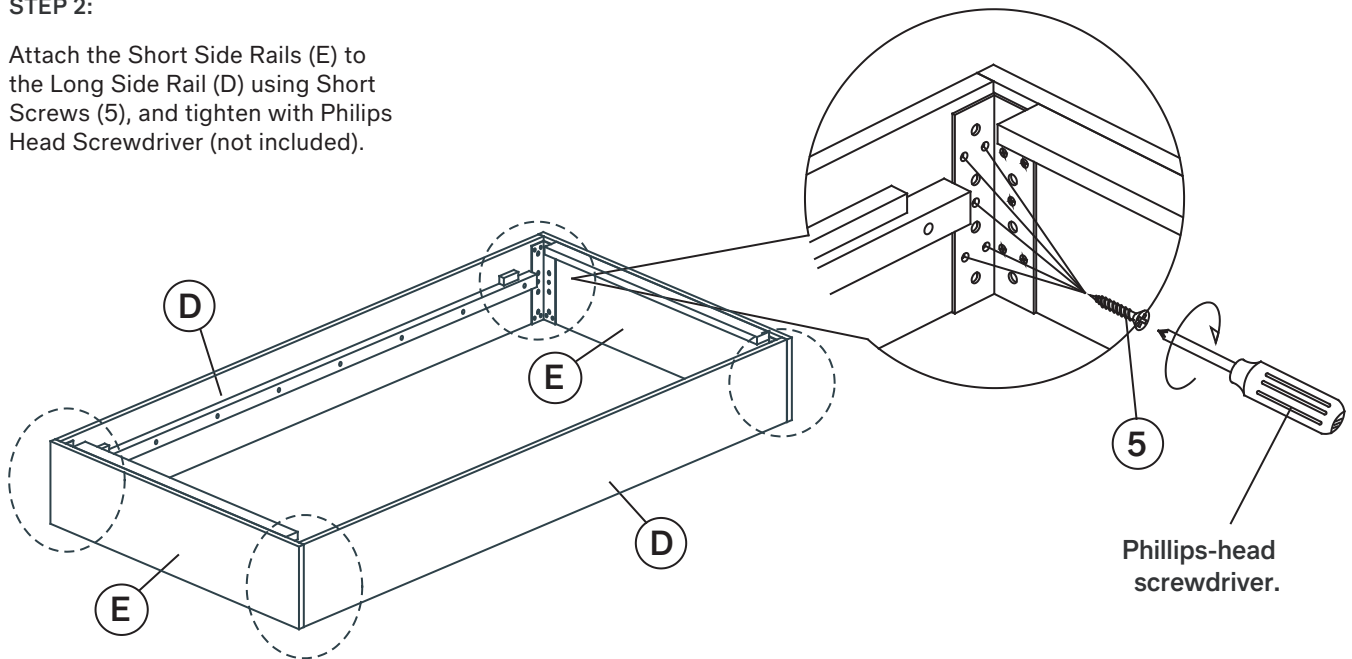

STEP 3:

Place the hooks of the Headboard Panel (A) into the slots in the Headboard Post (B). If necessary, using a thick magazine or book to protect the Headboard Panel (A), hammer with a mallet or hammer until tight.

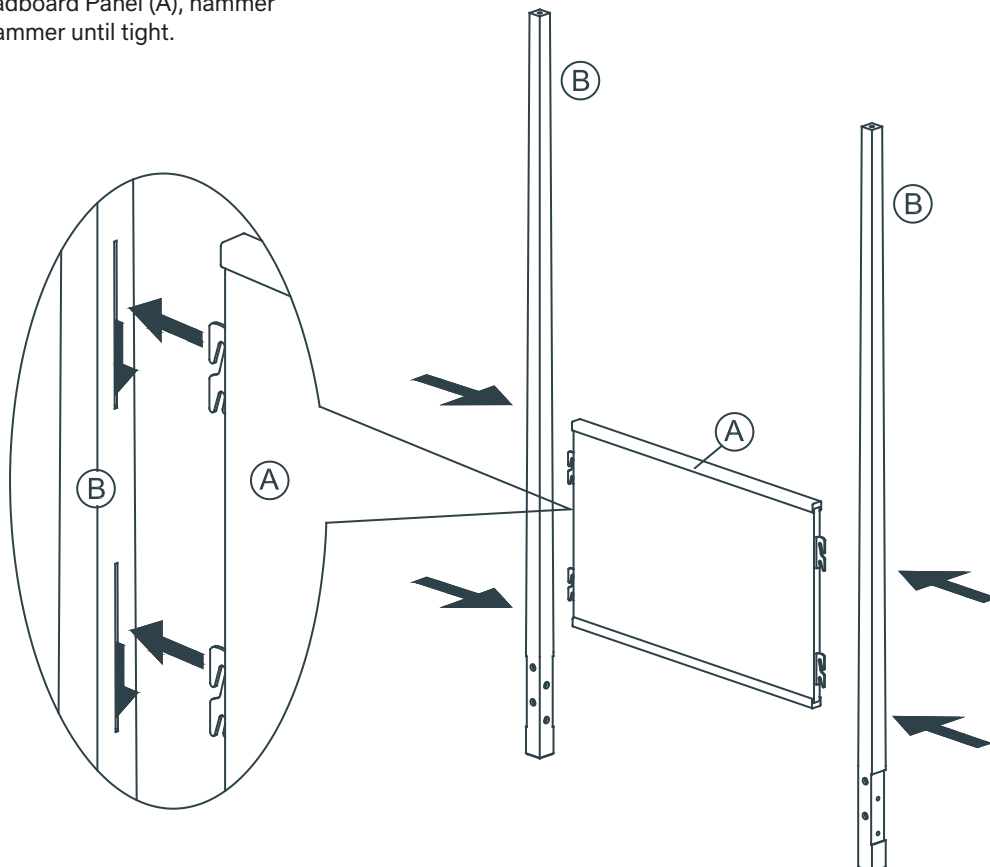

RHBABY&CHILD



CALLUM TWIN/ FULL PLATFORM CANOPY BED WITH HEADBOARD

STEP 4:

Attach the Headboard Posts (B) and Footboard Posts (C) to the Bed Base.



Note:

- Bolts on Headboard/ Footboard are located in the 1st and 3rd bolt locations.
- Bolts on the Side Rails are located in the 2nd and 4th hole locations.
- Repeat steps for all 4 corners.
- Footboard Posts are interchangeable.

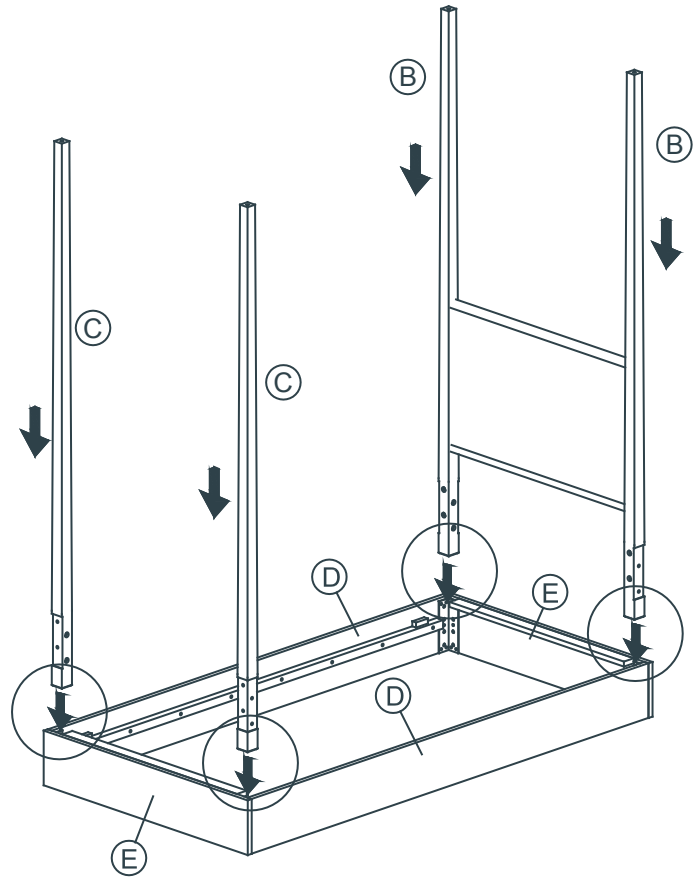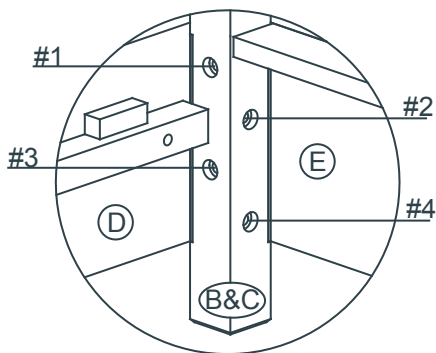


STEP 5:

Insert Flat Washer (2), Spring Washer (3), and Long Bolt (1) and tighten with Allen Key (6).

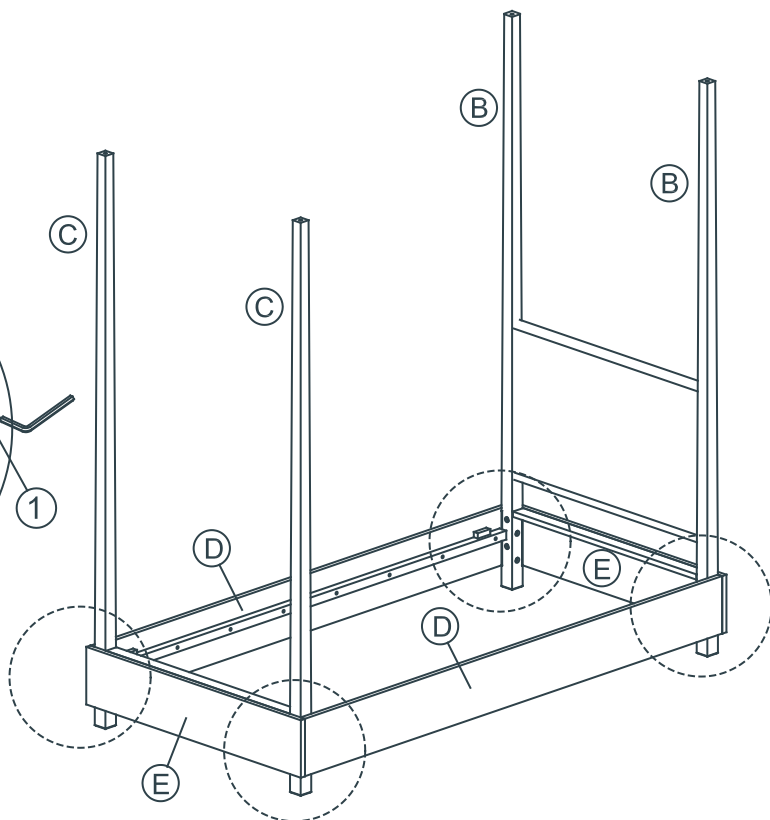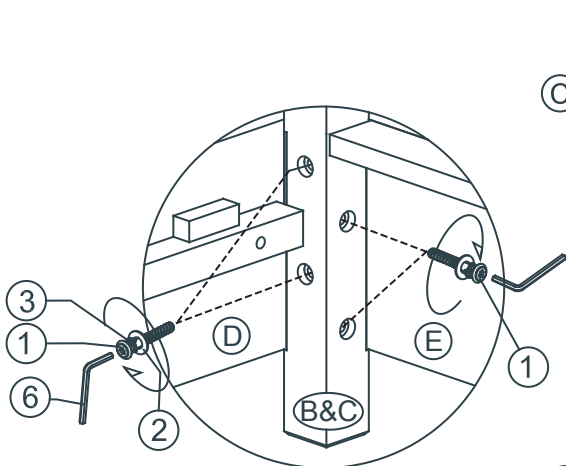


STEP 6:

Insert the Connecting Bolts (7) into the Short Canopy Rails (H).

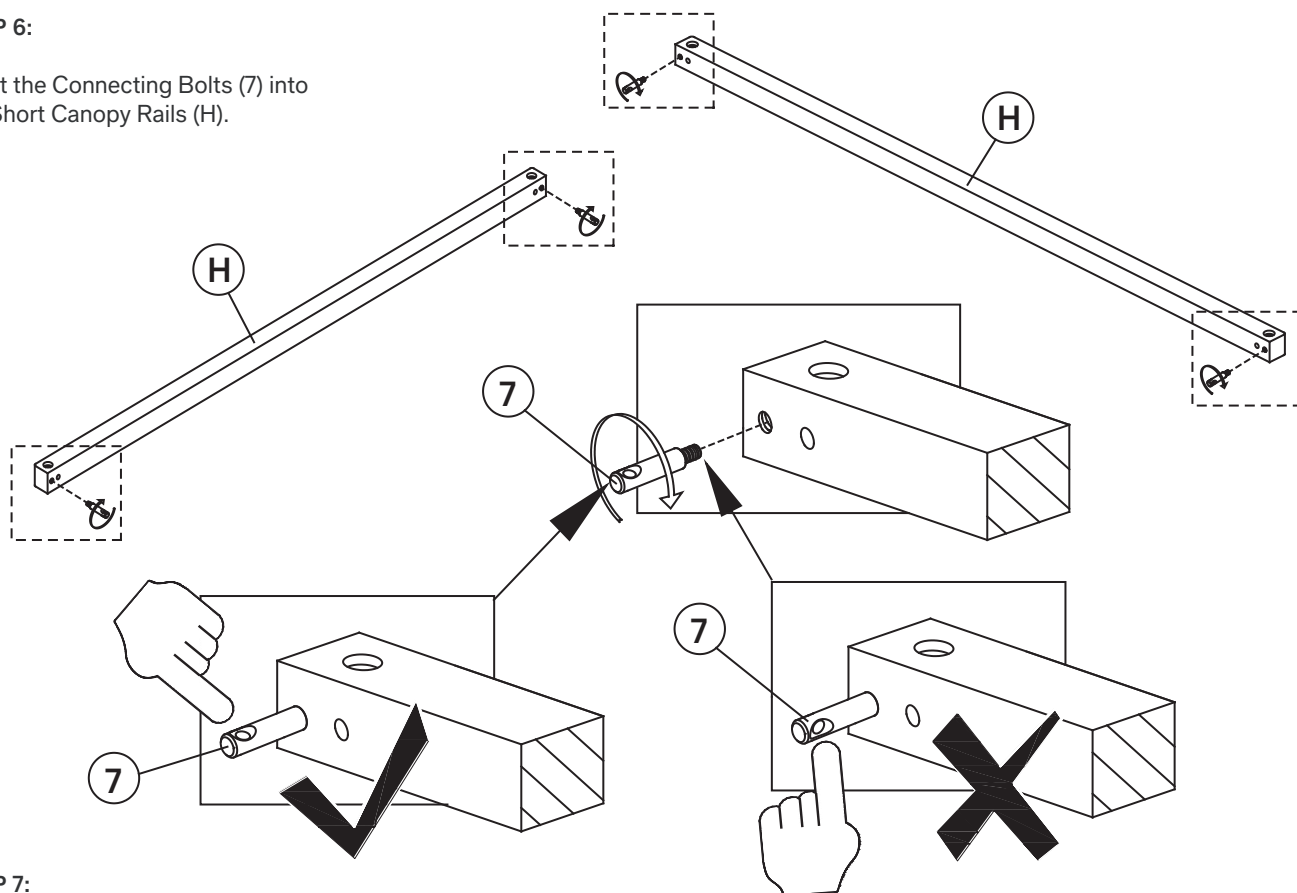

STEP 7:

Secure the Short Canopy Rails (H) to the Long Canopy Rails (G). Place Assembling Insert (8) into the holes inside of the Long Canopy Rails (G) by aligning the hole of the Assembling Insert (8) to the Connecting Bolt (7). Then, insert the Camlock Wheel (9) into Assembling Insert (8) and twist to tighten by counter clockwise direction using Allen Key (10).


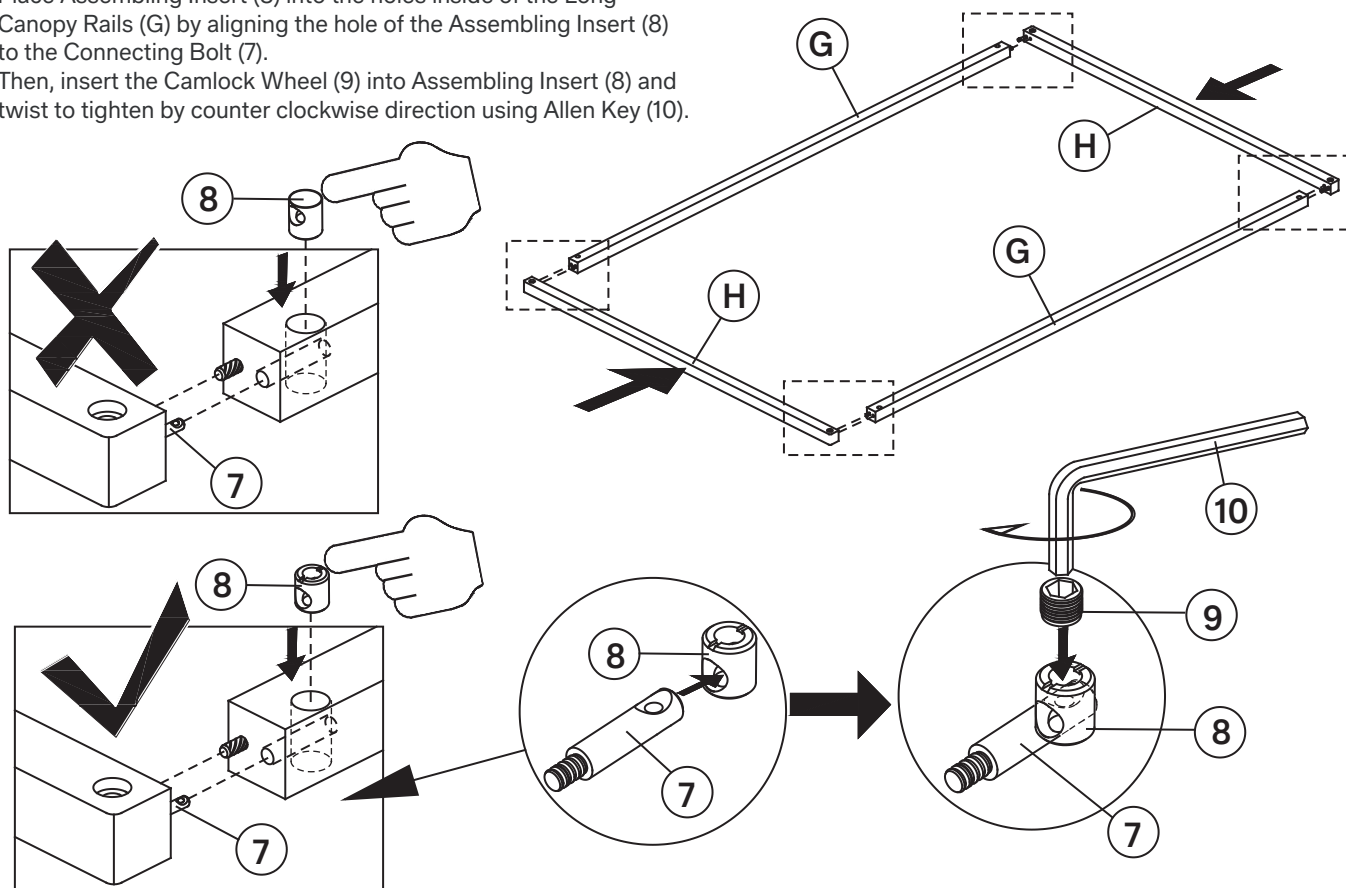


STEP 8:

This final procedure should be done by 2 people working together to carefully lift assembled canopy and place on top of bed posts. Insert the Flat Washer (2), Spring Washer (3), Long Bolt (1) into the holes of Short Canopy Rails (H). Tighten with Allen Key (6). (See drawing below)


ASSEMBLY ALERT

- Make sure the canopy rails are put together before place on top of the posts.
- Assembling the canopy: suggest to insert all bolts before fully tighten all 4 corners.

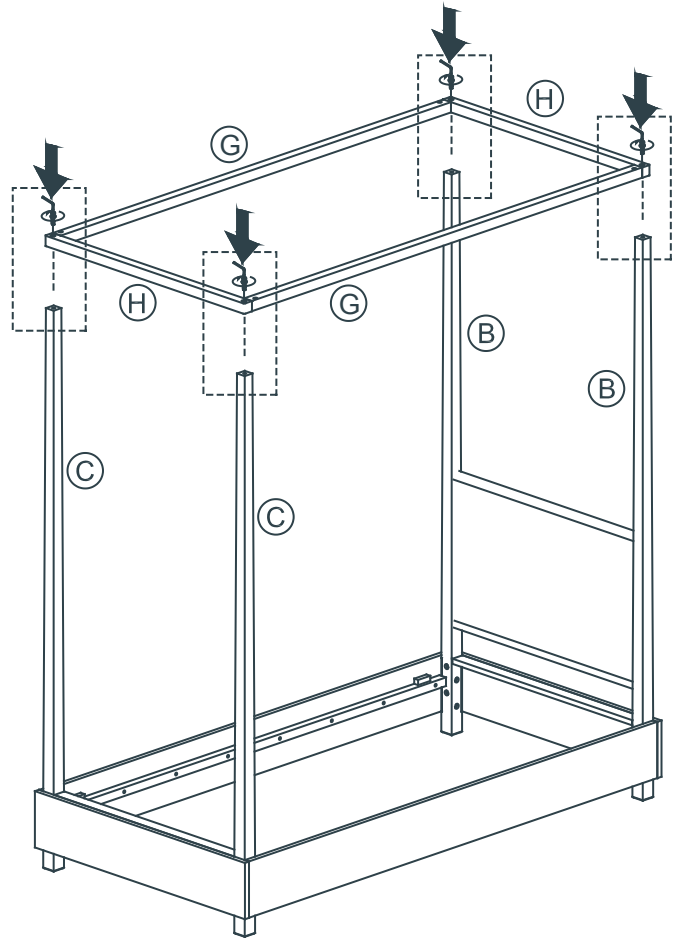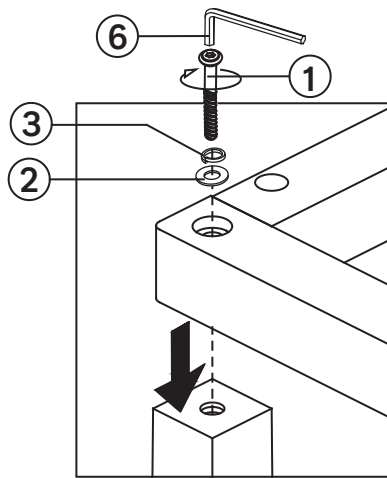

STEP 9:

Lay the Slat Roll (F) in between the Long Side Rails (D), using Long Screws (4) to tighten slats to the side rails with a screwdriver.

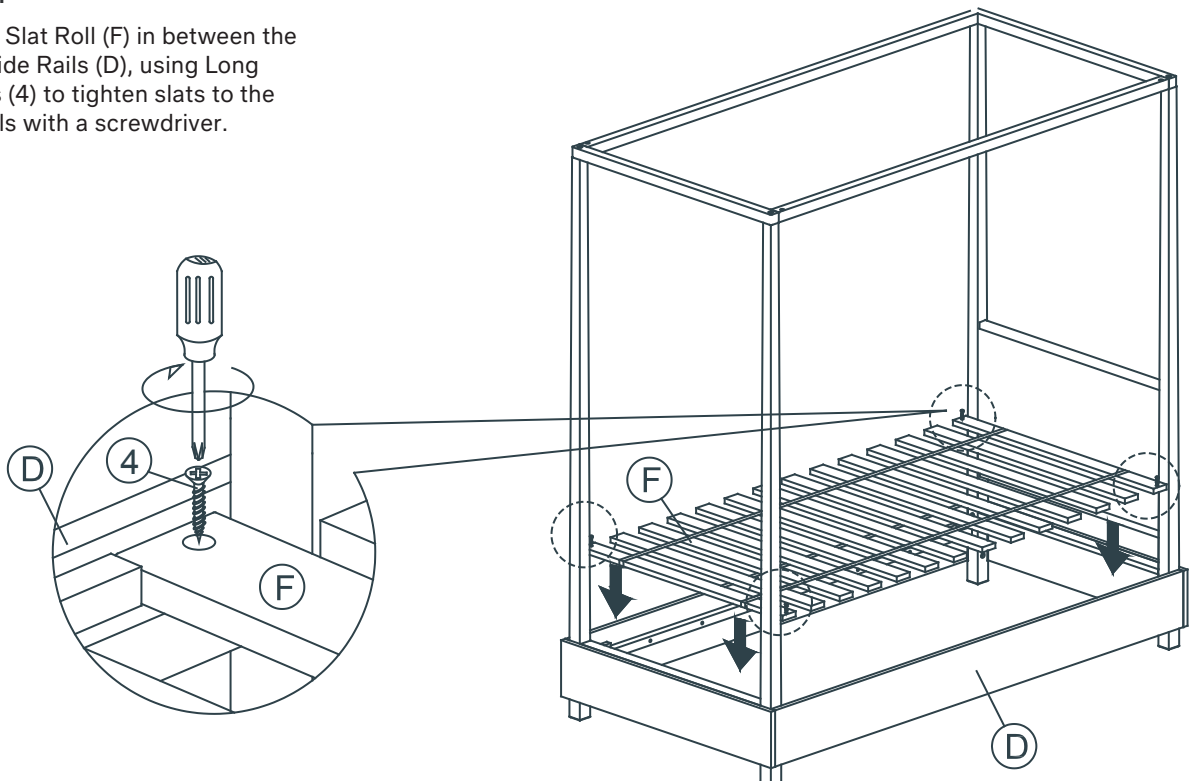


RH BABY & CHILD

CALLUM TWIN/ FULL PLATFORM CANOPY BED WITH HEADBOARD

STEP 10:

Assembly is completed.

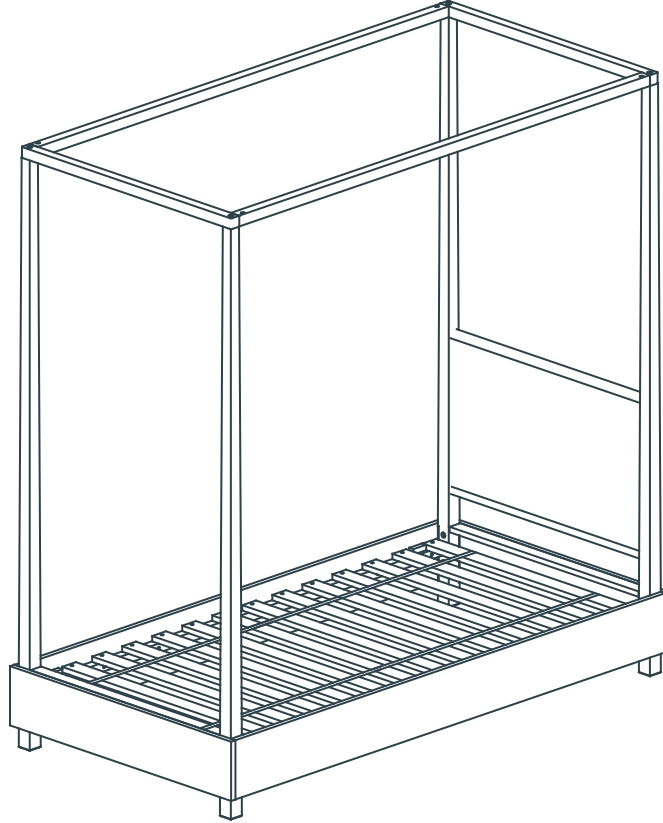

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.