

DEVYN DAYBED WITH STORAGE

PARTS INCLUDED

A [2] Side Panel

B [1] Front Panel

C [1] Headboard

D [1] Storage

E [4] Slats

F [2] Patform Panels

NO	HARDWARE & PARTS ENCLOSED		QTY
1		Screw	8 pcs
2	(8) (1) (1) (1)	Allen Head Bolt	8 pcs
3		Allen Wrench	1 pcs

A D B

TOOLS NEEDED:

Phillips Screwdriver (not included)




ASSEMBLY INSTRUCTIONS

- Bed must be assembled by at least two people.
- Please read instructions carefully before assembling bed.
- Use the above parts and hardware list to identify each component.
- Keep all packing materials until assembly is complete to avoid loss of smaller parts.
- 1. Stand the Headboard (C) upright and hook Side Panels (A) into Headboard (C) as shown in the Diagram I.
- 2. Attached the Storage (D) to Side Panels (A) as shown in Diagram II.
- 3. Hook the Front Panel (B) into Side Panels (A) as shown in Diagram III.
- 4. Place the Slat (E) into the cleats on the inside of the Headboard (C) and Front Panel (B). Screw the ends of the Slats (E) to the cleats using Screw (1), as shown in Diagram IV.
- 5. Lay the Patform Panels (F) flat on top of the Slats (E), as shown in Diagram V

CARE INSTRUCTIONS

Spot clean only with a soft, damp cloth,

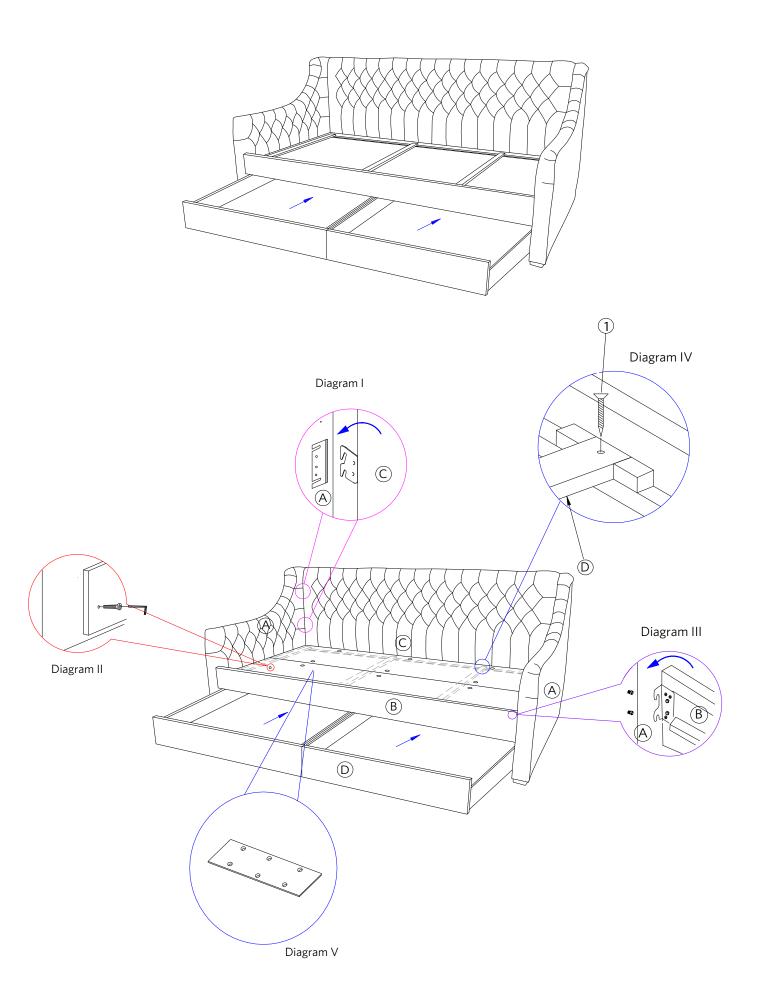

Page 2 of 2