

MOROCCAN WEDDING BLANKET TAPESTRY

PARTS INCLUDED


- (A) FINISHED TAPESTRY
- (B) 44" ROD
- (C) 2 BRACKETS
- (D) 2 SCREWS
- (E) 2 ANCHORS

ASSEMBLY INSTRUCTIONS

- 1. Affix anchors (E) to wall with screwdriver.
- 2. Affix brackets (C) to wall with screws (D).
- 3. Insert rod (B) into the tapestry's (A) pocket.
- 4. Affix the rod and tapestry to the brackets (C).

STEP 1: Affix anchors (E) to wall with screwdriver.

STEP 4: Affix the rod and tapestry to the brackets (C).

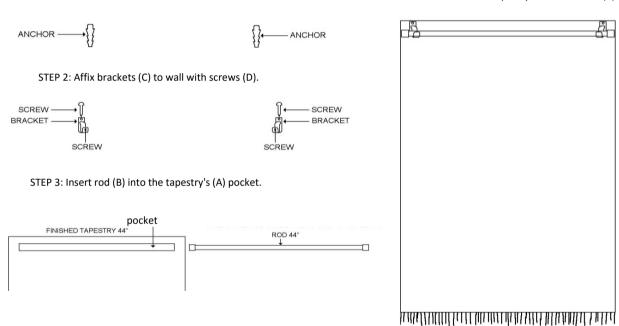

CARE INSTRUCTIONS

1. Spot clean only

IMPORTANT SAFETY INSTRUCTIONS

- 1. Professional installation recommended for assembly.
- 2. Recommended weight capacity for rod is 25 lbs.