






CALLUM PLATFORM QUEEN BED WITH HEADBOARD

PARTS INCLUDED:

- A [1] HEADBOARD
- B [1] HEADBOARD BASE
- C [1] FOOTBOARD
- D [2] SIDE RAILS
- E [1] SLAT ROLL
- F [5] SUPPORT LEGS

NO.	ITEM	DESCRIPTION	QTY.
1		5/16" Flat Washer	12pcs
2		5/16" Spring Washer	12pcs
3		5/16" x 1-3/4" Bolt	12pcs
4		4 x 110mm Allen Key	1pc
5		8x30mm Wood Screw	28pcs

TOOLS NEEDED:



Phillips Head Screwdriver (not included)

ASSEMBLY INSTRUCTIONS:

1. Attach the Side Rails (D) to the Headboard Base (B) and Footboard (C) using Flat Washer (1), Spring Washer (2), Bolt (3) and Allen Key (4), and tighten (Diagram 1).
2. Attach the assembled frame bed to the Headboard (A) using Flat Washer (1), Spring Washer (2), Bolt (3) and Allen Key (4), and tighten (Diagram 2).

Diagram 1



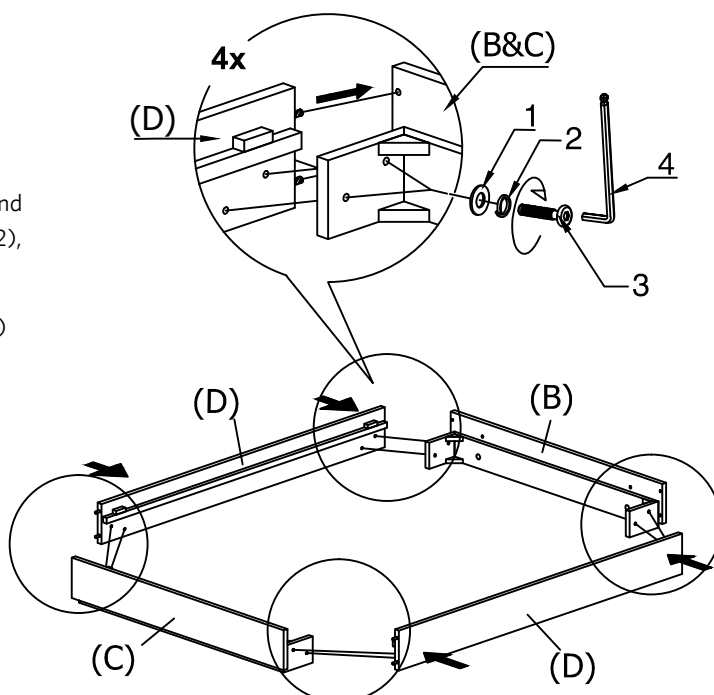


Diagram 2

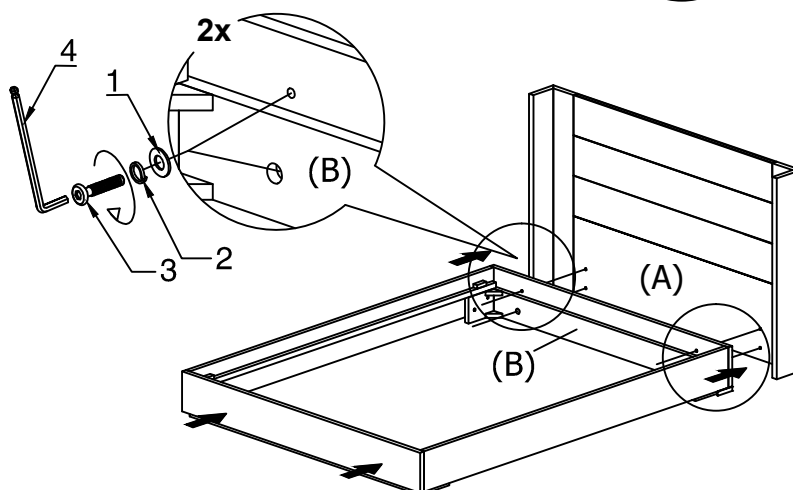


CALLUM PLATFORM QUEEN BED WITH HEADBOARD

3. Tighten the Support Legs (F) to the Slat Rolls (E). Then lay the Slat Roll (E) in between the Side Rails (D).

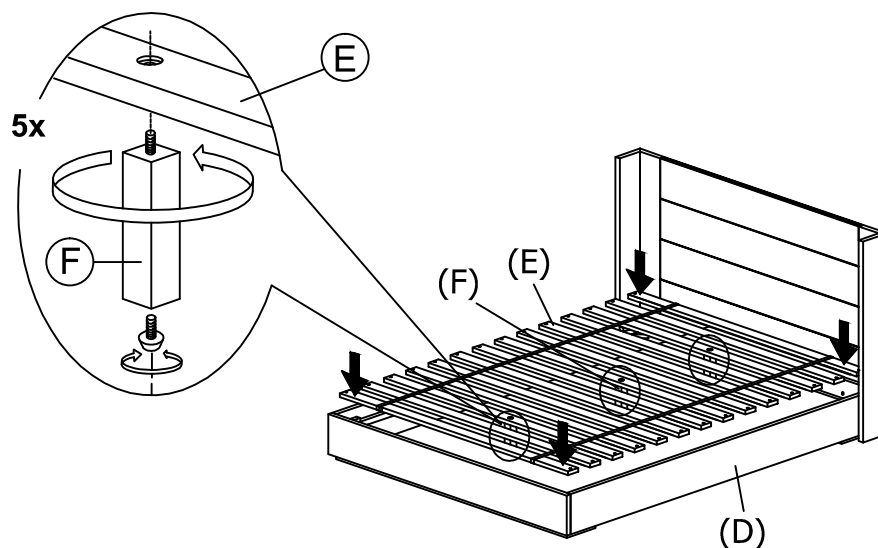

4. Fix the Slat Rolls (E) to Side Rails (D) using Wood Screws (5) to tighten slats to the side rails with a philips screwdriver (not included).

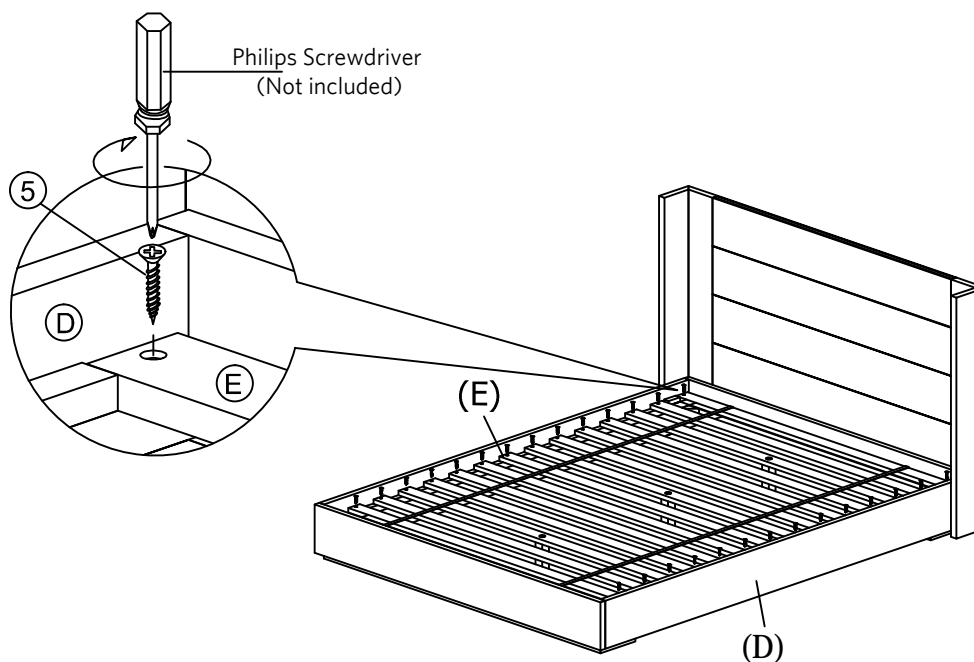

CARE INSTRUCTIONS:

1. Dust often using a clean, soft, dry lint-free cloth.
2. Blot spills immediately, and wipe with a clean, damp cloth.
3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.