





EDIE TALL WIDE UPHOLSTERED BED

PARTS INCLUDED

- A [1] Headboard
B [2] Side Rail
C [1] Footboard
D [1] Slat Roll
E [1] Center Support Slat
F [1] Center Support Slat Foot (with adjustable glide)

NO.		DESCRIPTION	Qty
1		Screw(3cm)	30 Pieces
2		Screw(5cm)	34 Pieces
3		Allen Key	1 Piece
4		Metal Plate	4 Pieces

TOOLS NEEDED

Phillips Screwdriver (not included)





ASSEMBLY INSTRUCTIONS

Bed must be assembled by at least two people.
Please read instructions carefully before assembling bed.
Use the above parts and hardware list to identify each component.
Keep all packing materials until assembly is complete to avoid loss of smaller parts.

1. Stand the Headboard (A) upright and attach Side Rails (B), as shown in Diagram I.
2. Repeat above procedure to attach the Footboard (C), as shown in Diagram II.
3. Attach the Center Support Slat Foot (F) to the Center Support Slat (E), as shown in Diagram III.
4. Attach the Center Support Slat (E) to the U shape wood blocks on Headboard (A), tighten with Long Screw (2) & Allen Key (3), as shown in Diagram IV.
5. Place the Slat Roll (D) into the cleats on the inside of the Side Rails (B).
Screw the ends of the slats to the cleats using Screws (1), as shown in Diagram V.
6. Assemble the Headboard (A) and the Wing together with Metal Plate (4), tighten with long Screws (2) & Allen Key (3), as shown in Diagram VI.

CARE INSTRUCTIONS

1. Spot clean only with a soft, damp cloth.
2. Do not use abrasive cleanser.

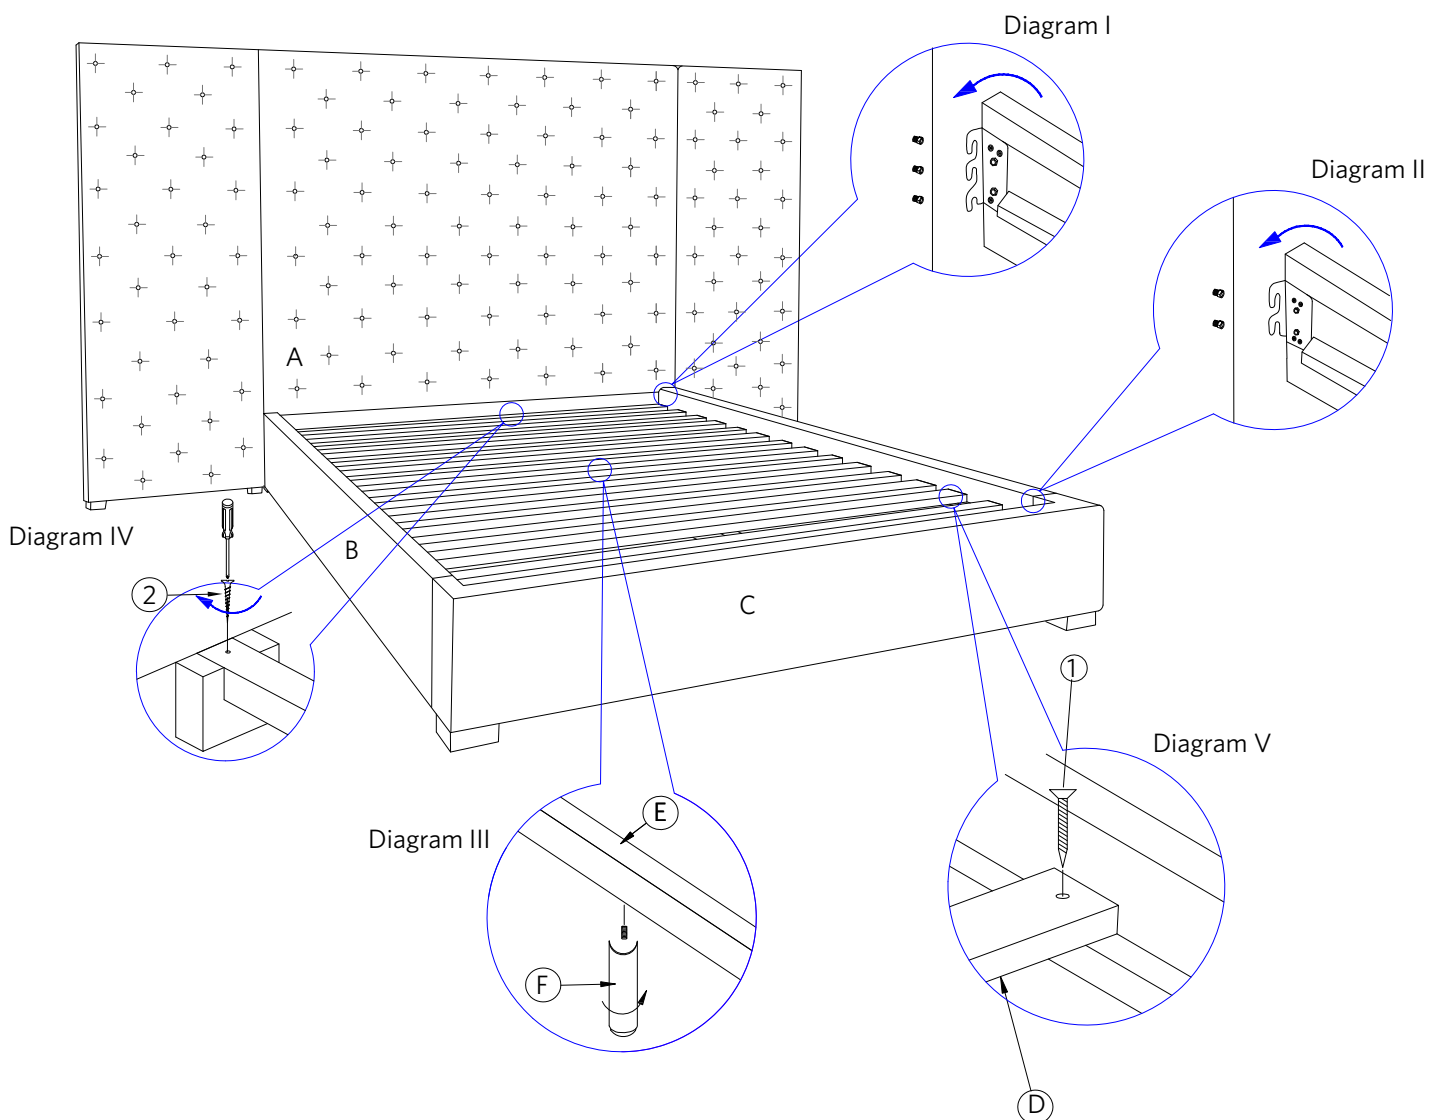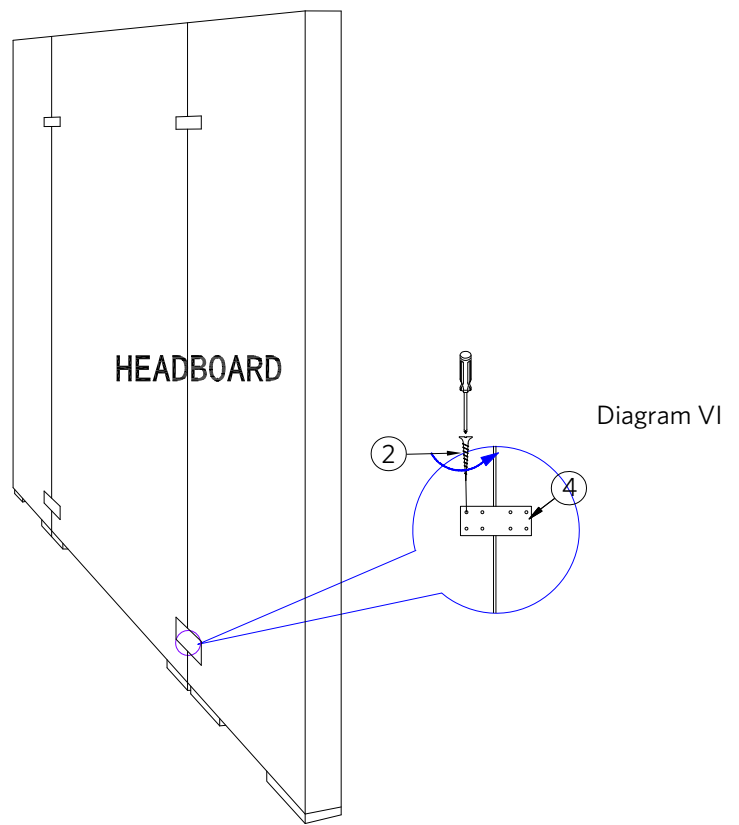

Thank you for your purchase
www.restorationhardware.com