
RHBABY&CHILD

QUATREFOIL LEANER MIRROR INSTRUCTIONS

PARTS INCLUDED:

A. Wall Bracket with 5 holes (1 pc.)

- B. Wall Bracket with 3 holes (1 pc.)
- C. Balance Indicator (1 pc.)
- D. Wall Anchors (11 pcs.)
- E. Wall Screws (11 pcs.)
- F. 10" Back Panel Bracket (1 pc.)
- G. 20" Back Panel Bracket (1 pc.)
- H. Anti-Tip Kit (1 pc.)

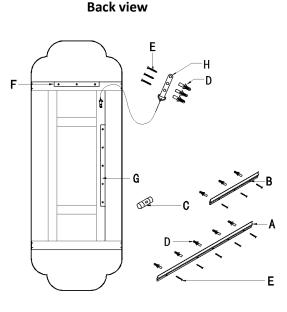

IMPORTANT SAFETY INSTRUCTIONS:

- 1. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.
- 2. Professional installation is strongly recommended.
- 3. For your safety, it is recommended that two people hang the fixture.
- 4. Check with a professional to ensure your wall can tolerate a fixture weighting 50 lbs.
- 5. It is imperative that the mirror is mounted into a wall stud.

WALL-MOUNT ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box, and remove all plastic coverings.

- 2. There are 2 brackets fixed on the back panel of the mirror and 2 wall brackets for your installation choice. To hang mirror vertically, proceed with 10" back panel bracket (F) and wall bracket with 3 holes (B). To hang mirror horizontally, proceed with 20" back panel bracket (G) and wall bracket with 5 holes (A).
- 3. Before drilling holes to affix the wall bracket (A) or wall bracket (B), put the balance indicator (C) into the groove of the wall bracket to test and make sure the wall bracket is level.
- 4. Drill 5 holes in the wall that align with the holes on the wall bracket (A), or drill 3 holes in the wall that align with the holes on the wall bracket (B), and insert wall anchors (D).
- 5. Put the wall bracket (A) or wall bracket (B) onto the wall anchors, then screw wall screws (E) into anchors.
- 6. To install the mirror horizontally, slide the 20" back panel bracket (G) onto the wall bracket (A). To install the mirror vertically, slide the 10" back panel bracket (F) onto the wall bracket (B).
- 7. Installation is complete.

WALL-LEANING ASSEMBLY INSTRUCTIONS:

- 1. Carefully remove all parts from the box, and remove plastic coverings. Pull out the anti-tip kit (H) from back cover.
- 2. For safety purposes, please use the anti-tip kit (H) to avoid unexpected tipping of mirror.
- 3. Drill 3 holes in the wall that align with the holes on anti-tip kit (H). Insert wall anchors (D).
- 4. Place the anti-tip kit (H) onto the wall anchors (D), then screw 3 wall screws (E) into anchors.
- 5. Installation is complete.

CARE INSTRUCTIONS:

- 1. To clean, use a soft dry or damp cloth.
- 2. Do not use abrasive cleanser.