

baby&child

RESTORATION HARDWARE

GRAND CANVAS WALL TAPESTRY


Parts included:

- Folding dowel, Fig. A (1 pc.)
- Tapestry with velcro (1 pc.)
- Screws, Fig. B (6 pc.)
- Spiral anchors, Fig. B (6 pc.)

Fig. A



Fig. B

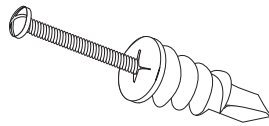


Tools (not included): Awl, Level, Drill with Phillips tip

Instructions:

1. Unfold the tapestry and measure the width and height. Use the measurements to determine where the dowel should be positioned on the wall, and mark a level line along where the dowel will be installed.
2. Have another person support the dowel in the correct location (with the Velcro® facing up and the hinge facing down) to push an awl through the predrilled holes to mark the wall. This will provide the correct location for installing the spiral drywall anchors.
3. Place the dowel aside, and use a drill with a Phillips tip to screw the spiral anchors into the wall. Be careful to align each anchor directly over the marked locations.

Note: If one of the awl marks align over a stud, use only a screw. Do not use a spiral anchor at that location.

4. Have another person realign the dowel on the wall. Using the drill, screw through the predrilled holes into the spiral drywall anchors.
5. Unfold the tapestry and starting at one end, apply the tapestry to the Velcro® on top of the dowel. Have your assistant keep their end of the tapestry away from the Velcro® while keeping the tapestry taut. Work your way across, and rub the Velcro® into position as you go. (Shown in Fig. C)

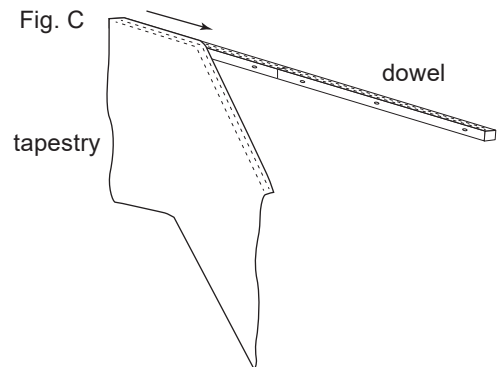

*This packet only includes the proper hardware for installation on drywall. For other applications please use the appropriate hardware.