# RHBABY&CHILD

# CALLUM RIGHT STORAGE BED TWIN INSTRUCTIONS

# PARTS INCLUDED:

A [1] HEADBOARD PANEL

B [1] FOOTBOAR PANEL

C [1] RIGHT STORAGE BASE

D [1] LEFT SIDE RAIL

E [3] STRETCHER BARS

F [2] PLATFORM PANELS

### **TOOLS NEEDED:**



Phillips Head Screwdriver (not included)

### **ASSEMBLY INSTRUCTIONS:**

### STEP 1:

Attach the Right Storage Base (C) and Left Side Rail (D) to the Headboard (A) with Short Bolt (2), Spring Washer (3), Flat Washer (4), and tighten by using Allen Key (4).


# STEP 2:

- Remove the drawer from Right Storage Base (C) completely, and set it aside.
- Position the Footboard (B) between the Right Storage Base (C) and Left Side Rail (D) and align the holes.

# Note:


- The drawer is equipped with rubber stopper that prevent the drawer from being removed during normal operation.
- During assembly, the drawer can be removed with minor force as the rubber stoppers will bend to allow the drawer to be removed completely.
- When removing the drawer, it MUST be removed at a straight angle. If it is crooked, the drawer will stick on the wooden runners.

NO.	ITEM	DESCRIPTION	QTY.
1		Bolt 5/16" x 2"	4 pcs.
2		Bolt 5/16" x 1-3/4"	4 pcs.
3		Spring Washer 5/16"	8 pcs.
4	0	Flat Washer 5/16"	8 pcs.
5		Allen Key 4mm	1 pc.
6	<b>****************************</b>	Screw 8 x 30mm	24 pcs.

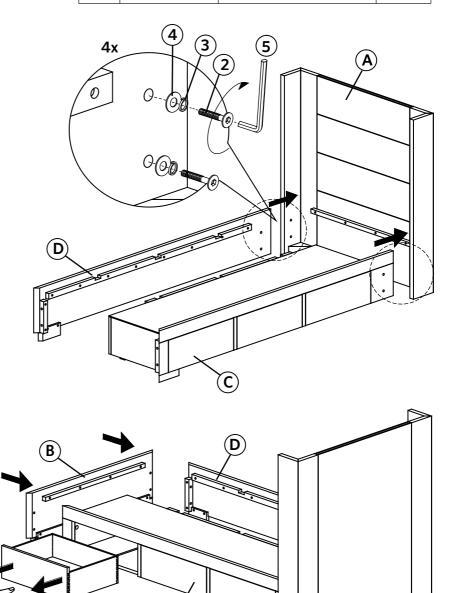

# STEP 3:

Attach the Right Storage Base (C) and Left Side Rail (D) to the Footboard (B) with Long Bolt (1), Spring Washer (3), Flat Washer (4), and tighten by using Allen Key (4).

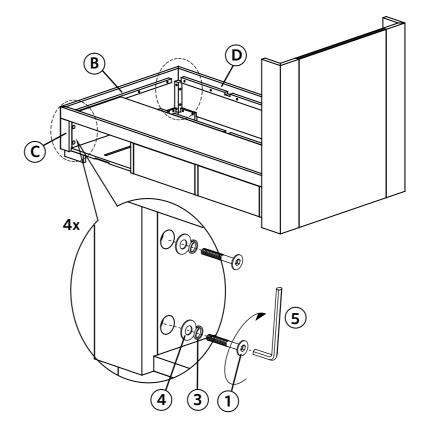


# STEP 4:

- Place the Stretcher Bars (E) on the opening between the Right Storage Base (C) and Left Side Rail (D). Tighten with Screws (6) and Phillips Head Screwdriver (not included).
- Put the Drawer back into the Right Storage Base (C) while bending the rubber stopper as needed to allow the drawer to enter the drawer box.

This will require some force to get the drawer back into the box.


### Note:

Make sure the wooden drawer runners, and the rubber stoppers are properly aligned as you re-install the drawer.

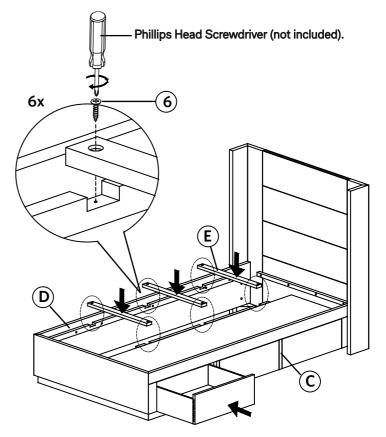

STEP 5:

Lay the Platform Panels (F) on top of the Stretcher Bars (E) and attach using Qty.18 Screws (6) with Phillip Head Screwdrive

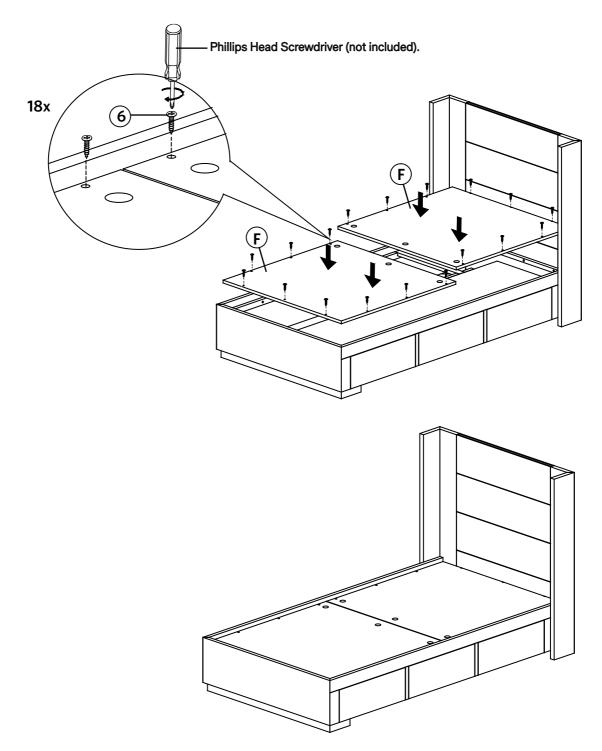

# **CARE INSTRUCTIONS:**

- 1. Dust often using a clean, soft, dry lint-free cloth.
- 2. Blot spills immediately, and wipe with a clean, damp cloth.
- 3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

# RHBABY&CHILD

### CALLUM LEFT STORAGE BED TWIN INSTRUCTIONS

### PARTS INCLUDED:

A [1] HEADBOARD PANEL

B [1] FOOTBOAR PANEL

C [1] LEFT STORAGE BASE

D [1] RIGHT SIDE RAIL

E [3] STRETCHER BARS

F [2] PLATFORM PANELS

# **TOOLS NEEDED:**



Phillips Head Screwdriver (not included)

### ASSEMBLY INSTRUCTIONS:

# STEP 1:

Attach the Left Storage Base (C) and Right Side Rail (D) to the Headboard (A) with Short Bolt (2), Spring Washer (3), Flat Washer (4), and tighten by using Allen Key (4).


### STEP 2:


- Remove the drawer from Left Storage Base (C) completely, and set it aside.
- Position the Footboard (B) between the Left Storage Base (C) and Right Side Rail (D) and align the holes.

# Note:


- The drawer is equipped with rubber stopper that prevent the drawer from being removed during normal operation.
- During assembly, the drawer can be removed with minor force as the rubber stoppers will bend to allow the drawer to be removed completely.
- When removing the drawer, it MUST be removed at a straight angle. If it is crooked, the drawer will stick on the wooden runners.

NO.	ITEM	DESCRIPTION	QTY.
1		Bolt 5/16" x 2"	4 pcs.
2		Bolt 5/16" x 1-3/4"	4 pcs.
3		Spring Washer 5/16"	8 pcs.
4	0	Flat Washer 5/16"	8 pcs.
5		Allen Key 4mm	1 pc.
6	<b>*************************************</b>	Screw 8 x 30mm	24 pcs.

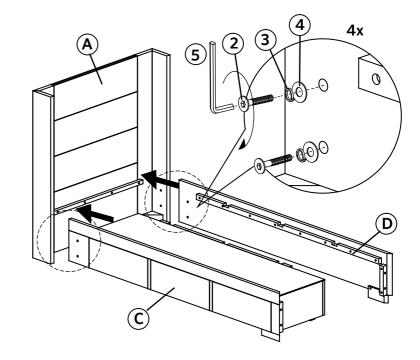

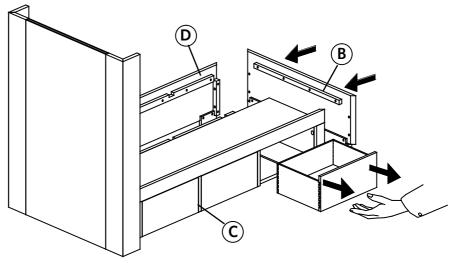

# STEP 3:

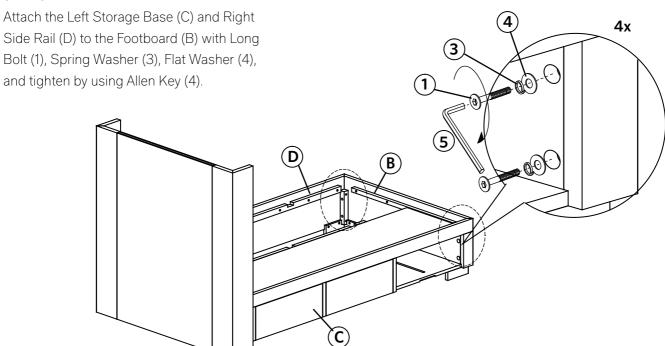


### STEP 4:


- Place the Stretcher Bars (E) on the opening between the Left Storage Base (C) and Right Side Rail (D). Tighten with Screws (6) and Phillips Head Screwdriver (not included).
- Put the Drawer back into the Left Storage Base (C) while bending the rubber stopper as needed to allow the drawer to enter the drawer box.

This will require some force to get the drawer back into the box.

Note: Make sure the wooden drawer runners, and the rubber stoppers are properly aligned as you re-install the drawer.

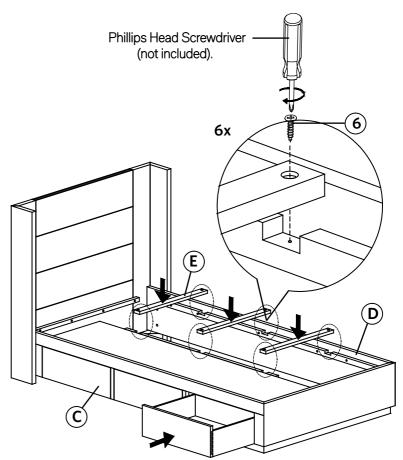

STEP 5:

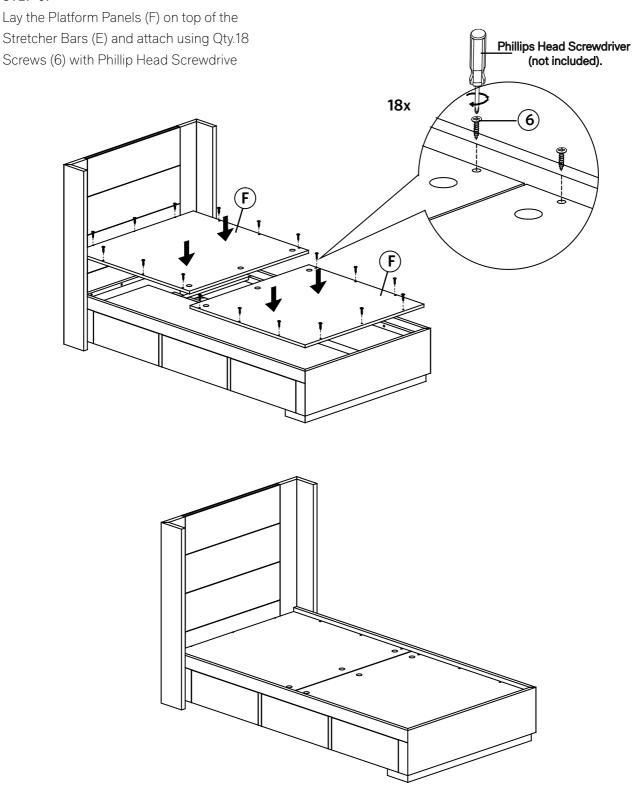

# **CARE INSTRUCTIONS:**

- 1. Dust often using a clean, soft, dry lint-free cloth.
- 2. Blot spills immediately, and wipe with a clean, damp cloth.
- 3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.