

RH BABY & CHILD

All Restoration Hardware cribs are designed to meet the highest safety standards and comply with all U.S. and Canadian cribs and cradles regulations.

Made in Vietnam

**Model No: H0039 - 6
ARLO PANEL TODDLER KIT**


Distributed in the U.S.A by:
Restoration Hardware Baby & Child
11640 Harrel St. Suite B
Mira Loma, CA 91752
www.rhbabyandchild.com

Distributed in Canada by:
Restoration Hardware Canada, Inc.
1500-1055 West Georgia Street
Vancouver, British Columbia V6E4N7



WARNING: Read all Instructions before assembling this product.

KEEP INSTRUCTIONS FOR FUTURE USE.

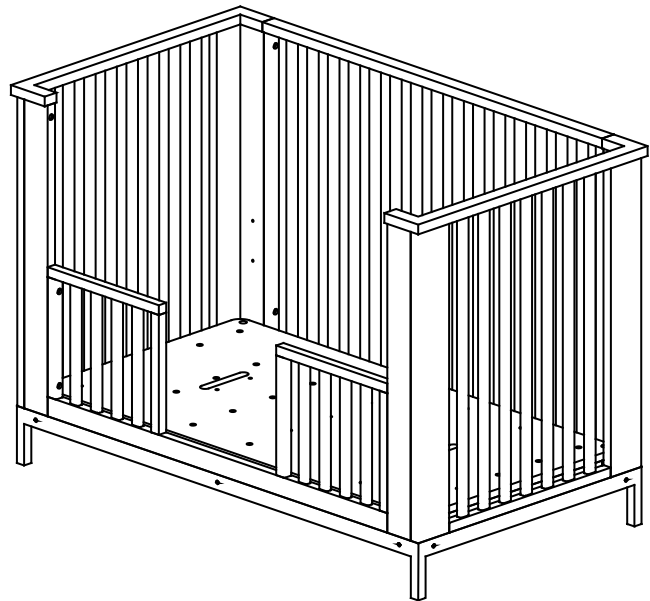

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact us first. You can also order parts by writing to the address above. Include the product model number, color, and a brief description of the part. Call 1-800-762-1751.

CARE AND CLEANING

DO NOT scratch or chip the finish. **DO NOT** use abrasive chemicals for cleaning. If the crib is to be stored, store in a cool dry place and carefully package all original hardware to protect from loss.

TOOLS AND INSTALLATION

Tools Necessary: Allen Key (included).

NOTE: It may be easier to assemble product with two people.

NOTE: When inserting bolts, turn clockwise until tight. Then loosen 1/2-3/4 of a turn. After crib is completely assembled, return to each bolt and tighten.



WARNING: ENTRAPMENT/ STRANGULATION HAZARD

Infants have died in toddler beds from entrapment and strangulation. Failure to follow these warnings and the assembly instructions could result in serious injury or death.

NEVER use bed with children under 15 months.


NEVER place bed near windows where cords from blinds or drapes may strangle a child.

- The mattress intended for use on the bed shall be a full-size crib mattress having minimum dimensions of 51 5/8 inches (1310 mm) in length, 27 1/4 inches (690 mm) in width and 4 inches (100 mm) in thickness, not exceeding 6 inches (152 mm) in thickness.
- If guardrails are used as the mattress containment means, guardrail(s) provided must be used to avoid the formation of a gap between the mattress and the bed that could cause an entrapment.
- DO NOT place bed near windows where cords from blinds or drapes may strangle a child.
- DO NOT place items with a string, cord, or ribbon around a child's neck, such as hood strings or pacifier cords.
- A child using the toddler or day bed shall be at least 15 months of age and shall not weigh more than 50 lbs (22.7 kg).


ASSEMBLY INSTRUCTIONS

PARTS INCLUDED:






E [1] TODDLER RAIL

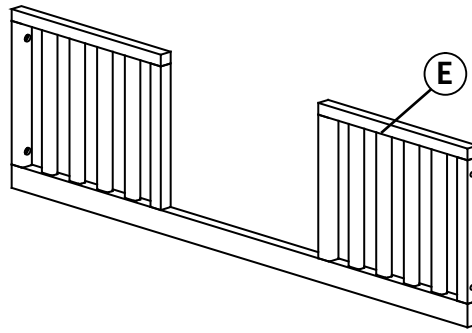

CRIB (Sold separately)

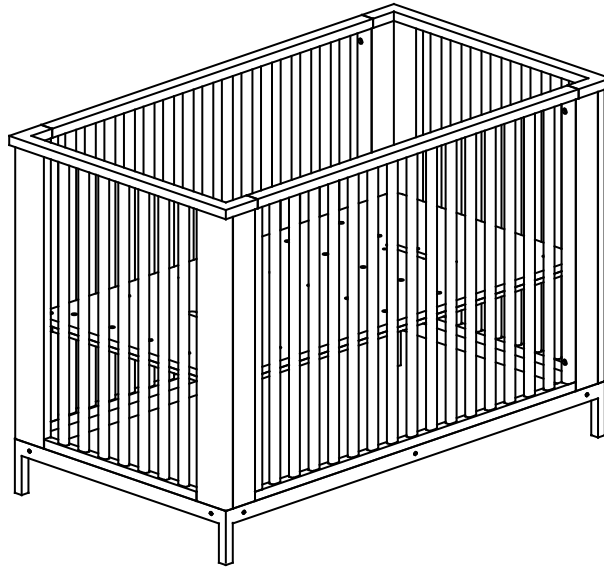


HARDWARE INCLUDED:

NO.	ITEM	DESCRIPTION	QTY.
7		Short Bolts 5/16" x 1-3/4"	4 pcs.
8		Long Bolts 1/4" x 2-1/4"	2 pcs.
9		Spring Washer 5/16"	6 pcs.
10		Small Bolts 5/16" x 3/4"	2 pcs.
11		Allen Key 4mm	1 pc.

ASSEMBLY INSTRUCTIONS


STEP 1:

Carefully unscrewing and removing the (2pcs) long bolts from the bottom of the Metal Leg frame (D), and (4pcs) short bolts with spring washer on left /right sides of the Stationary Side Rail (B) using Allen Key (11).

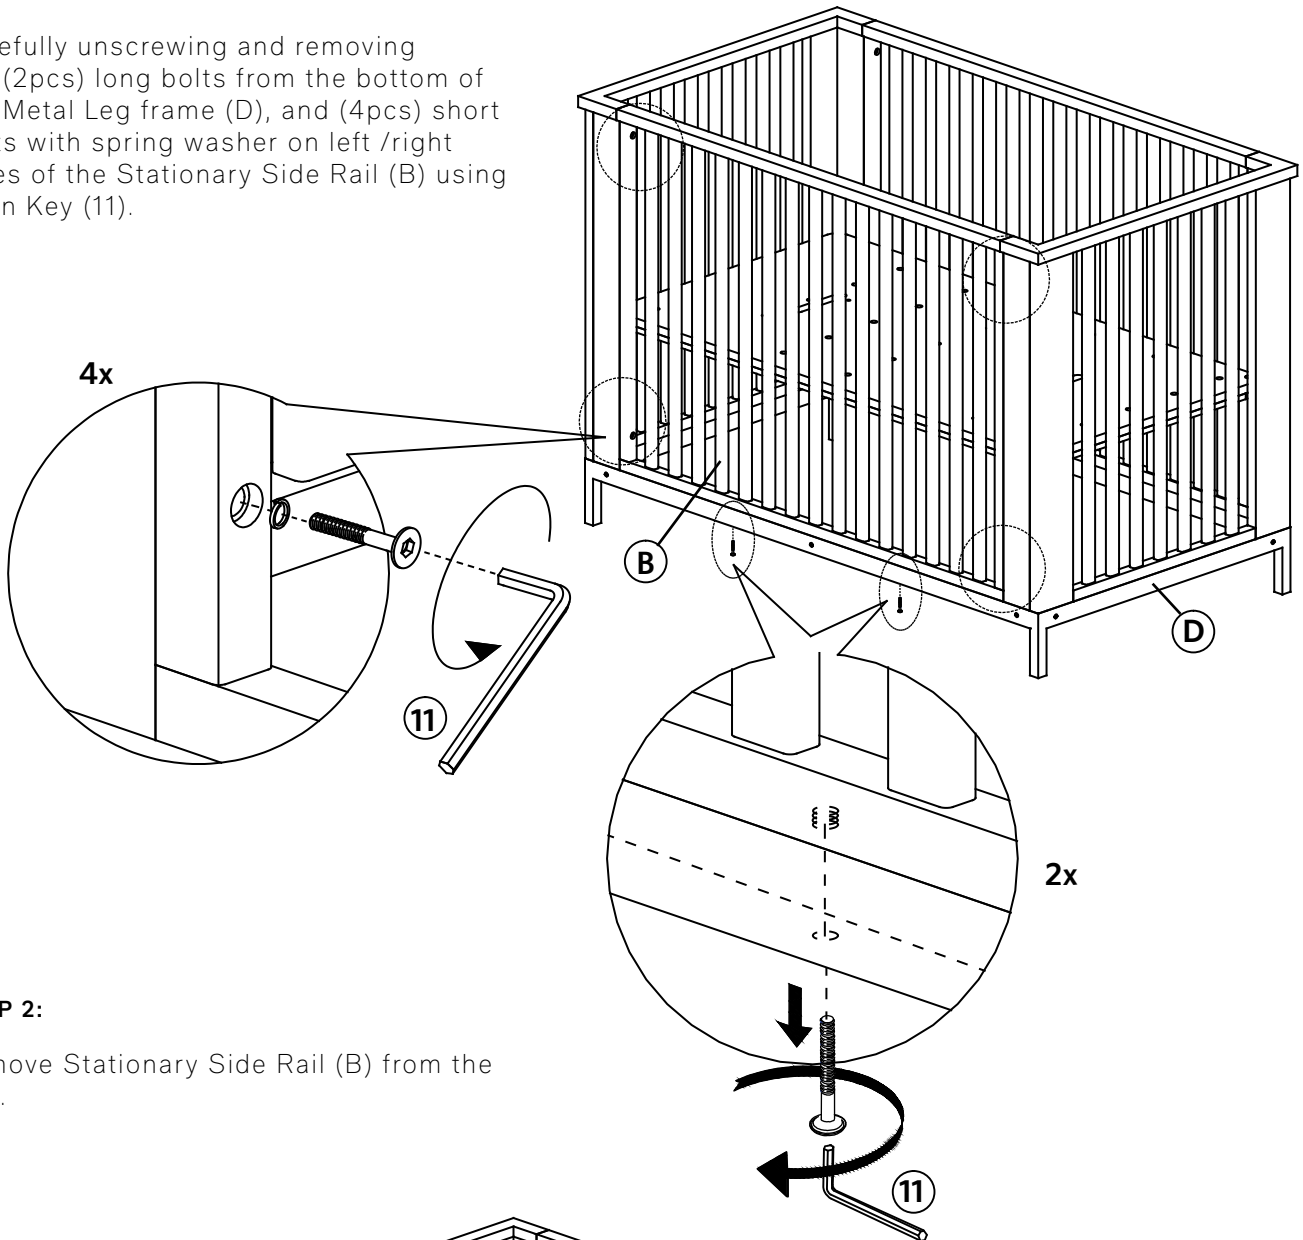

STEP 2:

Remove Stationary Side Rail (B) from the crib.


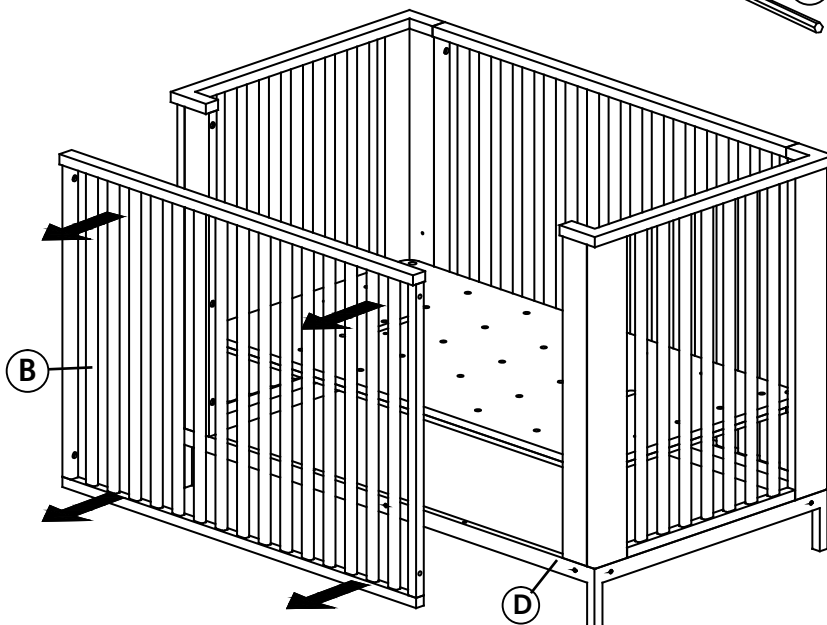


ASSEMBLY INSTRUCTIONS

STEP 3:

If mattress support is not in the lowest position, loosen all tightened bolts from side frames. Spread front of crib open enough to remove mattress support (C), and move it to the lowest position.

Note: The Mattress support (C) must be at the lowest level for a toddler bed.


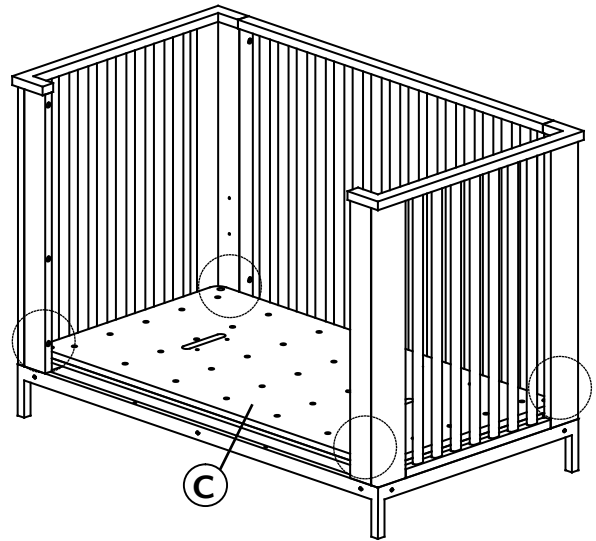
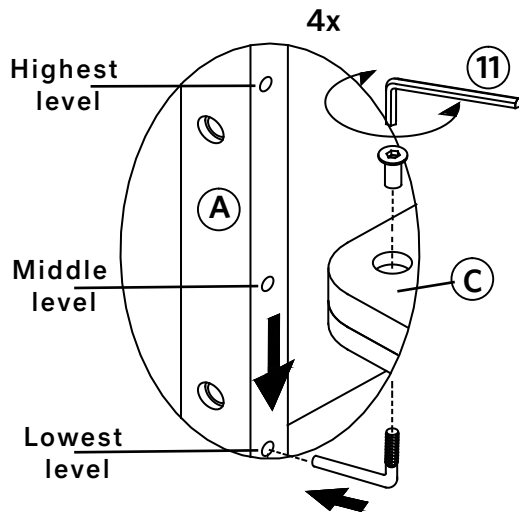


STEP 4:

Position the Toddler Rail (E) between the Headboard/ Footboard (A) and align the holes.

Attach the Toddler Rail (E) to the crib by securing with Short Bolts (7), Spring Washers (9), and tighten with Allen Key (11).



DO NOT FULLY TIGHTEN AT THIS TIME.

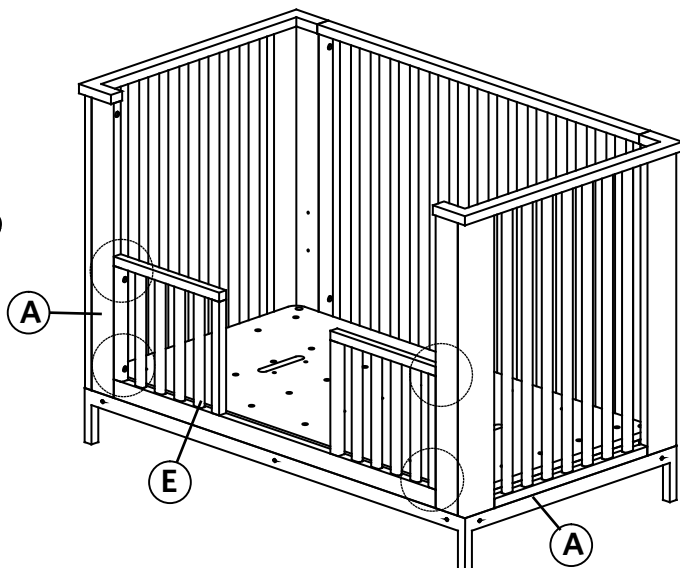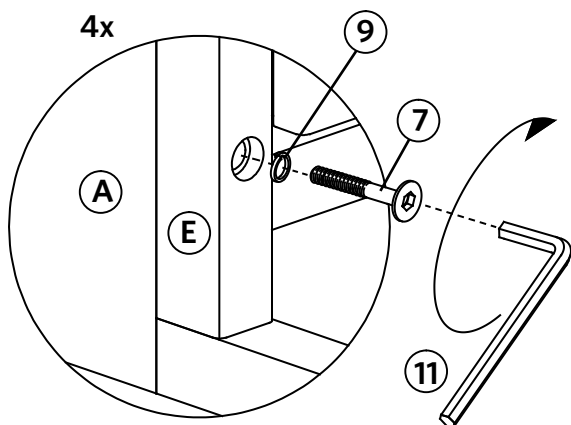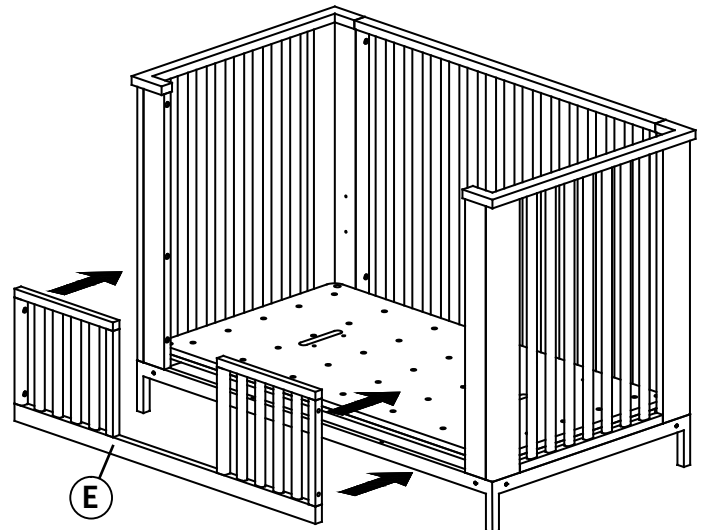

ASSEMBLY INSTRUCTIONS



STEP 5:

Attach the Metal Leg Frame (D) to the Toddler Rail (E) with Long Bolt (8), and tighten using Allen Key (11).

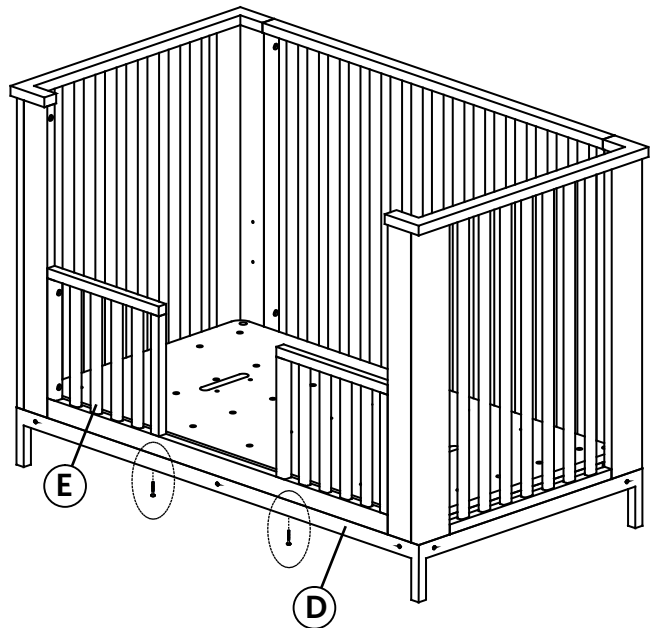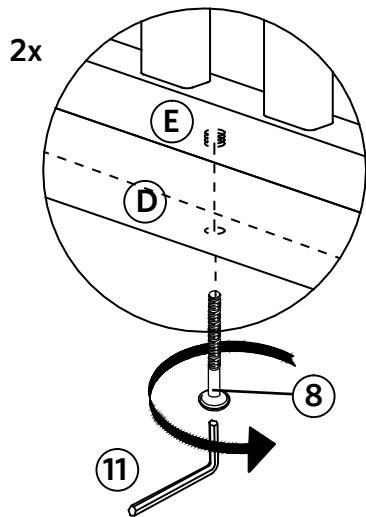

STEP 6:

When converting the crib to toddler bed, the Small Bolt (10), and Spring Washer (9) should be inserted in the upper holes of the Side Frame (A) and tighten with the Allen Key (11).

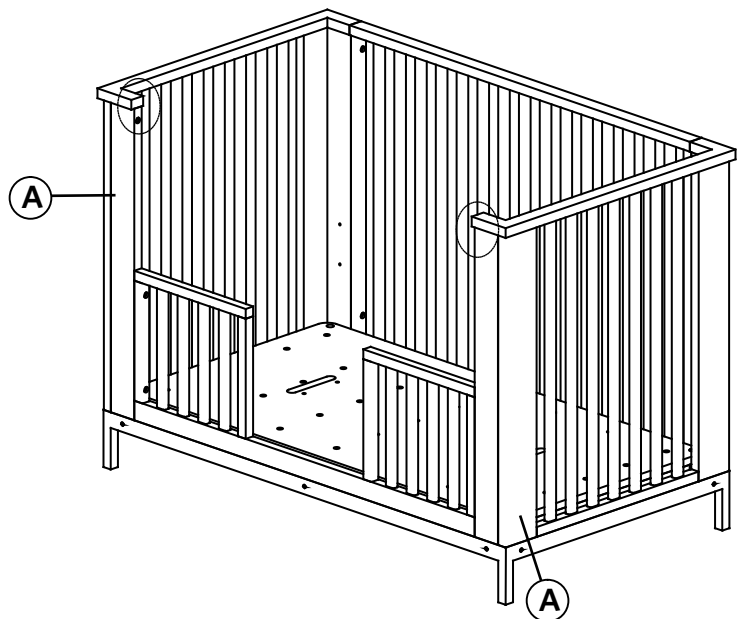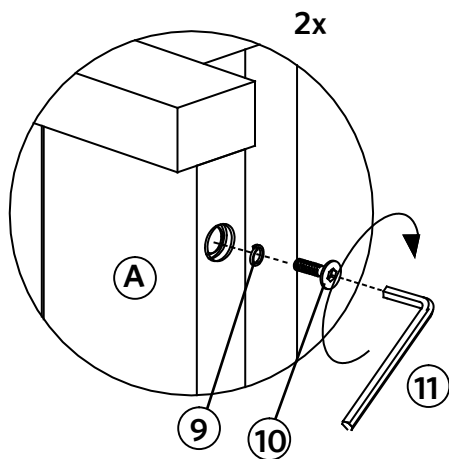

WARNING:

After crib is completely assembled, return to each bolt and tighten to snug fit. DO NOT over tighten.