RESTORATION HARDWARE

baby&child

# BELLE QUEEN UPHOLSTERED BED

**WARNING:** ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS. SHARP POINTS AND EDGES

**Customer Service**- If you are missing parts or have any questions about this product, please contact us at : 1-800-762-1751

## PART LIST

- A [1] HEADBOARD
- B [2] SIDE RAILS
- C [1] FOOTBOARD
- D [1] SLAT ROLL
- E [5] CENTER SUPPORTS

### **TOOLS NEEDED**

- Phillips head screwdriver


#### HARDWARE LIST

| 1 | 5/16" x 3" Threaded Rod     |   | 4pcs  |
|---|-----------------------------|---|-------|
| 2 | 5/16" Curved Slotted Washer | M   | 4pcs  |
| 3 | 5/16" x 12mm Nut            | 9   | 4pcs  |
| 4 | 12mm Wrench                 |   | 1pc   |
| 5 | 8 x 30mm Wood Screw         | ()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>()<br>( | 18pcs |

## **ASSEMBLY INSTRUCTION**

**Note**: Bed can be assembled by one person rather easily, but if two people are available it is a bit easier and the operation will require less preparation. The instructions are written assuming one person is assembling the bed.

- 1. Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bed fast hardware should be facing the inside, toward the mattress.
- 2. Secure the Threaded Rod (1) to the Headboard (A). Place towels or some other soft item (not included) under each Side Rail (B). These will protect the floor while lifting the rails, allowing for easier attachment to the headboard & footboard. Raise the Side Rail (B) up and place the rod into the Side Rail (B) at the bore holes' position, insert Curved Slotted Washer (2) and tighten Hex Nuts (3) using Wrench (4) (as shown in diagram 1). Repeat the procedure with the Side Rail (B) ends and Footboard (C).
- 3. Tighten the Support Legs (E) to the Slat Roll (D) (as shown in diagram 2).
- 4. Lay the Slat Roll (D) in between the Side Rail (B) and secure with Wood Screws (5) (as shown in diagram 3).

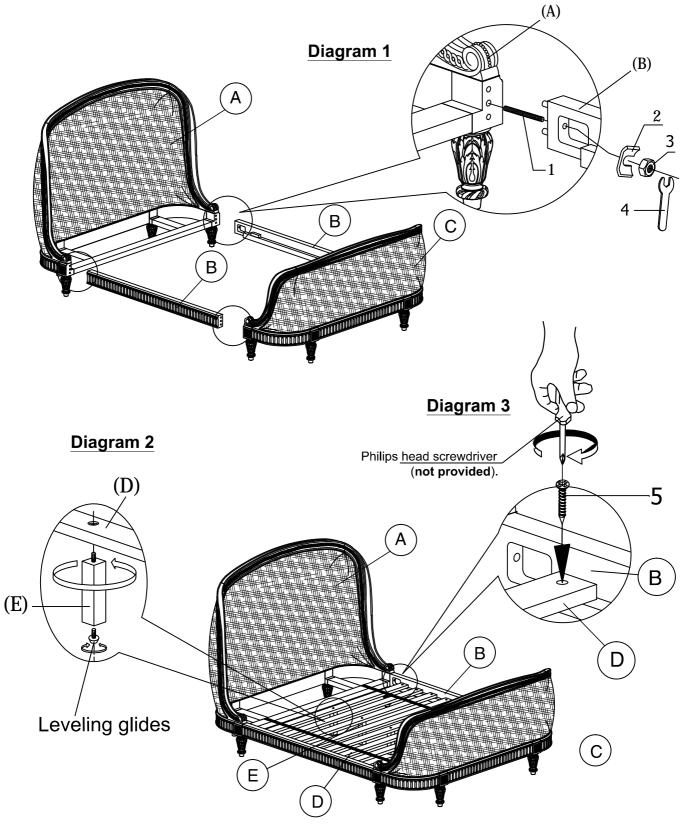

## **CARE INSTRUCTIONS:**

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

Thank you for your purchase www.rhbabyandchild.com