

RH BABY&CHILD

VIENNE CRIB TODDLER BED CONVERSION KIT - ASSEMBLY INSTRUCTIONS

Made in Vietnam

Distributed in the USA by:

RHBaby&Child

2900 North Macarthur Dr.

Tracy, CA 95376

USA

www.rhbabyandchild.com

Distributed in Canada by:


RH Canada, Inc.

1500-1055 West Georgia Street

Vancouver, British Columbia V6E4N7



WARNING: Read all instructions before assembling this product. **KEEP INSTRUCTIONS FOR FUTURE USE.**

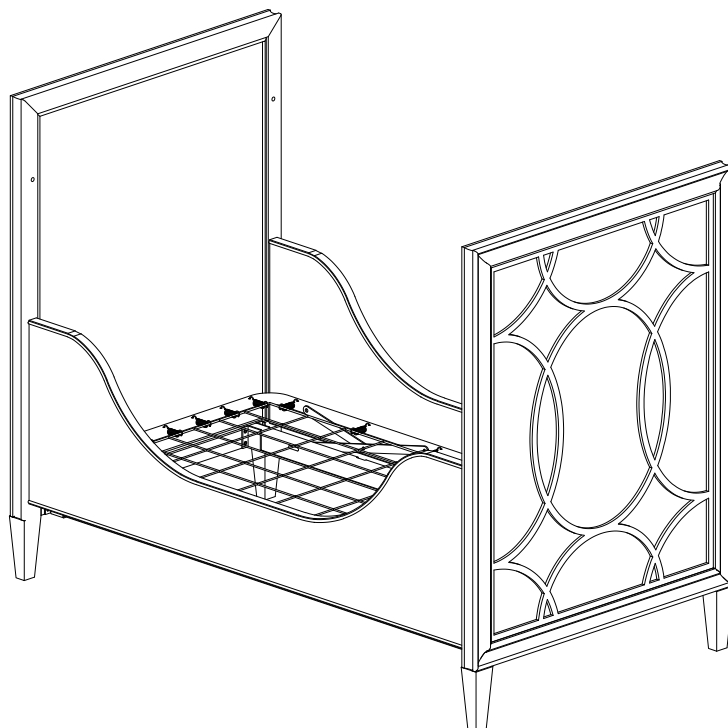

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact us first. You can also order parts by writing to the address above. Include the product model number, color, and a brief description of the part. Or call 1-800-762-1751.

CARE AND CLEANING

DO NOT scratch or chip the finish. **DO NOT** use abrasive chemicals for cleaning. Dust often using a clean, soft, dry cloth.

Blot spills immediately and wipe with a clean, damp cloth. If the crib is to be stored, store in a cool, dry place and carefully package all original hardware to protect from loss.

TOOLS NEEDED

Allen key (included)

NOTE: Two people are recommended for assembly.

NOTE: When inserting bolts, turn clockwise until tight. Then loosen $\frac{1}{2}$ - $\frac{3}{4}$ of a turn. After crib is completely assembled, return to each bolt and tighten. Use wax or soap on all bolts to facilitate assembly.

IMPORTANT SAFETY INFORMATION FOR TODDLER & DAY BEDS



WARNING: ENTRAPMENT / STRANGULATION HAZARD

Infants have died in toddler beds from entrapment and strangulation. Failure to follow these warnings and the assembly instructions could result in serious injury or death.

NEVER use bed with children under 15 months.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.

- The mattress intended for use on the bed shall be a full-size crib mattress having minimum dimensions of 51-5/8 inches (1310mm) in length, 27-1/4 inches (690mm) in width and 4 inches (100 mm) in thickness, not exceeding 6 inches (152 mm) in thickness.
- If guardrails are used as the mattress containment means, guardrail(s) provided must be used to avoid the formation of a gap between the mattress and the bed that could cause an entrapment.
- **DO NOT** place bed near windows where cords from blinds or drapes may strangle a child.
- **DO NOT** place items with a string, cord, or ribbon around a child's neck, such as hood strings or pacifier cords.
- **DO NOT** suspend strings over a toddler bed for any pacifier cords.
- A child using the toddler or day bed shall be at least 15 months of age and shall not weigh more than 50lbs (22.7kgs).



WARNING: ADULT ASSEMBLY ONLY, OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES.

CAUTION

TODDLER BED: THE MINIMUM AGE SHALL NOT BE LESS THAN 15 MONTHS AND THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 50LBS. (22.7 KG).

THE MATTRESS INTENDED FOR USE ON THE BED SHALL BE A FULL-SIZE CRIB MATTRESS HAVING MINIMUM DIMENSIONS OF 51-5/8 IN. (1310MM) IN LENGTH, 27-1/4 IN.(690MM)IN WIDTH AND 4 IN. (100MM) IN THICKNESS NOT EXCEEDING 6 IN. (152MM) IN THICKNESS.

CARE INSTRUCTIONS:


- Dust often using a clean, soft, dry, lint- free cloth.
- Blot spills immediately, and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleaners, abrasives, or furniture polish on our lacquered finish.

PART LIST


- A. VIENNE SIDE PANELS
- B. VIENNE RAIL FRAME
- C. VIENNE TODDLER BED CONVERSION KIT
- D. MATTRESS SUPPORT

**TODDLER CONVERSION KIT
ASSEMBLY HARDWARE IS
INCLUDED IN THE TODDLER
KIT BOX.**

HARDWARE



(DD) 1/4" x 1/2" Allen Bolt = 4 pcs

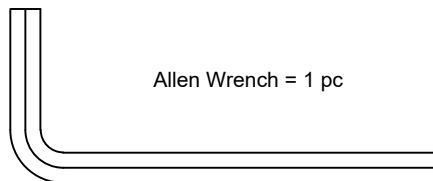

Allen Wrench = 1 pc

ASSEMBLY INSTRUCTIONS

DETAIL A

STEP 1



RAIL FRAME DISASSEMBLY

STEP 1.1


Remove the rail frames of the crib by loosening all the bolts installed as well as the mattress support. See **DETAIL A**.

STEP 1.2

Gently tilt the crib and release the bolts underneath the metal brackets holding the stabilizer rails, as in **DETAIL B**.

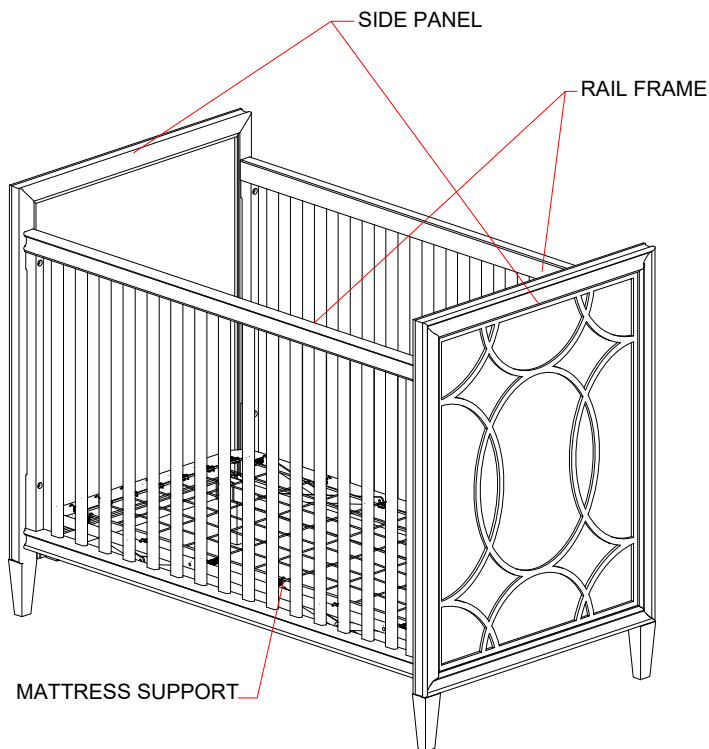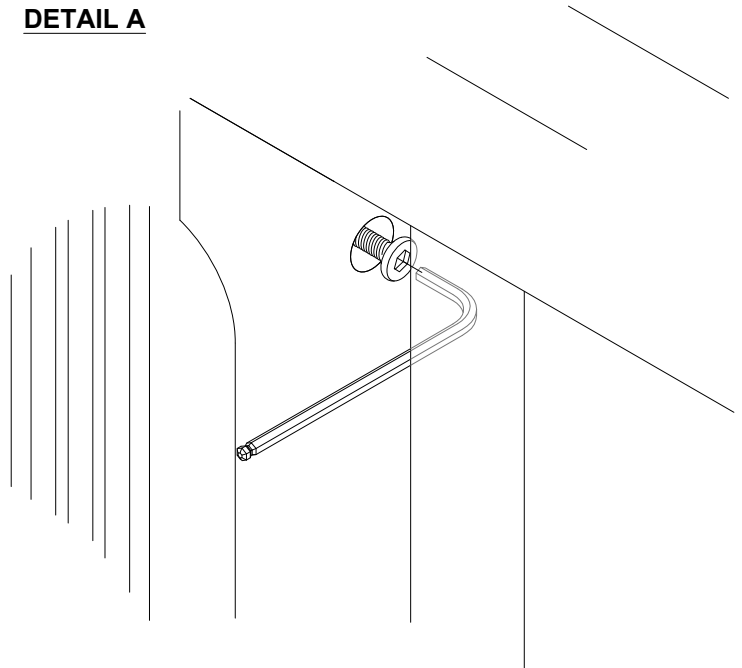

DETAIL B

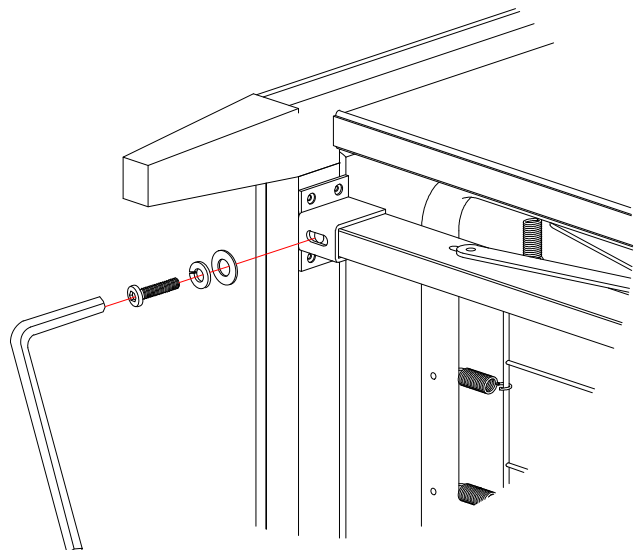

STEP 2

TODDLER RAIL ASSEMBLY



STEP 2.1

On inside face of both side panels there is a cavity for the hook which corresponds to the hooks on both ends of the toddler rails. Align and insert the hook of the toddler rail into the cavity of the side panel. See **DETAIL C**.


STEP 2.2

Fill the holes located on the top of both sides of the side panel by inserting bolt (DD) provided.


DETAIL C

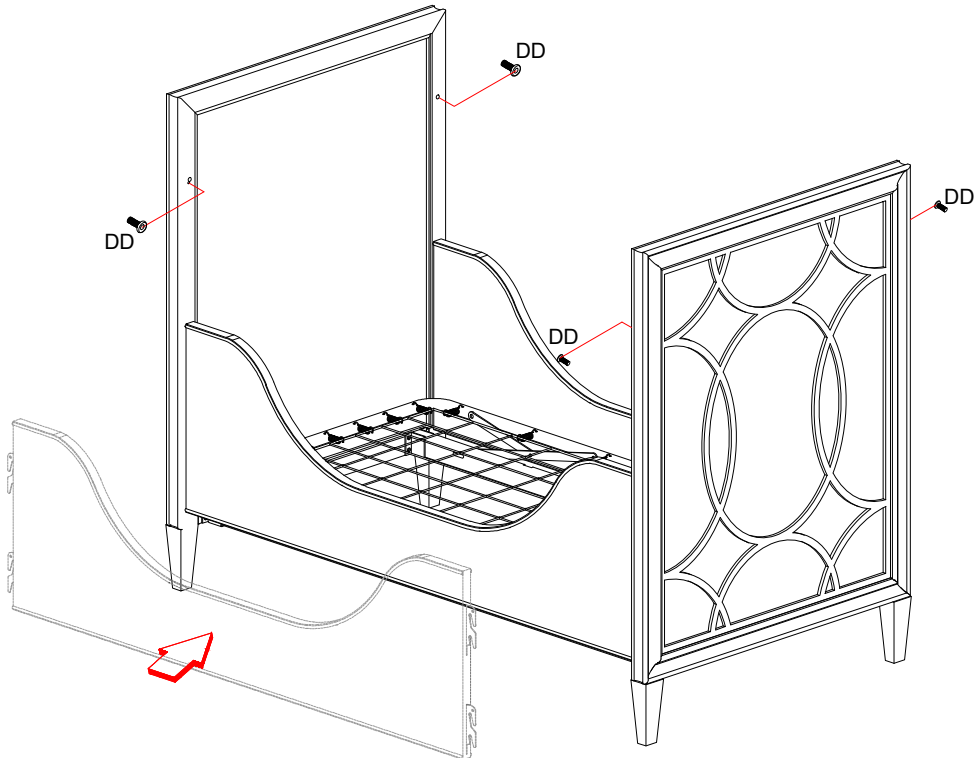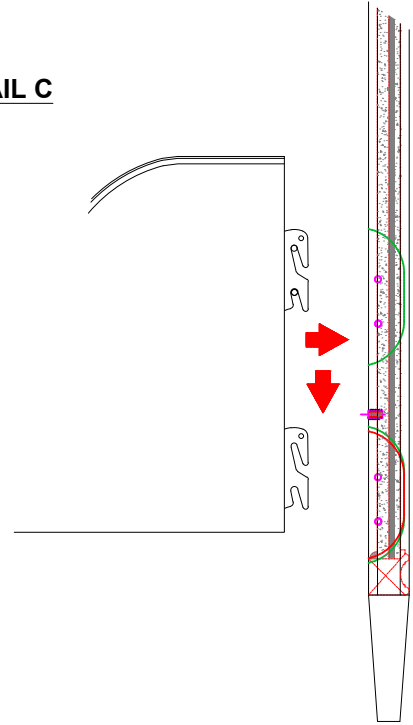

(DD) 1/4" x 1/2" Allen Bolt = 4 pcs



Allen Wrench = 1 pc

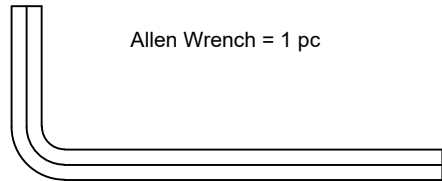

STEP 3

MATTRESS SUPPORT HEIGHT ADJUSTMENT

NOTE: If mattress supports is not in the lowest position.


STEP 3.1

Loosen and remove all hardware (BB) on both sides of the frame of mattress support.



STEP 3.2

Re-install the bolt on the third hole of the frame through the hole on the arm support. Fasten the bolt with plain washers, lock washers & hexagonal nut. Repeat procedure on the other arms of the mattress support. See **DETAIL D** & **DETAIL E**.

DETAIL D

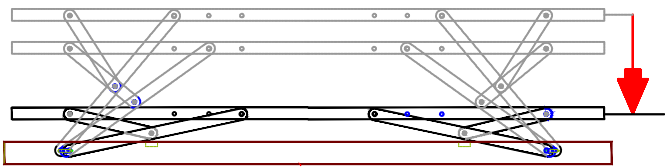


DETAIL E

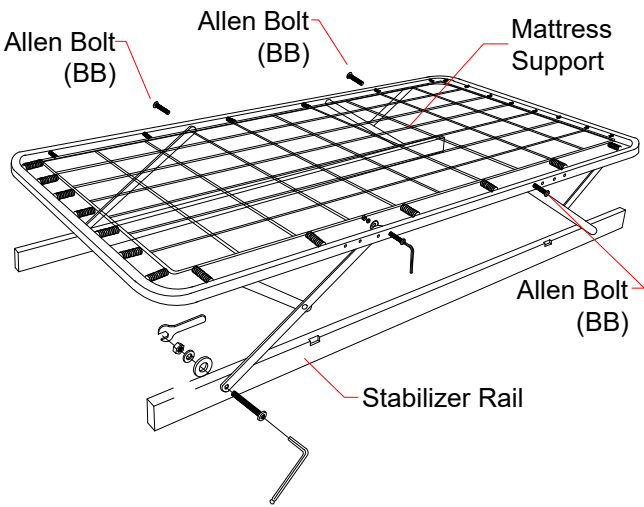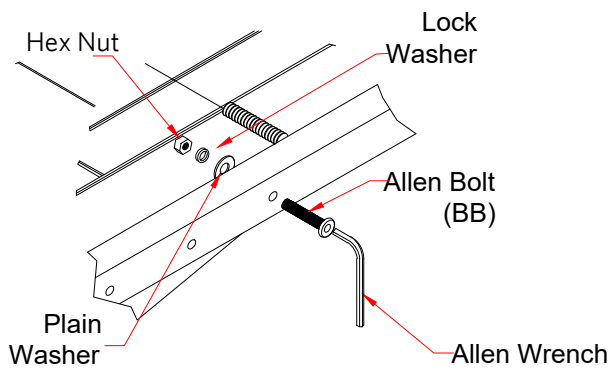

HARDWARE


(BB) 1/4" x 1 1/4" Allen Bolt = 8 pcs




Lock Washer = 8 pcs




Plain Washer = 8 pcs

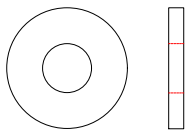


Hexagonal Nut = 8 pcs



Open Wrench = 1 pc

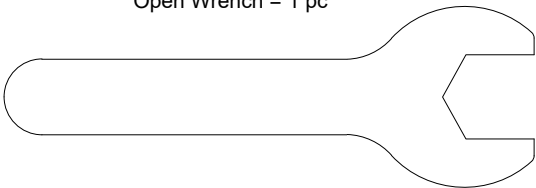

Allen Wrench = 1 pc

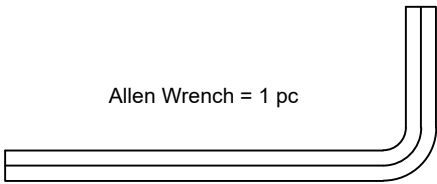

STEP 4
INSTALLATION OF STABILIZER RAILS
INTO THE SIDE PANEL

STEP 4.1

On inside face of both side panels are pre-installed metal brackets, designed to hold the stabilizer rails. Set both ends of the stabilizer rails into brackets, as illustrated in **DETAIL F**.

STEP 4.2


Once the stabilizer rails are set, gently tilt the crib and fasten the stabilizer rails with bolt, lock washer and plain washer, as illustrated in **DETAIL G**.

NOTE

After assembly, re-tighten all bolts to a snug fit.

HARDWARE


(CC) 1/4" x 13/16 " Allen Bolt = 4 pcs




Lock Washer = 4 pcs




Plain Washer = 4 pcs

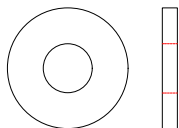

Allen Wrench = 1 pc

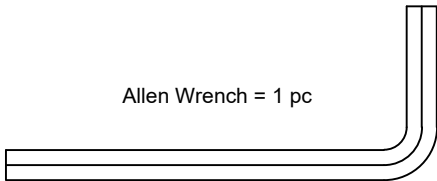

DETAIL F

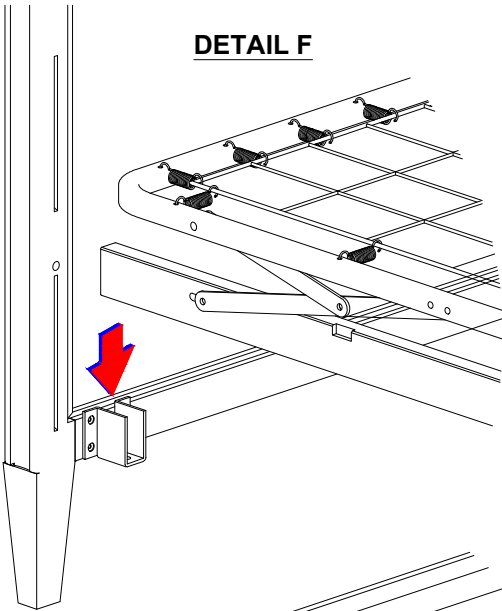

DETAIL G

