baby&child

RESTORATION HARDWARE

BELLINA QUEEN BED

WARNING: ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

PART LIST

- A HEADBOARD
- B SIDE RAILS
- C FOOT BOARD
- D SET OF BED SLATS
- E SUPPORT SLAT
- F LEG



IMPORTANT

We recommend assembly by two or more people.

HARDWARE LIST

NO.	DESCRIPTION		QTY.
1		THREADED ROD	8 PCS
2	0	CURVED WASHER	8 PCS
3	¢	LOCK WASHER	8 PCS
4		HEX NUT	8 PCS
5	J.	WRENCH	1 PC

Customer Service - If you are missing parts or have any question about this product please contact us at 1-800-762-1751


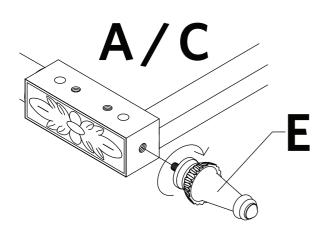


FIGURE 02

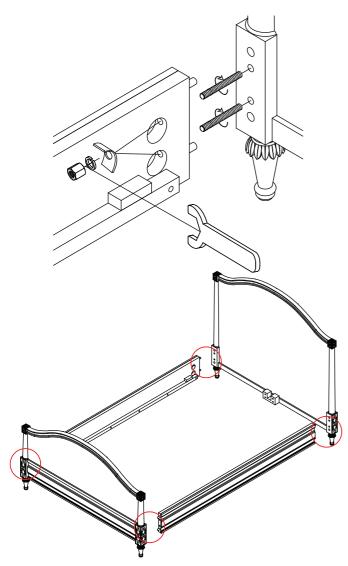

ASSEMBLY INSTRUCTIONS:

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

The bed is composed of several components: The headboard, side rails, foot board, bed slats, support slat and leg. Determine the intended location and ensure there is enough space to work with and fully read these instructions before starting assembly.

STEP #1:

Gently lay down the headboard (A) and footboard (C) on clean and non-abrasive surface.


Note: on the bottom of both headboard (A) and footboard (C) are holes with pre-installed nuts that correspond with the threaded rods pre-installed in the legs (F).

STEP #2

Align and insert the threaded rods of the legs (F) into the holes and turn clockwise to tighten as illustrated in FIGURE 01.

STEP #3:

Place the headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bed fast hardware should be facing the inside, toward the mattress. Secure the threaded rods (1) to the fixed nuts in the headboard (A) by simply turning manually. Raise the side rail (B) up and place the rods (1) to align with the bore holes on the end of the side rails (B). Put the side rails (B) up against the headboard (A) so the threaded rods go through the bore holes. Insert curved washers (2) and lock washers (3), place hex nuts (4) on threaded rods (1) and tighten hex nuts (4) with wrench (5), as illustrated in FIGURE 02.

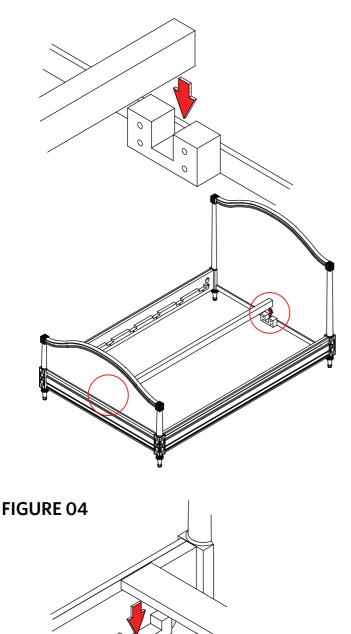

STEP #4:

Repeat the above procedure with the other side rail (B) to attach it to the headboard (A), and then repeat to connect side rails (B) to the footboard (C).

STEP #5:

On inside face of both headboard (A) and footboard (C) are pre-installed wooden brackets for the support slat (E). Set the support slat (E) on the wood bracket, as illustrated in FIGURE 03.

STEP #6:

On inside surface of both side rails (B) are cavities designed to hold the individual bed slats (E). Set individual bed slats (E) on both sides of the side rails (B) as illustrated in FIGURE 04.

